



Bezares Group

Vane pumps & motors

Technical catalogue

Single Vane Pumps.....	13
Thru drive single vane pumps.....	53
Double Vane Pumps.....	61
Triple Vane Pumps.....	83
Single and Double Vane Pumps 4 holes ISO.....	91
Single Pumps With Flow Control.....	97
Vane Motors.....	103
Shafts for V*/DT* Vane Pumps.....	113
Use, maintenance and repair guide.....	119



DATA SHEET

Introduction

General Information: BHP / BHS / BHQ / VS / VQ

General Information: DT6 / DT67 / DT7

7

Single Vane Pumps

BHP / BHS / BHQ / VS / VQ and DT6 / DT67 / DT7 single vane pumps

13

Thru Drive Single Vane Pumps

V4T / V6T / V7T thru drive single vane pumps

53

Double Vane Pumps

VS / VQ / VC and DT6 / DT67 / DT7 double vane pumps

61

Triple Vane Pumps

DT6 / DT67 / DT7 triple vane pumps

83

Single and Double Vane Pumps 4 holes ISO Flange

DT6 & DT67 SINGLE GC & DOUBLE GCC for direct mounting in Power Take Off

91

Single Vane Pumps with Flow Control

VC10F / VC20F single vane pumps with Flow Control

97

Vane Motors

MD4C & MF4D Motors

103

Shafts

For V* and DT* Vane Pumps

113

USE, MAINTENANCE AND REPAIR GUIDE

Description and Maintenance

119

Troubleshooting

127

Real Images of Common Failures

137

Pump start-up. Identification. Assembly & Disassembly. Change of PORTING COMBINATION
Change of cartridge rotation

145

Bezares SA introduce the most complete line of fixed displacement vane pumps, both for mobile and industrial applications. Hydraulically balanced, our pumps offer low noise level and high volumetric efficiency.

Flows: Single pumps: 2 cm³ up to 270 cm³, (0,6 up to 85 gallons).
Double pumps: 6+6 cm³ up to 270+190 cm³, (2+2 up to 85+61 gallons).
Triple pumps: 48+6+6 cm³ to 270+191+100 cm³, (14+2+2 gal. up to 85+61+30 gal.)

Maximum pressure: 210 bar, (3.000 p.s.i.), in VK, VS, VQ series
320 bar, (4.600 p.s.i.) in DT7 series.

ENGLISH

Bezares SA stellt das vollständigste Programm von Flügelzellenpumpen mit festem Schluckvolumen für industrielle und mobile Anwendungen zur Verfügung, hydraulisch ausgeglichen bieten sie niedrige Geräuschpegel, sowie einen sehr hohen volumetrischen Wirkungsgrad.

Schluckvolumen: Einzelpumpe von 2 cm³ bis 270 cm³, (von 0,6 bis 85 Gallonen).
Doppelpumpe von 6+6 cm³ bis 270+190 cm³, (von 2+2 bis 85+61 Gallonen).
Dreifachpumpe von 48+6+6 cm³ bis 270+191+100 cm³, (von 14+2+2 gal. bis 85+61+30gal.)

Höchstdruck: 210 bar, (3.000 p.s.i.), für VK, VS, VQ Typen
320 bar, (4.600 p.s.i.) für die DT7 Typen.

DEUTSCH

La Bezares SA presenta la piú completa serie di pompe a palette a portata fissa sia per applicazioni su macchinario mobile che industriale. Bilanciate idraulicamente, le nostre pompe garantiscono un basso livello sonoro ed un alto rendimento volumetrico.

Portata: Pompe singole da 2 cm³ a 270 cm³, (da 0,6 a 85 gallons).
Pompe doppie da 6+6 cm³ a 270+190 cm³, (da 2+2 a 85+61 gallons).
Pompe triple da 48+6+6 cm³ a 270+191+100 cm³, (da 14+2+2 gal. a 85+61+30 gal.)

Pressione massima: 210 bar, (3.000 p.s.i.), per la serie VK, VS, VQ
320 bar, (4.600 p.s.i.) per la serie DT7.

ITALIANO

Bezares SA présente la gamme la plus complète de pompes à palettes à cylindrée fixe, tant sur applications mobiles qu'industrielles. Hydrauliquement équilibrées, nos pompes sont silencieuses et offrent un rendement volumétrique élevé.

Débits: Pompes simples de 2 cm³/tr à 270 cm³/tr, (de 0,6 à 85 galons).
Pompes doubles de 6+6 cm³ à 270+190 cm³/tr, (de 2+2 à 85+61 galons).
Pompes triples de 48+6+6 cm³ à 270+191+100 cm³, (de 14+2+2 gal. à 85+61+30 gal.)

Pression maximale: 210 bar, (3.000 p.s.i.), pour les séries VK, VS, VQ - 320 bar, (4.600 p.s.i.) pour la série DT7.

FRANÇAIS

Bezares SA presenta la más completa serie de bombas de paletas de caudal fijo, tanto para aplicaciones móviles como industriales. Con un diseño equilibrado hidráulicamente, nuestras bombas ofrecen un bajo nivel sonoro y un alto rendimiento volumétrico.

Caudales: Bombas simples de 2 cm³ hasta 270 cm³, (de 0,6 hasta 85 galones).
Bombas dobles de 6+6 cm³ hasta 270+190 cm³, (de 2+2 hasta 85+61 galones).
Bombas triples de 48+6+6 cm³ hasta 270+191+100 cm³ (de 14+2+2 hasta 85+61+30gal.)

Presiones máximas: 210 bar, (3.000 p.s.i.), en las series VK, VS, VQ - 320 bar, (4.600 p.s.i.) en la serie DT7.

ESPAÑOL**DISTRIBUTED BY:**



Bezares Group

Vane Pumps & motors

**BHP / BHS / BHQ, VS / VQ & DT6 / DT67 / DT7
HYDRAULIC VANE PUMPS****INTRODUCTION**

TDZ vane pumps are manufactured in a wide range of displacements, from 2cc/r to 269cc/rev. for single pumps, 460cc/rev. for double pumps and 560cc/rev. for triple pumps.

All **TDZ** pumps have a low power to weight ratio, high efficiency, low noise levels, optional inlet and outlet port positions and ease of maintenance.

Ease of maintenance is achieved by the pump design, where the working components are contained within a cartridge which can quickly and easily be replaced without disconnecting the pump from the prime mover or moving it away from the pipe work. **TDZ** vane pumps are hydraulically balanced, reducing wear and eliminating bearing loads from within the pump.

The option to rotate the outlet port 90 or 45 degrees in relation to the inlet port provides flexibility and easy installation.

Depending on the application, there are three versions of the larger single, double and triple vane pumps: low noise industrial models VS and BHS, mobile models VQ and BHQ and multi-purpose models DT6(275bar), DT67 and DT7 (up to 320 bar).

Models VS, VQ and DT6/DT67/DT7 have UNC threads for the port flanges whilst models BHS, BHQ have metric threads. On single pumps the outlet port is at the shaft end for models VS, VQ, DT6, DT67, DT7 on models BHS BHQ the outlet port is at the cover end.

VS / VQ & BHP / BHS / BHQ HYDRAULIC VANE PUMPS

INTRODUCTION

PUMP DRIVE

Direct coaxial drive is recommended via flexible coupling. For indirect drives imposing a radial load on the shaft, consult TDZ or your nearest distributor for advice.

ROTATION

The direction of rotation can be reversed by turning the ring, rotor and vanes through 180 degrees. Direction of rotation is viewed from the shaft end.

STARTING

TDZ vane pumps are self priming, however, if possible, fill the pump with oil before starting or bleed the outlet port while the pump is running to remove any trapped air.

FILTRATION

For satisfactory service life, full flow filtration to provide fluid cleanliness conforming to ISO code 18/15 or better is recommended.

HYDRAULIC FLUIDS

Use antiwear industrial hydraulic oils with a viscosity of 25 - 49 cST. Automotive crankcase oils SAE10-SAE20 may also be used depending on the operating temperature.

The optimum operating temperature is 50°C with a maximum of 70°C. At higher temperatures service life is decreased with degradation of the wearing parts and seals.

For fire resistance fluids, the "F3" version with special seals must be used at reduced pressures and speeds as indicated below.

MAXIMUM SPEED RANGES

With antiwear fluids: 1800 to 2500 rpm (depending on model type. See performance chart).

With synthetic fluids, water glycols and water in oil emulsions, the maximum recommended speed is 1200 rpm.

Speeds shown are given as a guide only based on the correct fluid and correct suction characteristics as recommended by our Technical Services department.

Long or restricted suction lines can cause cavitation, therefore the maximum running speed must be reduced. Avoid using 90 degree elbows in suction lines, use swept bends where possible. Too viscous fluids will also cause cavitation.

When using lower displacement pumps within a given pump frame size, speeds slightly higher than those shown in the charts area acceptable.

For antiwear hydraulic fluids and water glycols, the inlet pressure must not exceed 0.2 bar vacuum, for synthetic fluids and water in oil emulsions, the inlet pressure must not exceed 0.1 bar vacuum.

MINIMUM SPEED: 600 rpm

This data is for V*20, V*25, V*35, V*45, BH*4, BH*6, BH*7, double and triple pumps. For other pumps see chart.

The intermittent pressures shown in the table can be maintained for 10% of the time, with a maximum duration of 6 seconds/minute.

VS / VQ & BHP / BHS / BHQ HYDRAULIC VANE PUMPS

INTRODUCTION

MAXIMUM CONSTANT PRESSURE

Anti-wear Hydraulic Oil: **from 175 to 210 Bar**

Synthetic Oil: **from 175 to 210 Bar**

Water-Glycol emulsions: **160 Bar**

Water-in-oil emulsions: **70 Bar**

Model	Type	SOUND LEVEL (dB @ 140 bar / 1500 rpm)
VS25 / BHS4	Single	62
VS35 / BHS6	Single	65
VS45 / BHS7	Single	71
VS43	Double	68
VS63 / VS64	Double	69
VS73 / VS74	Double	71
VS 76	Double	72

Sound levels measured with hydraulic oil at 140 Bar, 1500 rpm and a vacuum at pump inlet of 0,17 Bar.

ADMISSIBLE TORQUES FOR THE SHAFTS

All the shafts available for our single pumps and motors are sufficient for working at the maximum pressure specified for each model.

However, in the case of double pumps and thru drive pumps, if both cartridges/pumps work simultaneously under pressure, the sum of the torques absorbed for each of them may exceed the resistance of the shaft.

In practice, the absorbed torque for each cartridge/pump may be calculated with the formula:

$$T = \frac{P \times V}{59} \quad \text{Where: } T = \text{Torque in Nm.}$$

$P = \text{Working pressure in Bars.}$

$V = \text{Cubage in cm}^3/\text{rev. or flow in lts/min at 1.000 r.p.m.}$

In order to choose the most appropriate type of shaft, calculate said torque sum under the most unfavourable working conditions and compare them with the torque values admitted for each shaft as indicated in table1.

Analogically, in the thru drive pumps, the absorbed torque for the second pump will be calculated under the most unfavourable conditions, and it must be checked that it does not exceed the torque values admissible as indicated in table 2 for each connection.

Table 1			Table 2	
Pump Type	Shaft n°	Max. Torque Nm	Rear Flange (Conection)	Max. Torque Nm
V*43	1	313	SAE A	130
V*4T	11	313	SAE B	315
	86	392	SAE C	440 (V*6TC) 700 (V*7TC)
V*63	1	392		
V*64	11	568		
V*6T	86	588		
V*73	1	588		
V*74	11	803		
V*76	86	803		
V*7T				

DT6 / DT67 / DT7 HYDRAULIC VANE PUMPS

INTRODUCTION

DT series vane pumps are fixed displacement and high efficiency pumps. Designed under SAE J744c 2 bolt standards, (excluding DT7DSW & DT6EDC pumps), the complete range includes single, double and triple units with wide possibilities of flow combinations, porting configurations, possibilities of use of fluids other than petroleum-based oil and a vast number of different shafts.

The **DT series** is a hydraulically-balanced design. Quality and composition of materials have been checked and tested over millions of cycles on our experimental test benches. This fact, together with a rigid bearing and a high resistance to particle contamination thanks to the double lip vane, makes DT series pumps long-life hydraulic units.

Model		DT7		DT6		
Size		B	D	C	D	E
Flow Range (Gpm)		from 2 to 15	from 14 to 42	from 3 to 31	from 14 to 61	from 42 to 85
Max Pressure (bar)		320	300	275	240	240
Speed	Min.	600	600	500	500	500
	Max.	3600	3000	2800	2500	2200

Higher flows sizes also involves speed limitations, as indicated in the technical chart of this catalogue. Fluids other than Antiwear Petroleum Base fluids will also involve a speed limit, depending on the choice, (consult TDZ or your nearest distributor).

PRESSURE RATINGS

Exceptions are indicated in this catalogue when fluids other than Antiwear Petroleum Base are used or in the case of use of high flows.

Both continuous and intermittent pressures are indicated in this catalogue. The maximum period of intermittent pressure may be considered acceptable when the average pressure time is less than or equal to the continuous recommended pressure, for that particular model during a complete cycle of work.

MINIMUM INLET PRESSURE

Minimum allowable inlet pressure is 0.95 bar for 1,800 rpm or less, 1.10 bar between 1,800 and 2,300 rpm and 1.30 bar when the speed is more than 2,300 rpm.

Multiply the above-mentioned values by 1.40 when fluids other than Antiwear Petroleum base fluids are used. The difference between inlet pressure and atmospheric pressure should not exceed 0.2 bar to prevent aeration. Inlet Pressure is considered with petroleum base fluids at viscosities of between 10 and 65 cSt.

PORTS POSITIONS AND CHANGE OF ROTATION

Cartridge kit design allows easy service when replacement or conversion is needed, reducing the operation to just a few minutes. Cartridge kit design also offer possibilities of quick change of rotation by changing the position of cam ring.

Four different combinations of porting positions are possible in single pumps. In double pumps 32 combinations are possible and 128 for triple pumps.

The high pressure capability reduces installation costs and provides long life at reduced pressure. The high mechanical and volumetric efficiency reduces heat generation and energy consumption. Lower noise levels than most of hydraulic pump designs suppose an advantage and safety for machine operators.

TDZ Hydraulics DT series vane pumps are unidirectional but they have been designed for an easy change of rotation. Instructions for change of rotation are included in this catalogue (Instructions for Use and Repair).

DT6 / DT67 / DT7 HYDRAULIC VANE PUMPS

INTRODUCTION

RECOMMENDED FLUIDS

Operating characteristics showed in this catalogue have been calculated considering the use of Antiwear petroleum base fluids. Non Antiwear Petroleum Base Fluids, Synthetic Fluids, Water In Oil Emulsions or Water Glycols are also acceptable. In these cases, speed and pressure limits will be supplied directly by TDZ Hydraulics or your nearest distributor.

VISCOSITY

Optimum viscosity for maximum life is between 30 and 40cSt.

Maximum viscosity is 2000 cSt at very low speed and pressure and 110 cSt at full speed and pressure.

Minimum viscosity is 10cSt,(18 cSt for fluids other than Antiwear Petroleum Base fluids).

FLUID CONTAMINATION AND FILTRATION

Fluid must be clean during the entire working life of the pump in order to maintain a contamination level of ISO 18/14 or even better, if possible.

Filters with 25 microns are adequate but will not guarantee total cleanliness levels. Suction strainers should be of an adequate size to provide the recommended inlet pressure. For cold starts or fire-resistant fluids, oversize strainers must be used or omitted.

Higher levels of water than 0.10% in mineral oils or 0.05% in synthetic or biodegradable fluids are not acceptable. In these cases, water should be drained off the circuit.

FLUID TEMPERATURES

Fluid viscosity should be selected depending on the normal operating temperature of the unit. Cold starts pump should operate at low pressure and, if possible, low speeds until the fluid warms up to a convenient viscosity for full power application.

SOUND LEVEL

Model	Type	SOUND LEVEL (dB @ 175 bar / 1500 rpm)
DT6C	Single	68
DT6D	Single	73
DT6E	Single	78
DT7B	Single	58
DT7D	Single	67
DT6/7CC	Double	68
DT6/7DC	Double	73
DT6/7EC	Double	78
DT6/7ED	Double	78



Bezares Group

SINGLE VANE PUMPS


BHP / BHS / BHQ, VS / VQ,
DT6, DT67 and DT7
single vane pumps

ORDERING CODE


	F3	BHQ	4	67	D	1	A	00	
F3 - special seals for fire-resistant fluids. Omit if not required									SPECIAL CHARACTERISTICS Omit if not required 02: BSP 03: UNF 04: NPT
PUMP TYPE BHP = 10 vane pump, industrial and mobile use, BSP, NPT & SAE threads. Only BHP1 and BHP2									PORTING COMBINATION A: Outlet in line with inlet. B: 90° Clockwise from inlet. C: 180° from inlet. D: 90° counterclockwise from inlet. Viewed from shaft end of pump
BHS = 12 vane pump, industrial use, metric threads. Very quiet									
BHQ = 10 vane pump and bronze plates, metric threads. Mobile use									
PUMP MODEL 1 and 2 BHP types;									SHAFT TYPE See shaft options on pump dimension pages.
4 , 6 and 7 BHS and BHQ types.									
FLOW BHP ,BHS and BHQ Litres per minute @1000 rpm and 7 Bar									ROTATION D = Clockwise rotation. Y = Counterclockwise Viewed from shaft end of pump

PORTING COMBINATION


A

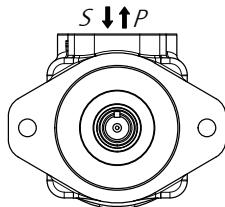


B

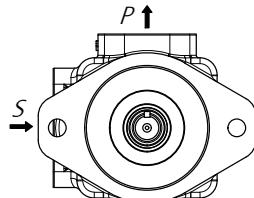

C

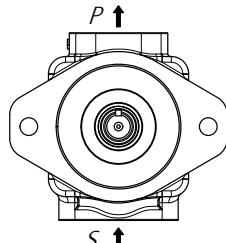

D

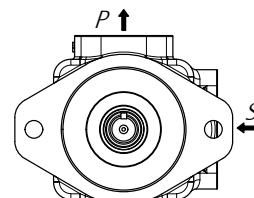

CHARACTERISTICS

TYPE	FLOW			SPEED(rpm)		PRESSURE (bar)		NOMINAL POWER	CONNECTION		WEIGHT				
TDZ	L @ 1000RPM	GAL. @ 1200RPM	REDUC-TION (1)	MIN	MAX	CONT	INTERMIT	(2)	INLET	OUTLET	KG				
BHP1	2	0,6	0,18	600	2500	150	175	0,5	(3)	(3)	1				
	3	0,9						0,7							
	4,5	1,2						1							
BHP2	5,5	1,7	0,36					1,4	(3)	(3)	3,6				
	6,5	2						1,6							
	7	2,2	0,7					1,8							
	8	2,5	1,1					2							
	10	3,2						2,5							
BHQ4 BHS4	12	3,8						3							
	15	4,7	5,8	600	2500 1800 (BHS)	175	210	3,7	Ø38	Ø26	14,5				
	26	8						6,9							
	40	12						10,4							
	45	14						11,6							
	55	17						13,8							
	60	19						14,6							
BHQ6 BHS6	67	21	6					16,8							
	80	24	6,2	600	1500	125	150	20,3	Ø60	Ø32	26,3				
	88*	27*	6,5					22,4							
	66	21	8,6					16,8							
	81	25	9					20,3							
	97	30	10					24,3							
	112	35	11,4					27,4							
BHQ7 BHS7	121	38	13,1	600	1500	125	150	29,3	Ø75	Ø38	38,3				
	142	45						33,3							
	138	42	15					32,3							
	148	47	15,7					36,3							
	162	50	14,3					37,9							
	180	57	17,9					43,2							
	193	60	18,6					46,1							
	214	67	22					51,2							
	240	75	26					57,4							

*27 gallons (88 lts.) cartridge not mounted in BHQ4 vane pump model.

(1) Delivery flow reduction in Ltrs./min. at 100 Bar. 22 cST of oil viscosity at operating temperature. To calculate the approximate delivery flow at a given pressure and speed, use the following formula with flow reduction and theoretical flow values shown in the chart. Flow reduction values are independent of shaft speed.

$$\text{Approx. output flow (Ltrs./min.)} = \text{Theoretical flow} \times \frac{\text{R.P.M}}{1000} - \text{Reduction} \times \frac{\text{Pressure (Bar)}}{1000}$$

(2) Nominal Power in H.P. at 100 Bar and 1000 RPM (to convert into Kw multiply by 0.735).

To obtain the real input power at different pressure and revolutions, use the formula as follows:

$$\text{Real input power} = \text{Input power} \times \frac{\text{R.P.M}}{1000} \times \frac{\text{Pressure (Bar)}}{1000}$$



(3) See options on dimension pages.




BHP-1 DIMENSIONS

FLOW						SPEED(rpm)		PRESSURE (bar)		CONNECTION		WEIGHT
Lts/min.at 1000 rpm	2	3	4,5	5,5	6,5	Min.	Máx.*	Contin.*	Intermit. *	Inlet	Outlet	(Kgs.)
Gal/min.at 1200 rpm	0,6	0,9	1,2	1,7	2	600	2500	175	210	3/8 BSP	1/2 BSP	3,6



DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

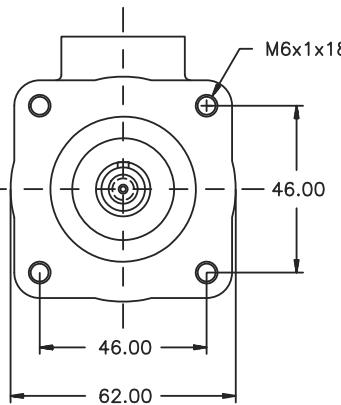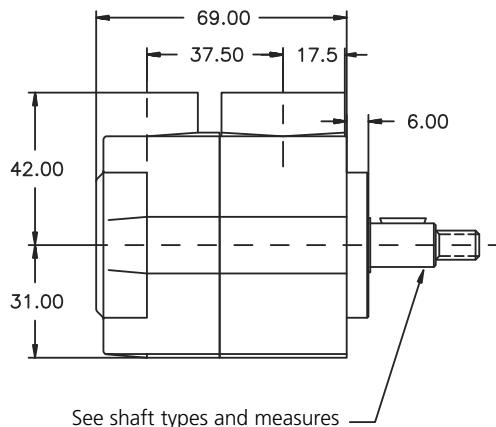

N°1 Shaft


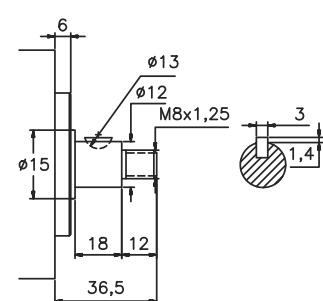


N°2 Shaft

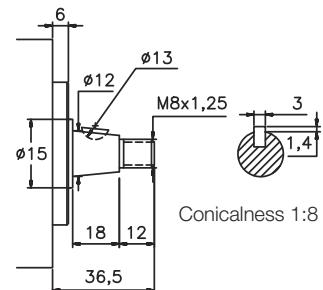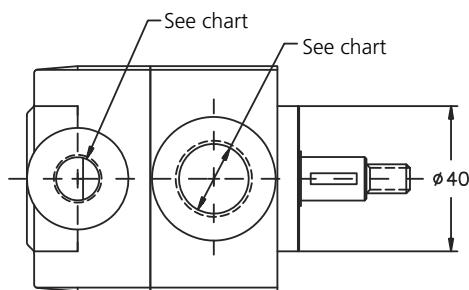




NUM.	INLET	OUTLET
01	1/2" BSP	1/4" BSP
02	3/8" BSP	1/4" BSP

BHP1 PUMP AND FRAME SET TO CONNECT TO ELECTRIC MOTOR

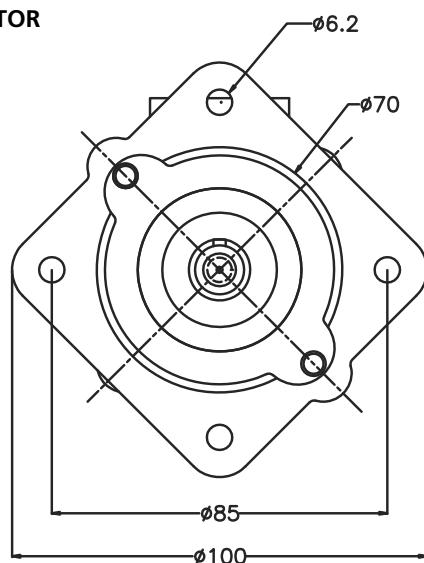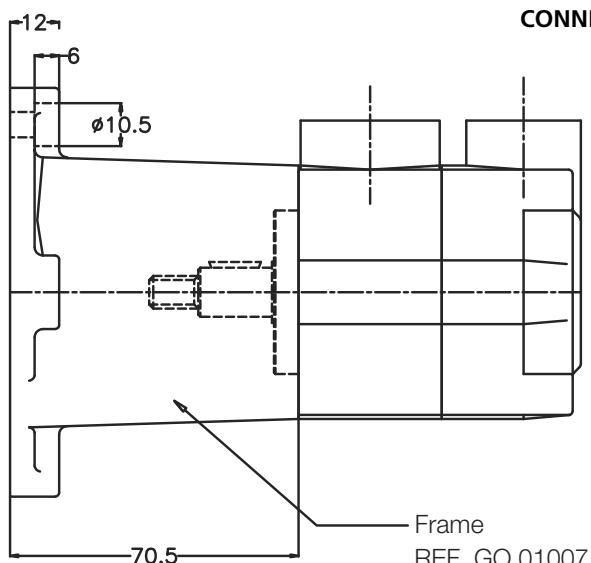

BHP-1

FLOW AND INPUT POWER DIAGRAMS

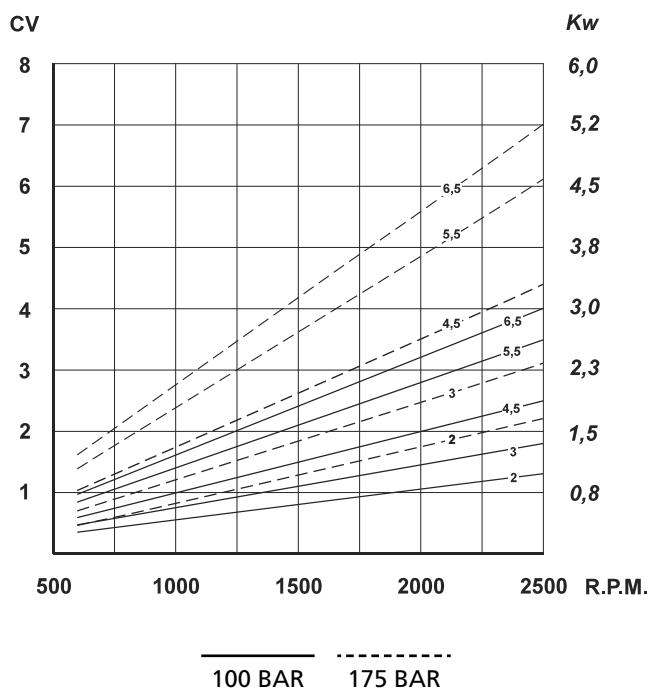
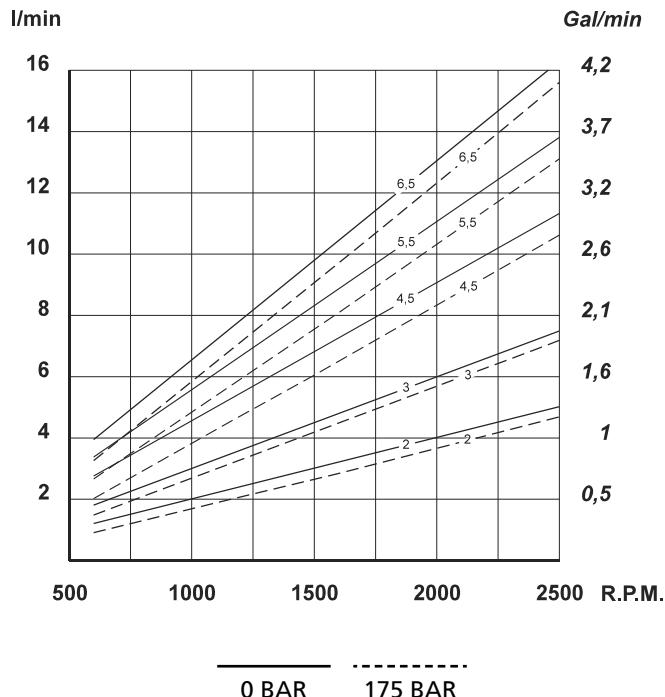
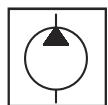


BHP-2 DIMENSIONS

FLOW					SPEED(rpm)		PRESSURE (bar)		CONNECTION		WEIGHT	
Lts/min.at 1000 rpm	7	8	10	12	15	Min.	Máx.*	Contin.*	Intermit. *	Inlet	Outlet	(Kgs.)
Gal/min.at 1200 rpm	2,2	2,5	3,2	3,8	4,7	600	2500	175	210	Ø38	Ø26	1




* For further details see general chart

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

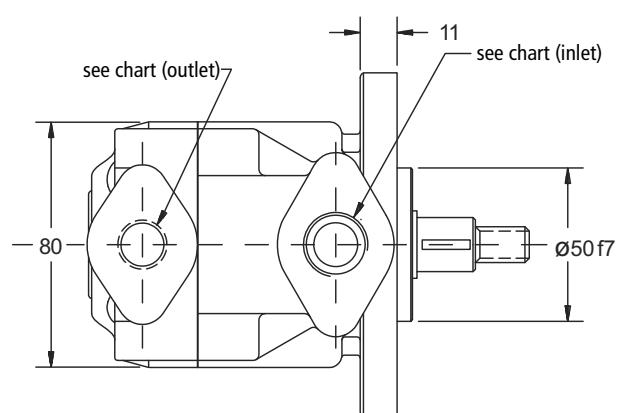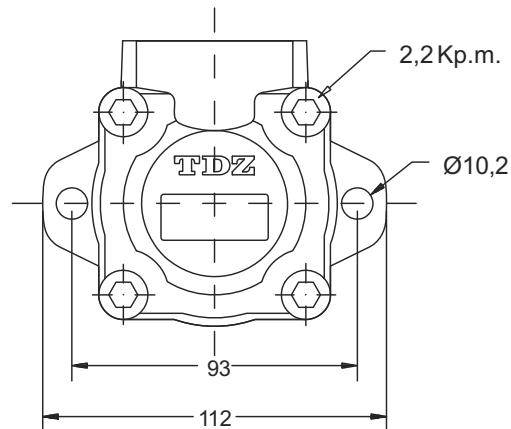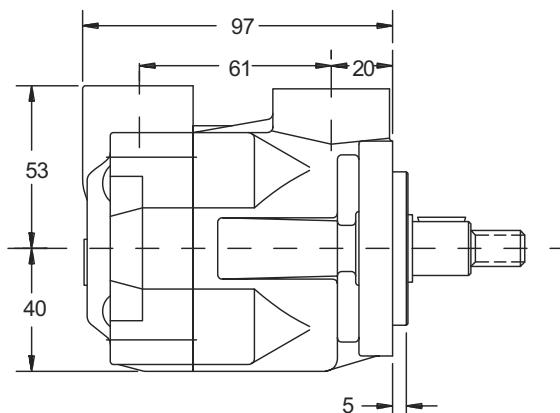



THREAD OPTIONS

NUM.	INLET	OUTLET
02	¾" BSP	½" BSP

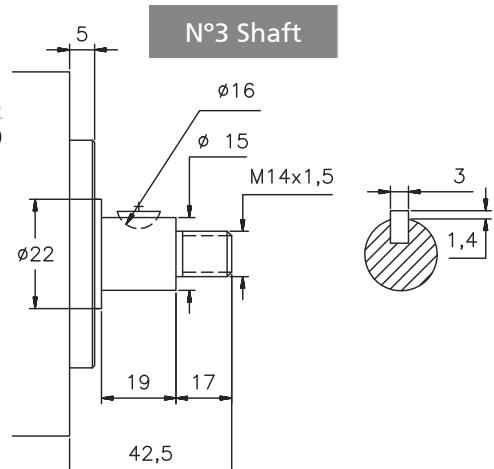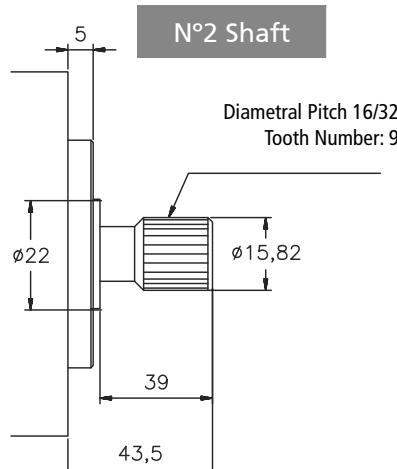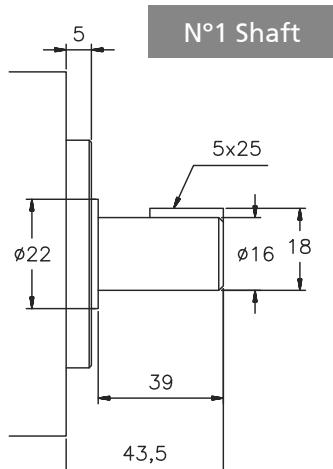

BHP-2

FLOW AND INPUT POWER DIAGRAMS

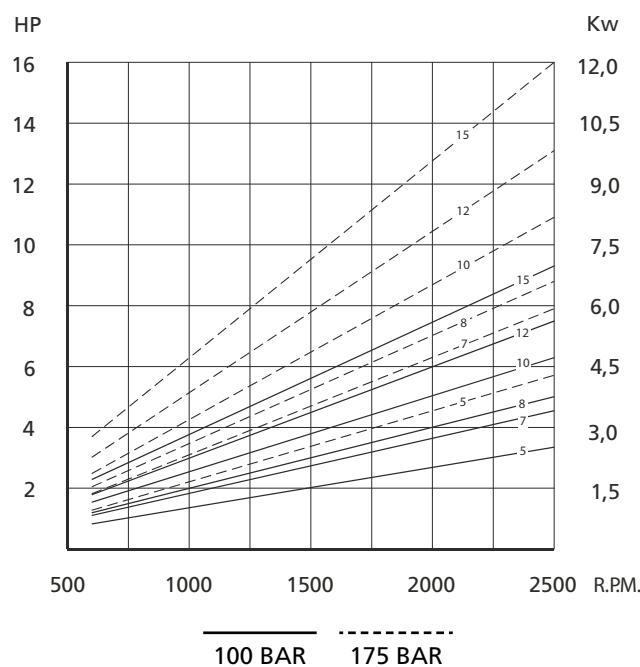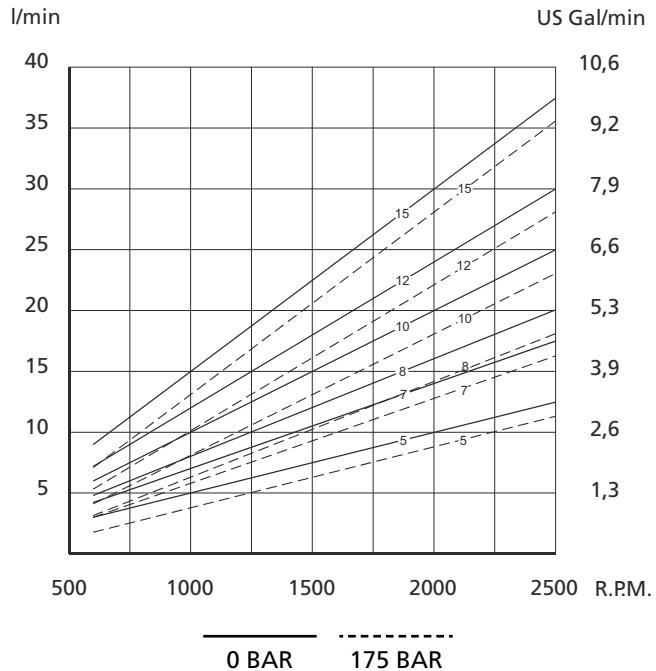


BHS-4 & BHQ-4 DIMENSIONS


	FLOW							SPEED(rpm)		PRESSURE (bar)		CONNECTION		WEIGHT
Lts/min.at 1000 rpm	39	44	54	60	66	80*	85*	Mín.	Máx.*	Contin.*	Intermit. *	Inlet	Outlet	(Kgs.)
Gal/min.at 1200 rpm	12	14	17	19	21	24*	27*	600	2500	175	210	Ø38	Ø26	14,5

* For further details see general chart


DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

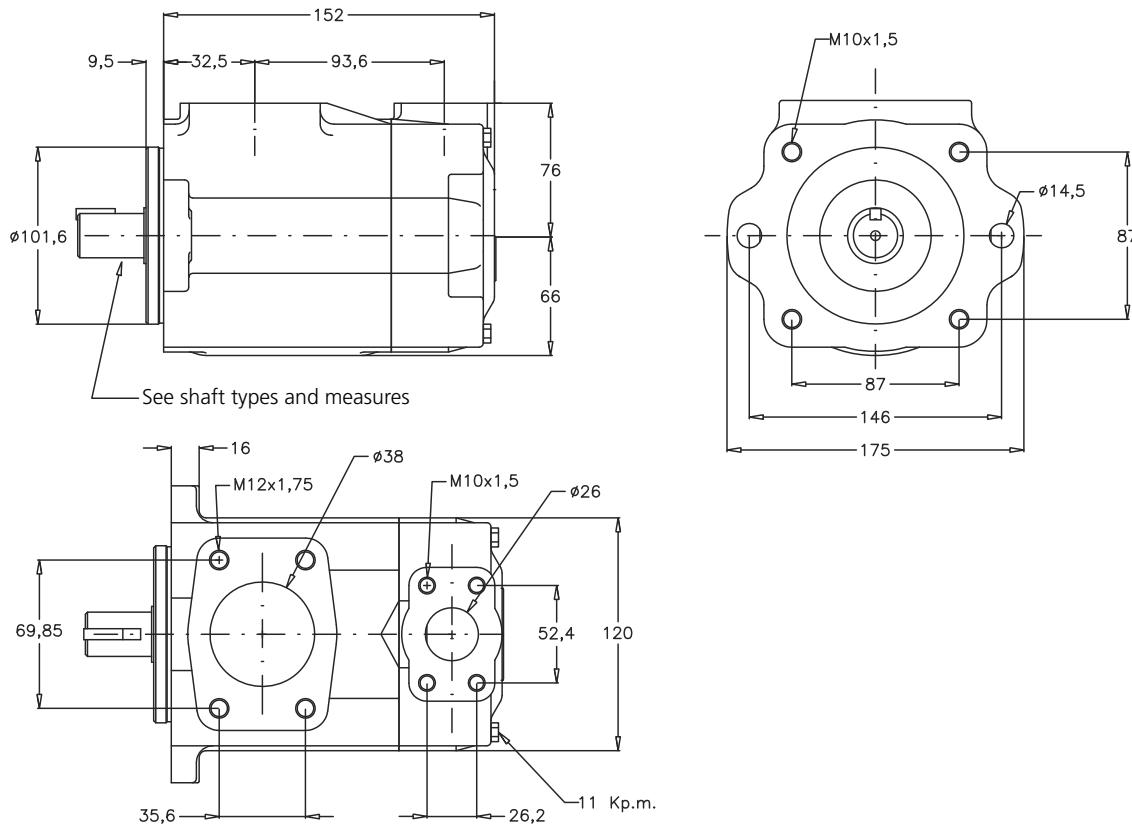

Nº1 Shaft



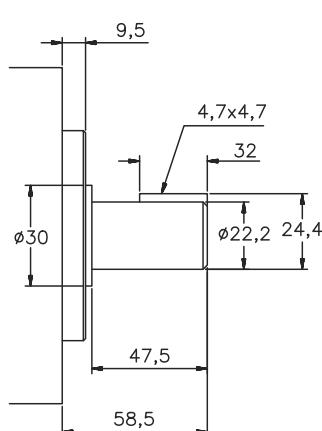


Nº2 Shaft

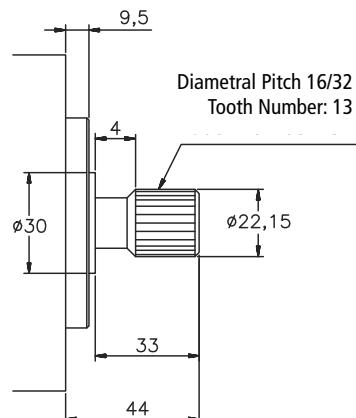

BHS-4 & BHQ-4

FLOW AND INPUT POWER DIAGRAMS

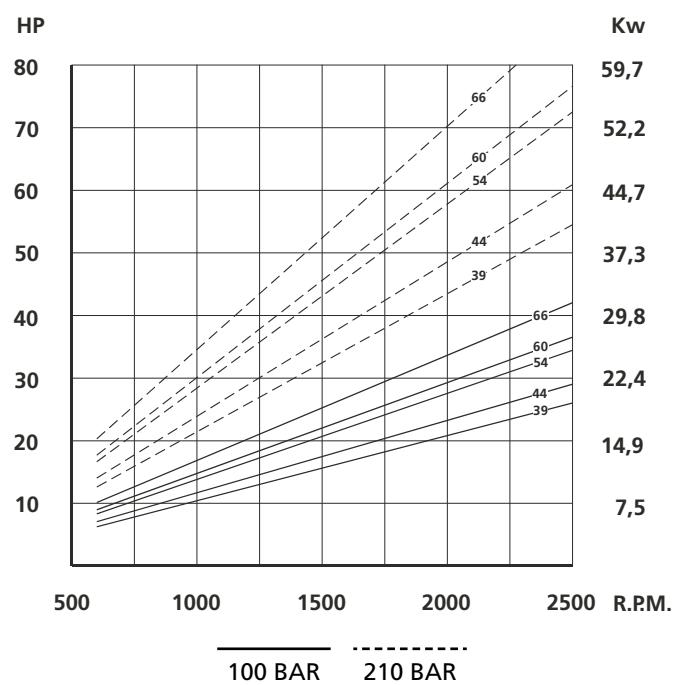
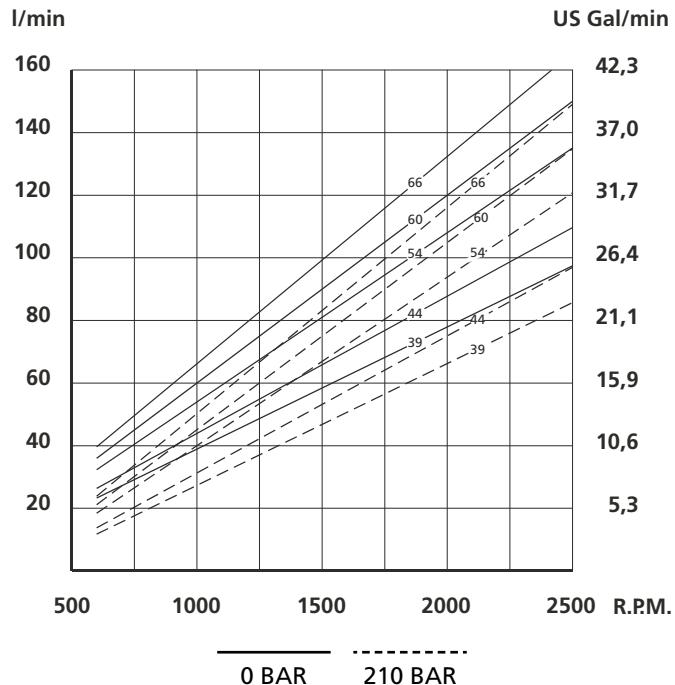
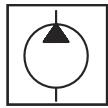


BHS-6 & BHQ-6 DIMENSIONS


	FLOW						SPEED(rpm)		PRESSURE (bar)		CONNECTION		WEIGHT
Lts/min.at 1000 rpm	66	81	97	112	121	142*	Mín.	Máx.*	Contin.*	Intermit. *	Inlet	Outlet	(Kgs.)
Gal/min.at 1200 rpm	21	25	30	35	38	45*	600	2400	175	210	Ø60	Ø32	26,3

* For further details see general chart


DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

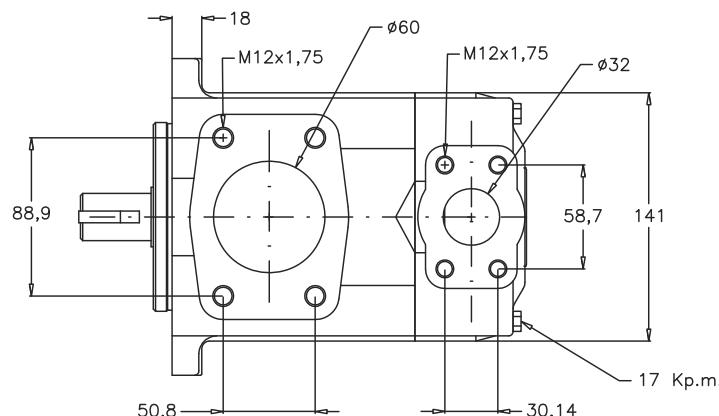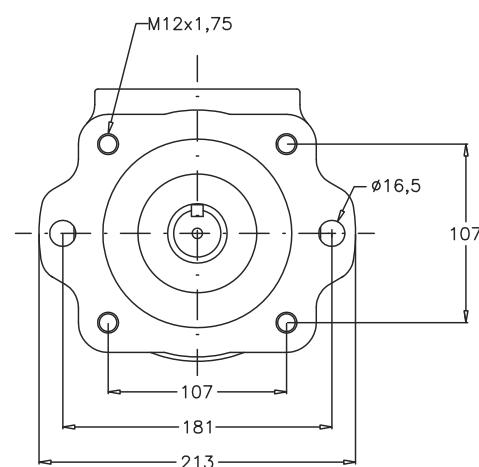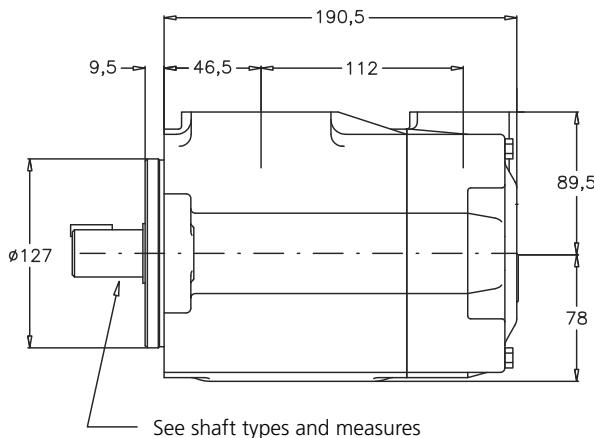

Nº1 Shaft



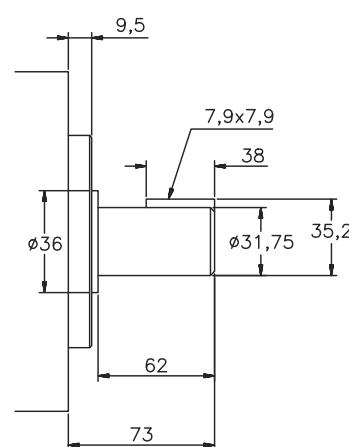


Nº2 Shaft

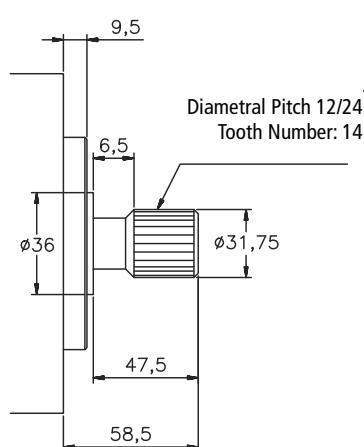

BHS-6 & BHQ-6

FLOW AND INPUT POWER DIAGRAMS

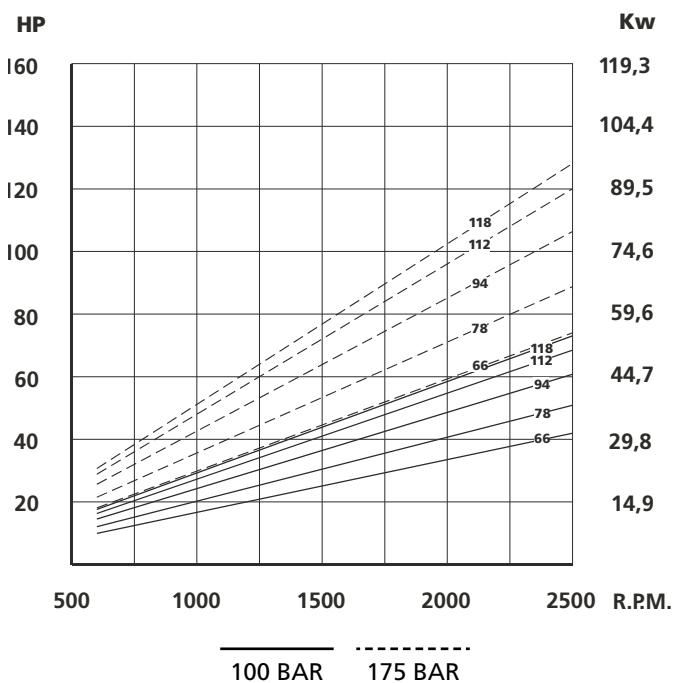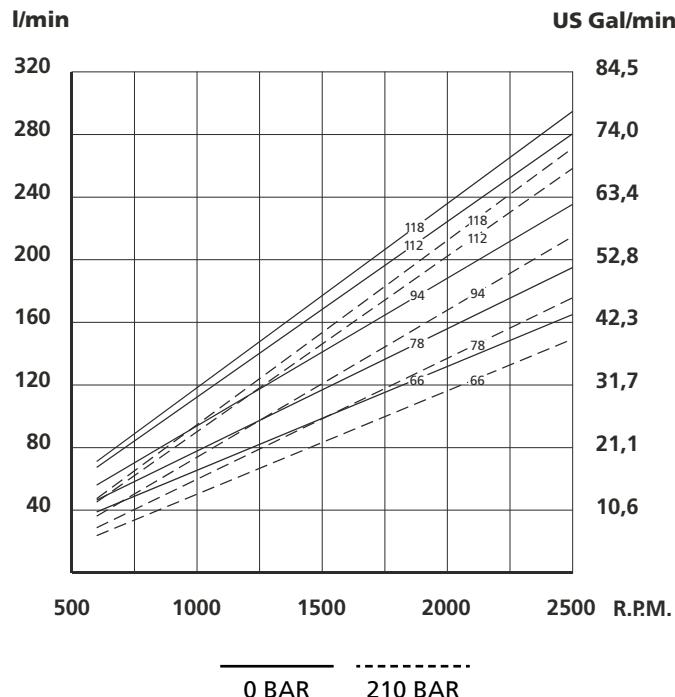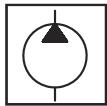


BHS-7 & BHQ-7 DIMENSIONS



	FLOW							SPEED(rpm)		PRESSURE (bar)		CONNECTION		WEIGHT
Lts/min.at 1000 rpm	138	148	162	180	193	214	240	Mín.	Máx.*	Contin.*	Intermit. *	Inlet	Outlet	(Kgs.)
Gal/min.at 1200 rpm	42	47	50	57	60	67	75	600	2200	155	175	Ø75	Ø38	38,3

* For further details see general chart


DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

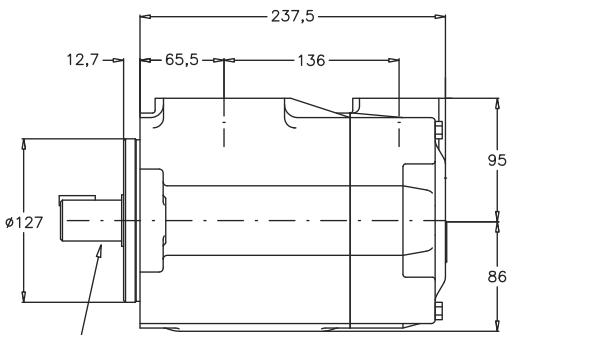


See shaft types and measures

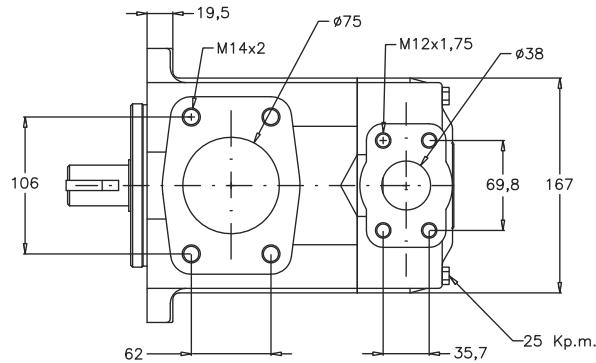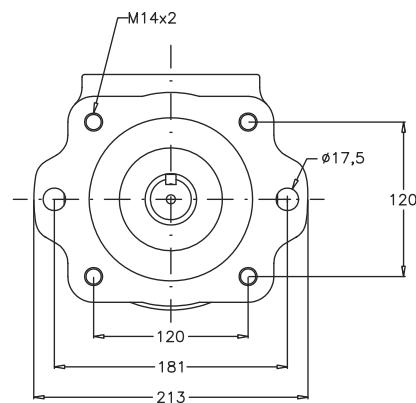

Nº1 Shaft


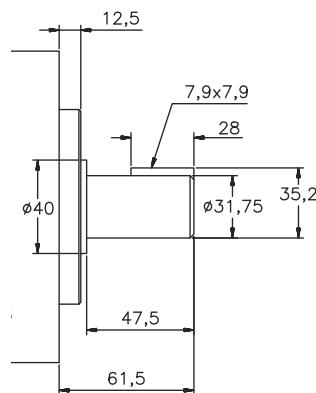


Nº2 Shaft

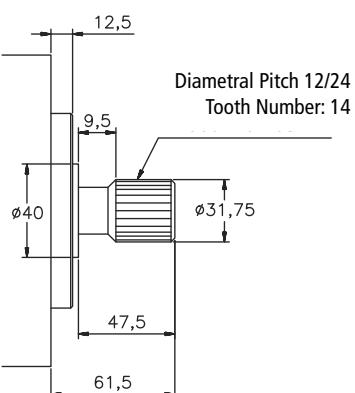

BHS-7 & BHQ-7

FLOW AND INPUT POWER DIAGRAMS

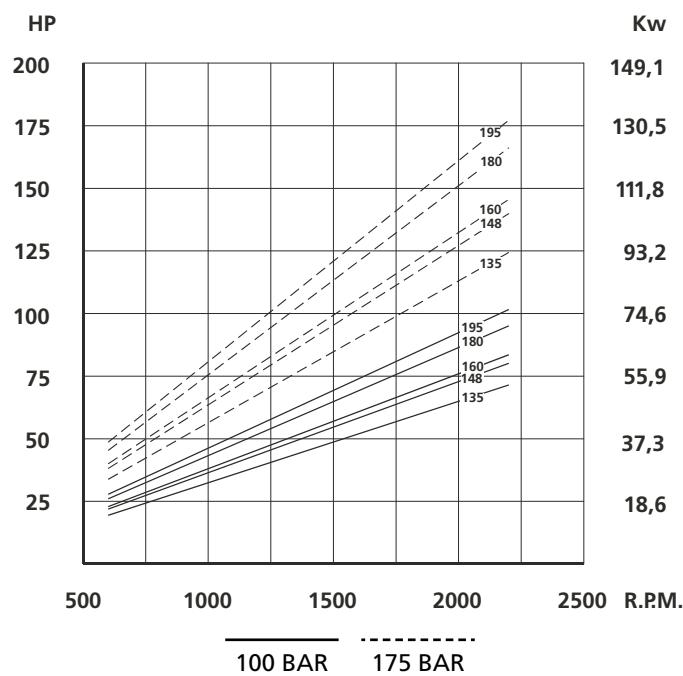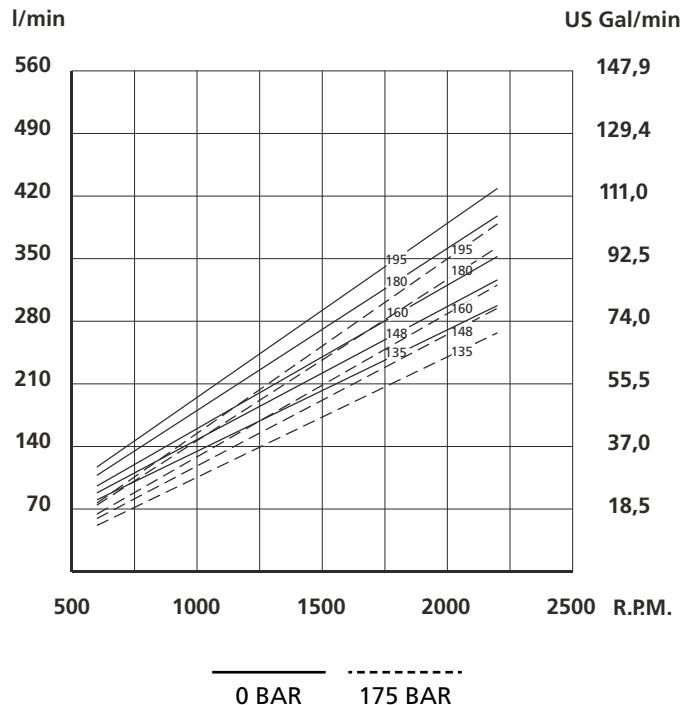


ORDERING CODE


F3	VS	25	21	D	1	A	00	SPECIAL CHARACTERISTICS Omit if not required 02: BSP 03: UNF 04: NPT
F3 - SPECIAL SEALS FOR FIRE-RESISTANT FLUIDS. Omit if not required								
PUMP TYPE VC = 12 vane pump VC10, VC20 Mobile and industrial use								
VK = 10 vane pump VK20 Industrial use, unc threads.								
VS = 12 vane pump VS25, VS35, VS45 Industrial use (very quiet), UNC threads								
VQ = 10 vane pump Bronze plates VQ20, VQ25, VQ35, VQ45, VS25, VS35, VS45 Mobile use, UNC threads								
PUMP MODEL VC10, VC20; VK20, VQ20; VS25, VQ25; VS35, VQ35; VS45, VQ45								
FLOW VC, VS and VQ Gallons per minute @1200 rpm and 7 bar								
								PORTING COMBINATION A: Outlet in line with inlet. B: 90° clockwise from inlet. C: 180° from inlet. D: 90° counterclockwise from inlet. Viewed from shaft end of pump
								SHAFT TYPE See shaft options on pump dimension pages.
								ROTATION D = Clockwise rotation. Y = Counterclockwise Viewed from shaft end of pump

PORTING COMBINATION


A

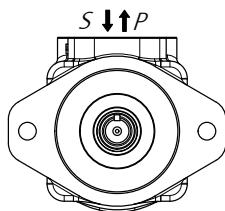


B

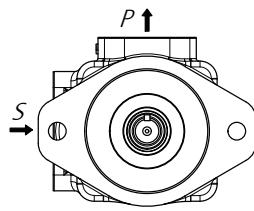

C

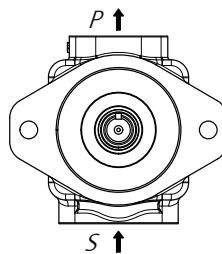

D

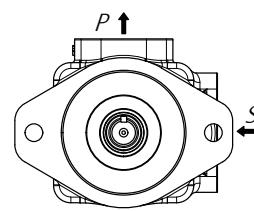

CHARACTERISTICS

TYPE	FLOW			SPEED(rpm)		PRESSURE (bar)		NOMINAL POWER	CONNECTION		WEIGHT
VICKERS	L @ 1000RPM	GAL. @ 1200RPM	REDUC-TION (1)	MIN	MAX	CONT	INTERMIT	(2)	INLET	OUTLET	KG
VC10	3	1	0,8	600	4800	155	180	0,7	(3)	(3)	4,5
	6	2	0,9		4500			1,4			
	9	3	1,2		4000			2,1			
	13	4	1,6		3400			2,7			
	16	5	1,7		3400			3,2			
	19	6	1,8		3000			3,7			
	22	7	1,9		2800		140	4,2			
VC20	19	6	2,8	600	3400	155	180	3,9	(3)	(3)	7,3
	22	7	4,2		3000			4,4			
	26	8	4,5		2800			5,1			
	29	9	4,8		2800			5,6			
	36	11	4,8		2500			6,5			
	39	12	5,4		2400			7,5			
	42	13	6,0		2400		140	8,1			
VQ20 VK20	8	2	0,9	600	2600	175	210	1,9	$\emptyset 1\frac{1}{2}''$	$\emptyset \frac{3}{4}''$	12
	18	5	2,1					4			
	27	8	2,8					6,6			
	29	9	3,5					6,9			
	36	11	4,3					7,3			
	39	12	4,3					7,4			
	46	14	5,3					7,6			
VQ25 VS25	32	10	5,1	600	2500 1800 (VS)	175	210	8,6	$\emptyset 1\frac{1}{2}''$	$\emptyset 1''$	15
	40	12	5,7					10,4			
	45	14	5,7					11,6			
	55	17	5,8					13,8			
	60	19	5,8					14,6			
	67	21	6					16,8			
	80	25	6,2				150	20,3			
VQ35 VS35	66	21	8,6	600	2400 1800 (VS)	175	210	16,8	$\emptyset 2''$	$\emptyset 1\frac{1}{4}''$	23
	81	25	9					20,3			
	97	30	10					24,3			
	112	35	11,4					27,4			
	121	38	11,4					29,3			
	142	45	13,1				150	33,3			
	138	42	15				32,3				
VQ45 VS45	148	45	15,7	600	2200 1800 (VS)	155	175	36,3	$\emptyset 3''$	$\emptyset 1\frac{1}{2}''$	35,5
	162	50	14,3					37,9			
	180	57	17,9					43,2			
	193	60	18,6					46,1			
	214	67	22					51,2			
	240	75	26					57,4			

(1) Delivery flow reduction in Ltrs./min. at 100 Bar. 22 cST of oil viscosity at operating temperature. To calculate the approximate delivery flow at a given pressure and speed, use the following formula with flow reduction and theoretical flow values shown in the chart. Flow reduction values are independent of shaft speed.

$$\text{Approx. output flow (Ltrs./min.)} = \text{Theoretical flow} \times \frac{\text{R.P.M}}{1000} - \text{Reduction} \times \frac{\text{Pressure (Bar)}}{1000}$$

(2) Nominal Power in H.P. at 100 Bar and 1000 RPM (to convert into Kw multiply by 0.735). To obtain the real input power at different pressure and revolutions, use the formula as follows:





$$\text{Real input power} = \text{Input power} \times \frac{\text{R.P.M}}{1000} \times \frac{\text{Pressure (Bar)}}{1000}$$

VC-10 DIMENSIONS

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

FLOW			SPEED(rpm)		PRESSURE (bar)		NOMINAL POWER		CONNECTION		WEIGHT
L @ 1000RPM	GAL. @ 1200RPM	REDUC-TION (1)	MIN	MAX*	CONT*	INTERMIT*	(2)	INLET	OUTLET	KG	
3	1	0,8	600	4800	155	180	0,7	1" NPT	½" NPT	4,5	
6	2	0,9		4500			1,4				
9	3	1,2		4000			2,1				
13	4	1,6		3400	155		2,7	1" BSP	½" BSP		
16	5	1,7		3200	180		3,2	1 5/16" - 12 UNF	3/4" - 16 UNF		
19	6	1,8		3000			3,7				
22	7	1,9		2800			4,2				

* See page 27

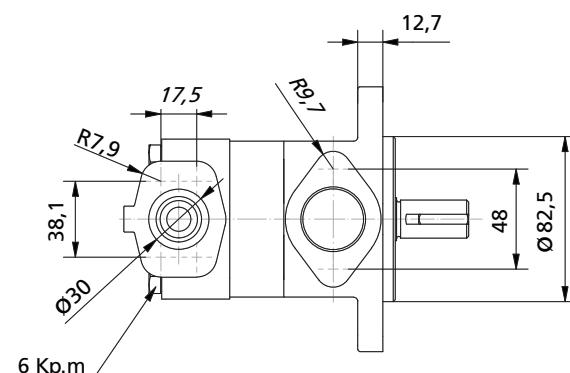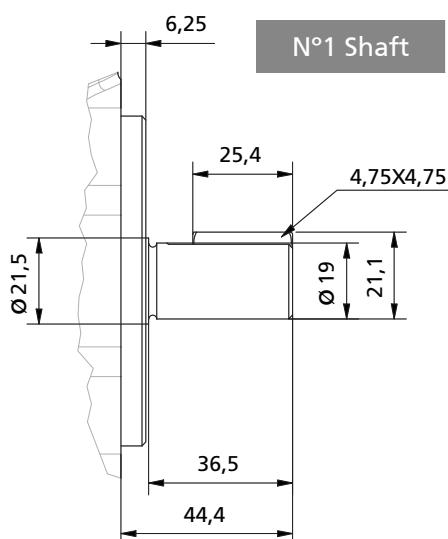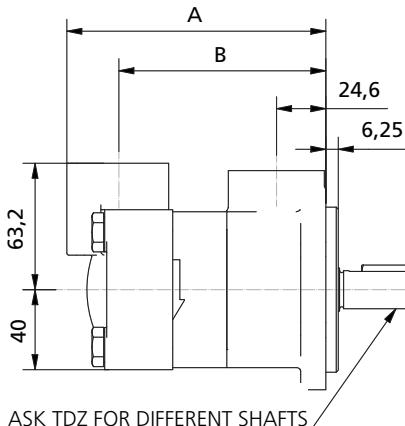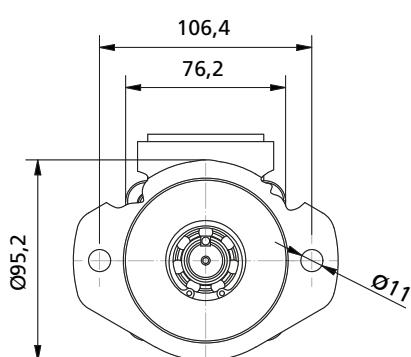

GAL.	DIMENSIONS	
	A	B
1, 2, 3	115,8	91,9
4, 5	121,9	98,3
6, 7	127	103,4

THREAD OPTIONS		
NUM.	INLET	OUTLET
2	1" BSP	½" BSP
3	1 5/16" 12 UNF	3/4" 16 UNF
4	1" NPT	½" NPT




VC-10

FLOW AND INPUT POWER DIAGRAMS





Max. pressure (180 bar)

Pressure (7 bar)

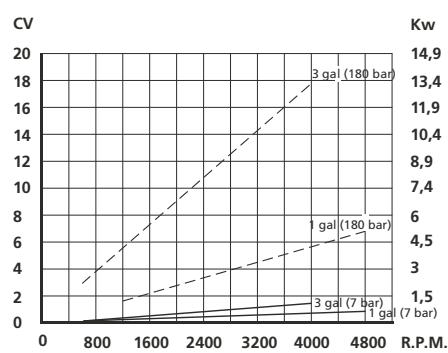



l/min.

Gal./min.

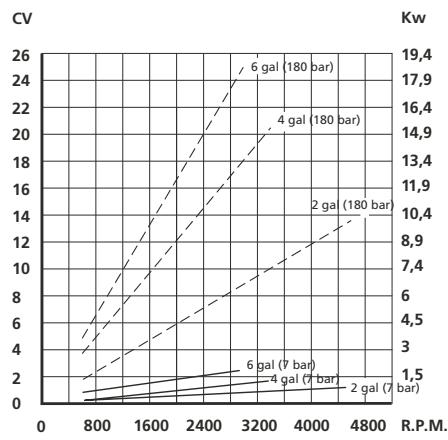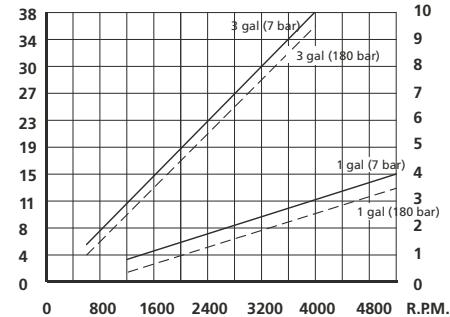


l/min.

Gal./min.

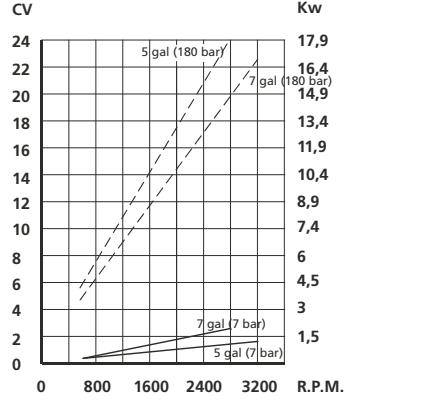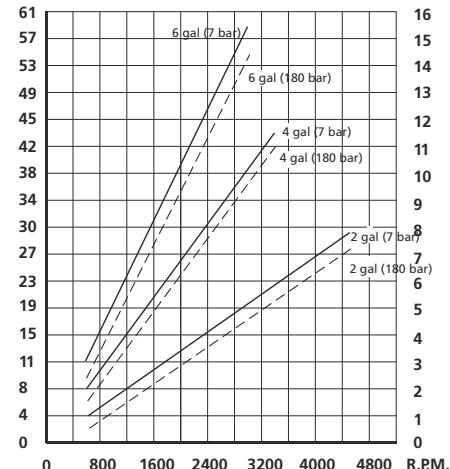

l/min.

Gal./min.




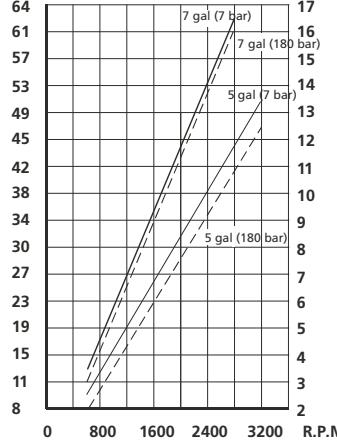


VC-20 DIMENSIONS

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

FLOW			SPEED(rpm)		PRESSURE (bar)		NOMINAL POWER		CONNECTION		WEIGHT
L @ 1000RPM	GAL. @ 1200RPM	REDUC-TION (1)	MIN	MAX*	CONT*	INTERMIT*	(2)	INLET	OUTLET	KG	
19	6	2,8	600	3400	155	180	3,9	1 1/4" NPT	3/4" NPT	7,3	
22	7	4,2		3000			4,4				
26	8	4,5		2800			5,1				
29	9	4,8		2800			5,6				
36	11	4,8		2500			6,5				
39	12	5,4		2400			7,5				
42	13	6,0		2400			8,1				

* See page 27

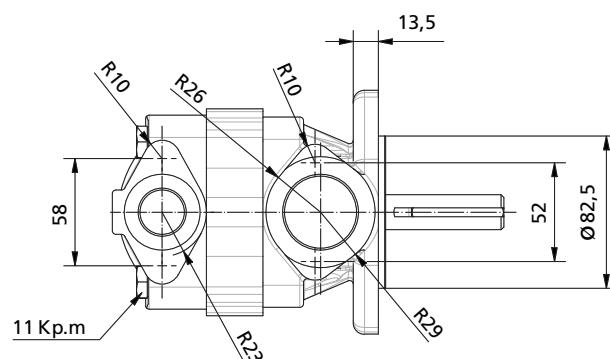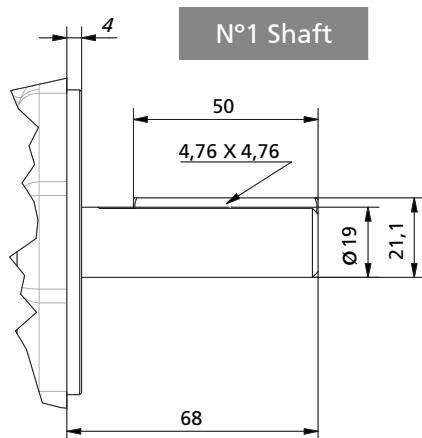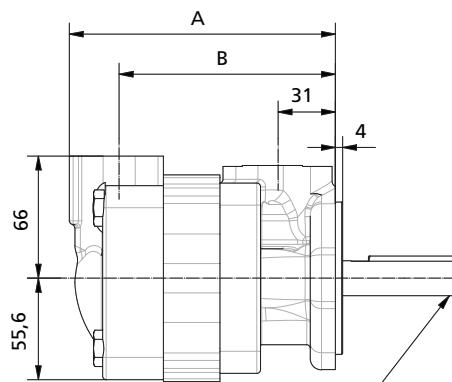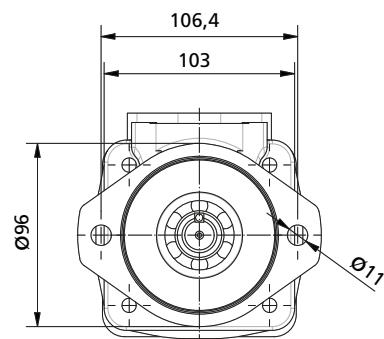

GAL.	DIMENSIONS	
	A	B
6	125,2	102,1
7, 8, 9	131,6	108,4
11	136,7	113,5
12, 13	140,2	117,1



THREAD OPTIONS		
NUM.	INLET	OUTLET
2	1 1/4" BSP	3/4" BSP
3	1 5/8" 12 UNF	1" 1/16 UNF
4	1 1/4" NPT	3/4" NPT

VC-20

FLOW AND INPUT POWER DIAGRAMS



Max. pressure (180 bar) Min. Pressure (7 bar)

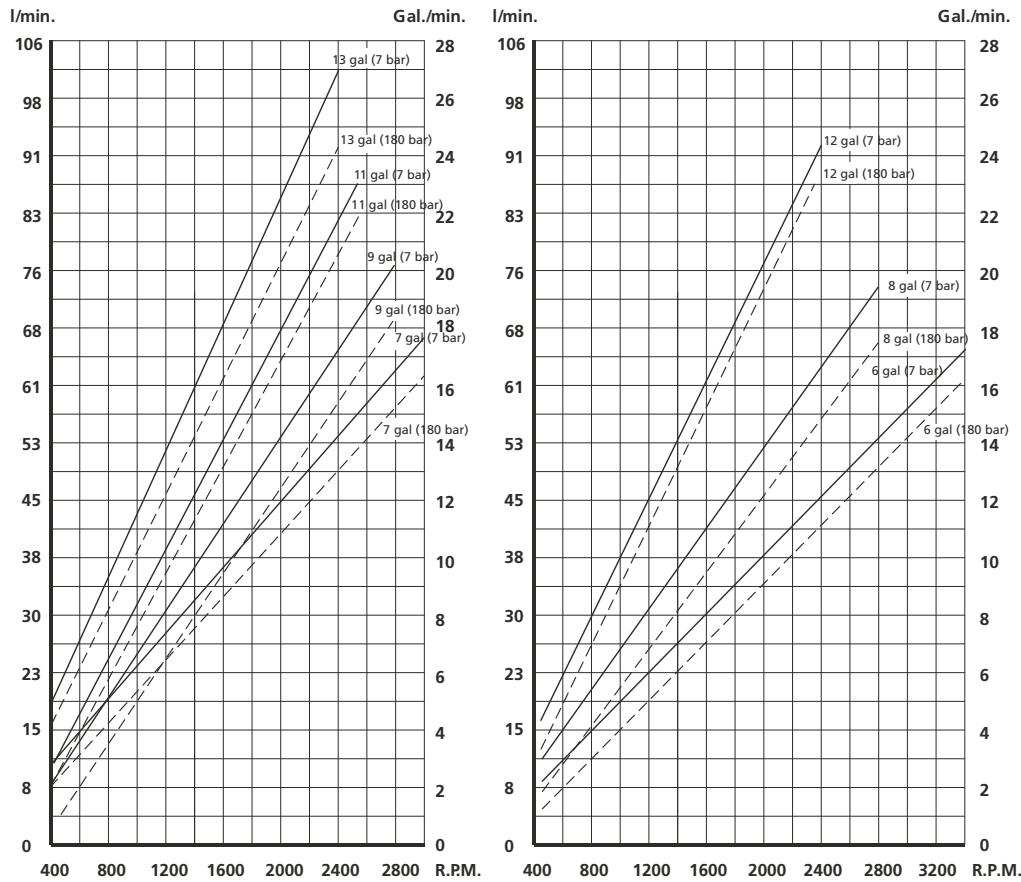
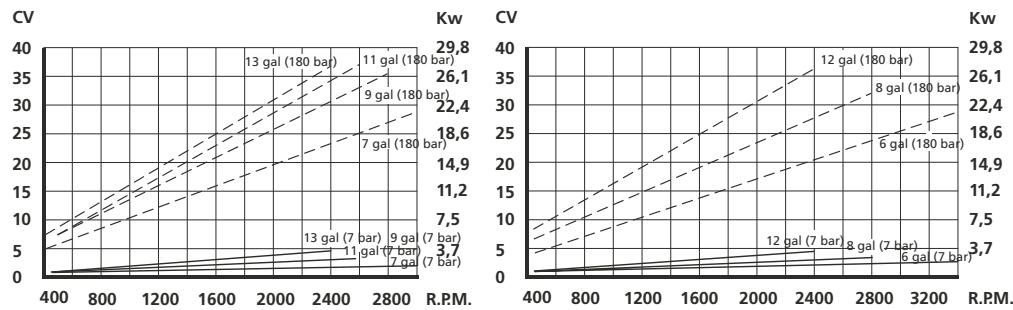


VK-20 / VQ-20 DIMENSIONS


	FLOW							SPEED(rpm)		PRESSURE (bar)		CONNECTION		WEIGHT
Lts/min.at 1000 rpm	8	18	27	29	36	39	46	Mín.	Máx.*	Contin.*	Intermit.*	Inlet	Outlet	(Kgs.)
Gal/min.at 1200 rpm	2	5	8	9	11	12	14	600	2500	175	210	Ø1 ½"	Ø¾"	12

* See page 27


DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

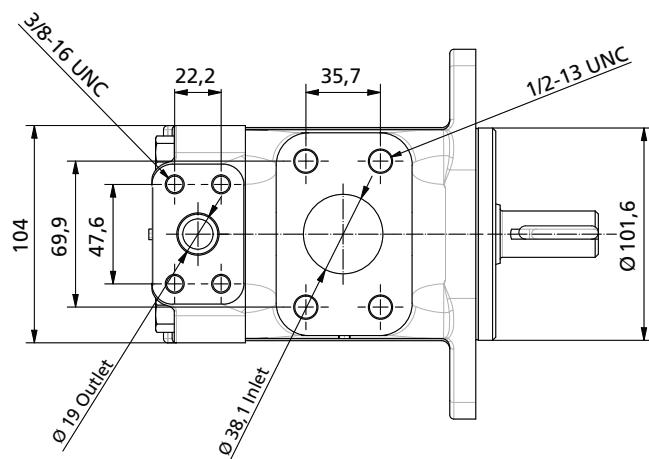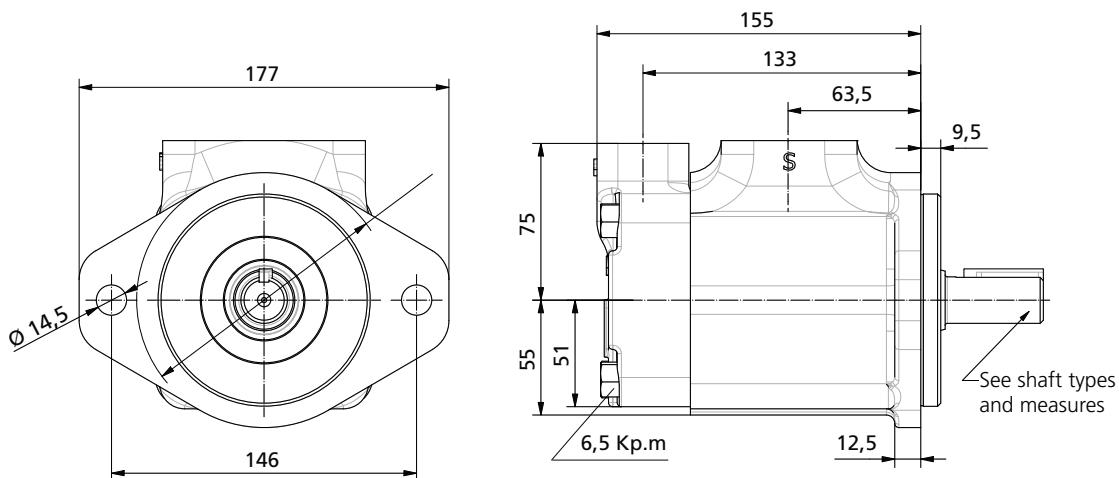

Nº1 Shaft

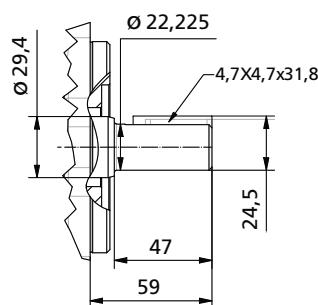

Nº151 Shaft

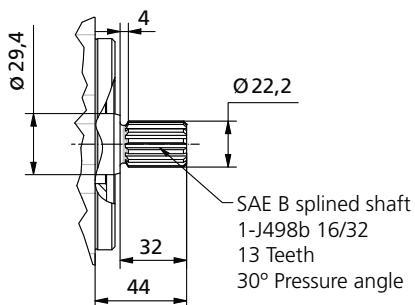



ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

VK-20 / VQ-20

FLOW AND INPUT POWER DIAGRAMS



Max. pressure (210 bar) Min. Pressure (7 bar)


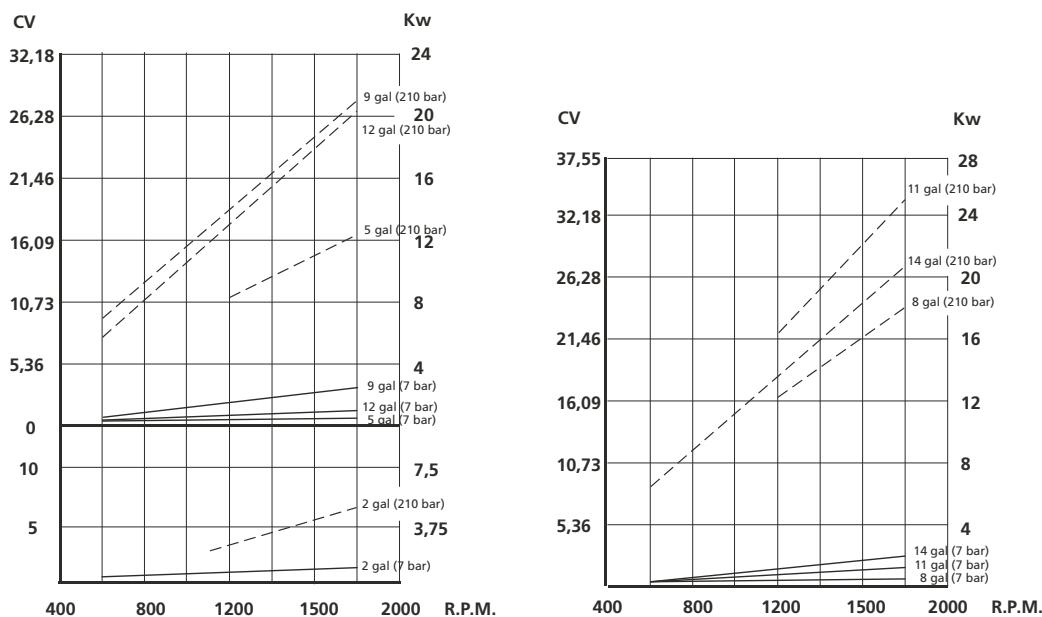
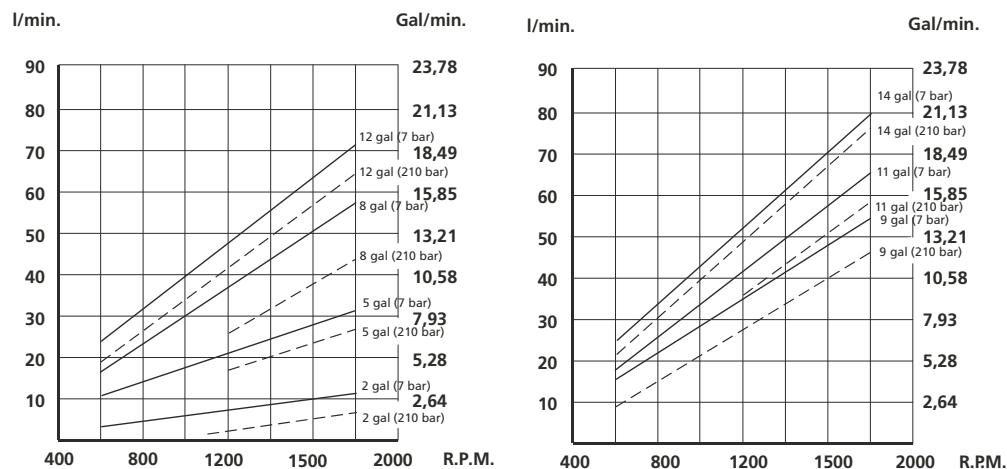


VS-25 / VQ-25 DIMENSIONS


	FLOW							SPEED(rpm)		PRESSURE (bar)		CONNECTION		WEIGHT
Lts/min.at 1000 rpm	32	40	45	55	60	67	80	Mín.	Máx.*	Contin.*	Intermit. *	Inlet	Outlet	(Kgs.)
Gal/min.at 1200 rpm	10	12	14	17	19	21	25	600	2500	175	210	Ø1" ½	Ø1"	15

* See page 27


DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

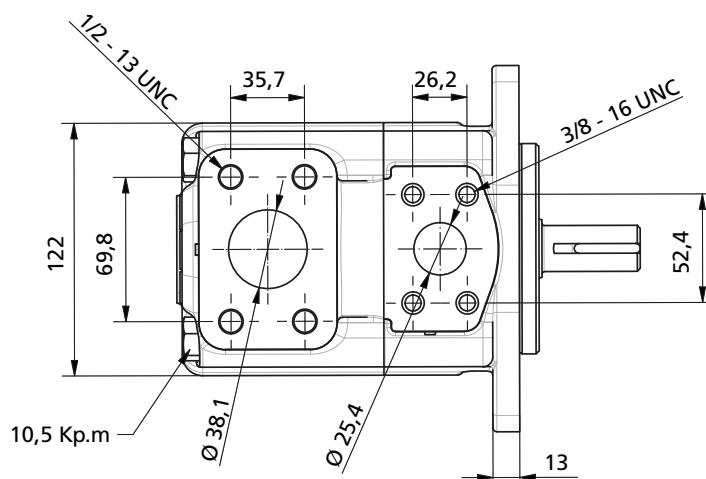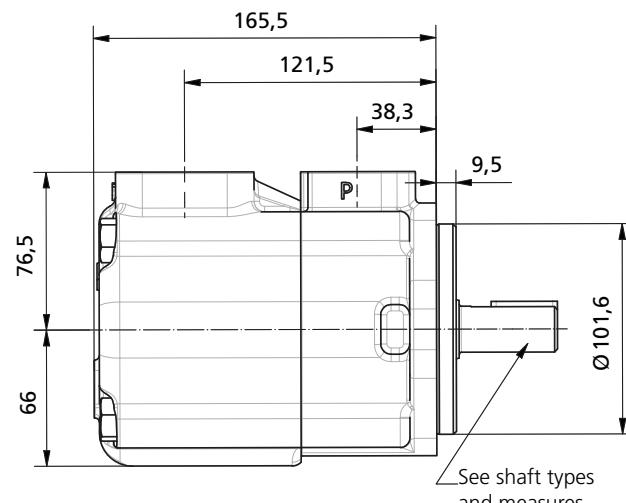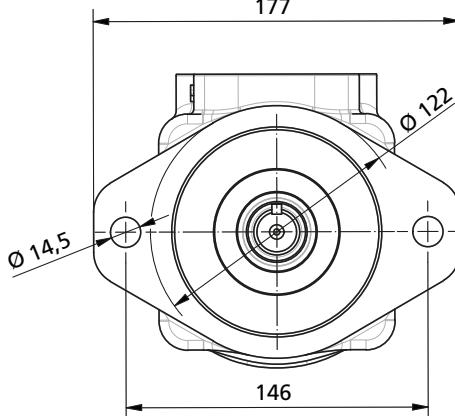


N°1 Shaft

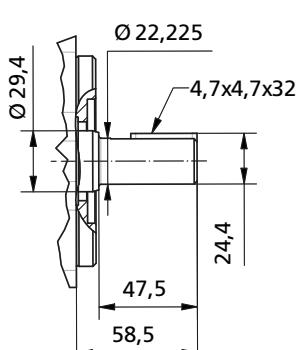

N°11 Shaft

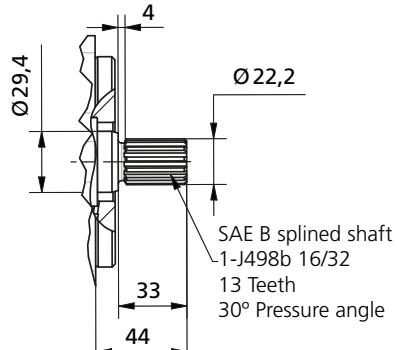


N°86 Shaft

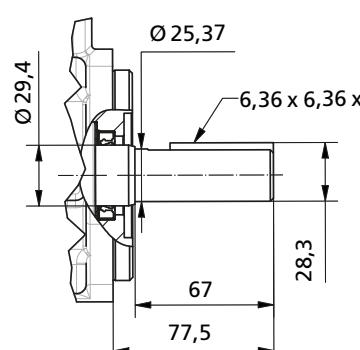

ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

FLOW AND INPUT POWER DIAGRAMS






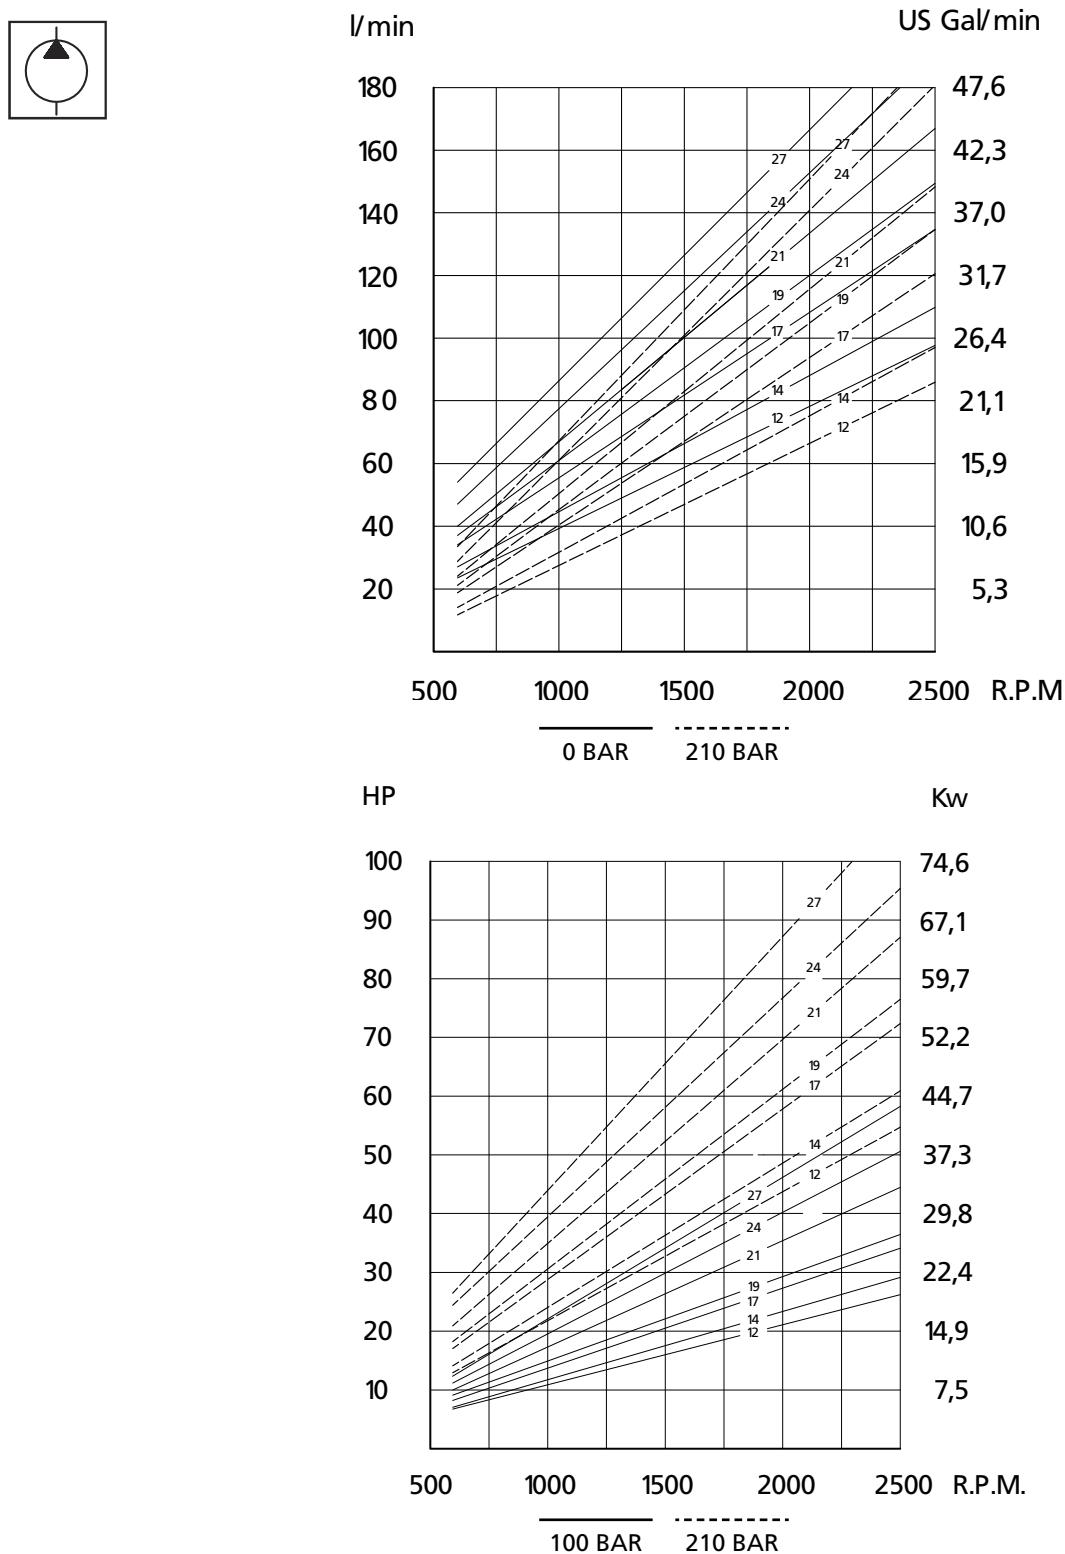


VS-35 / VQ-35 DIMENSIONS

FLOW							SPEED(rpm)		PRESSURE (bar)		CONNECTION		WEIGHT
Lts/min.at 1000 rpm	66	81	97	112	121	142*	Mín.	Máx.*	Contin.*	Intermit.*	Inlet	Outlet	(Kgs.)
Gal/min.at 1200 rpm	21	25	30	35	38	45*	600	2400	175	210	Ø2"	Ø1" 1/4	23

* See page 27


DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

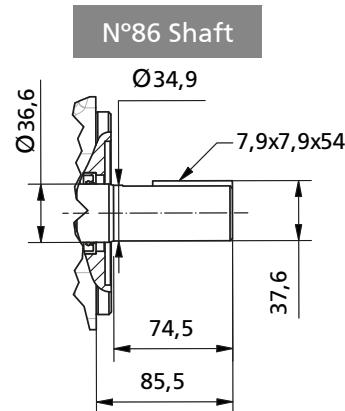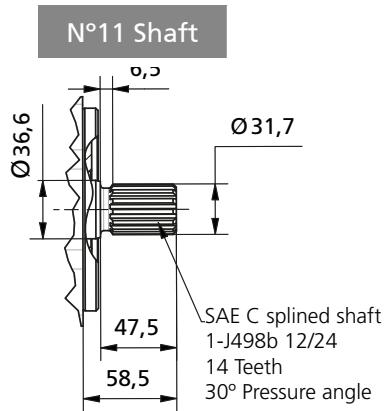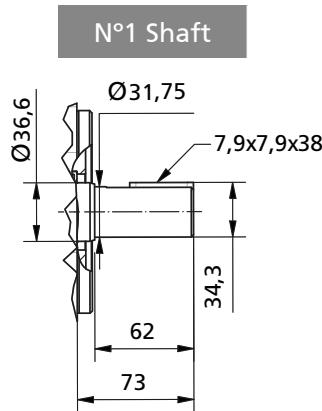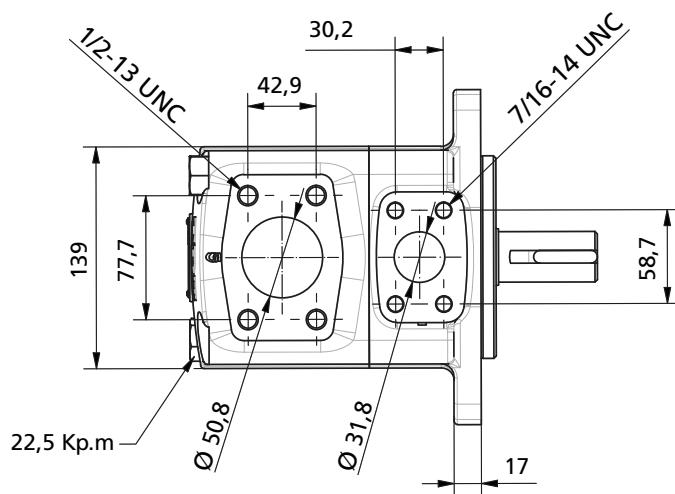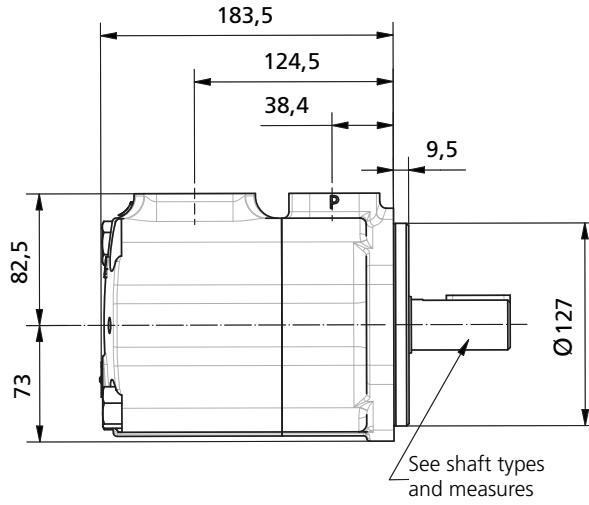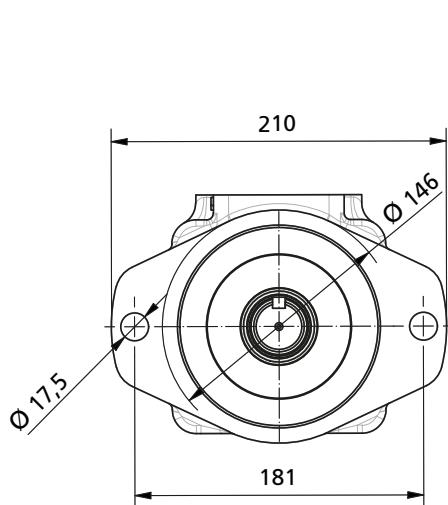


ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

VS-35 / VQ-35

FLOW AND INPUT POWER DIAGRAMS

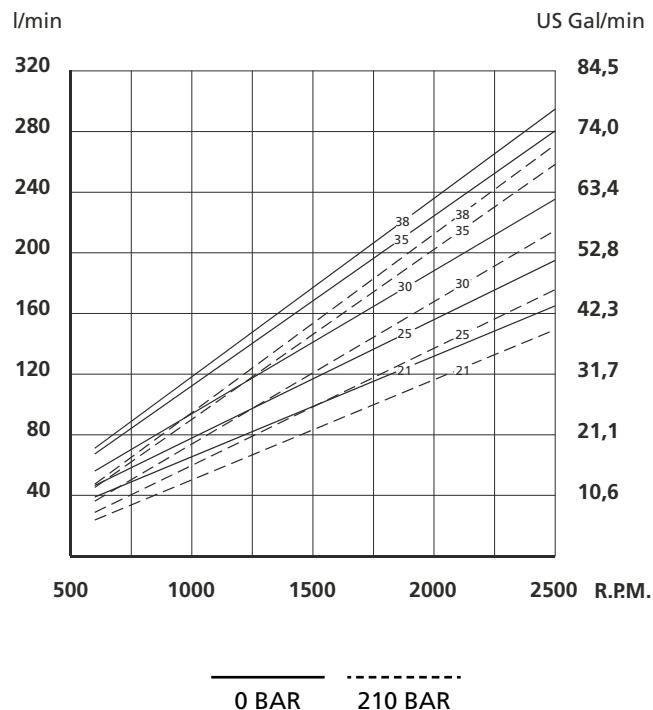

0 BAR 210 BAR

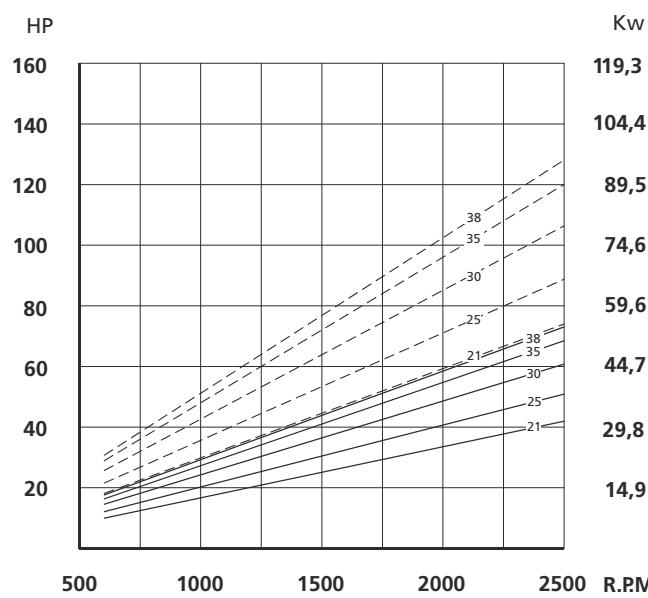







100 BAR **175 BAR**

VS-45 / VQ-45 DIMENSIONS

FLOW								SPEED(rpm)		PRESSURE (bar)		CONNECTION		WEIGHT
Lts/min.at 1000 rpm	138	148	162	180	193	214	240	Mín.	Máx.*	Contin.*	Intermit.*	Inlet	Outlet	(Kgs.)
Gal/min.at 1200 rpm	42	45	50	57	60	67	75	600	2200	155	175	Ø3"	Ø1" 1/2	35,5

*See page 27



DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

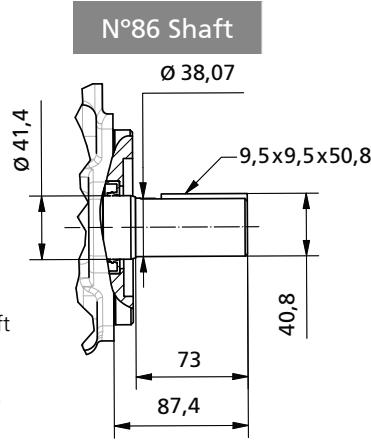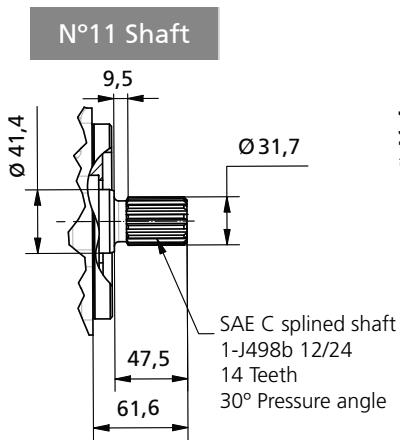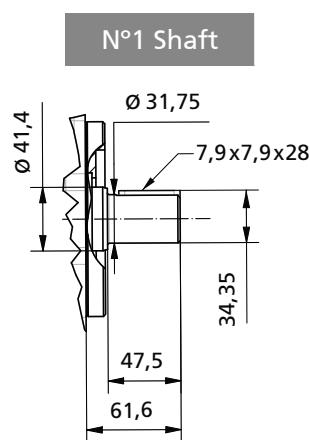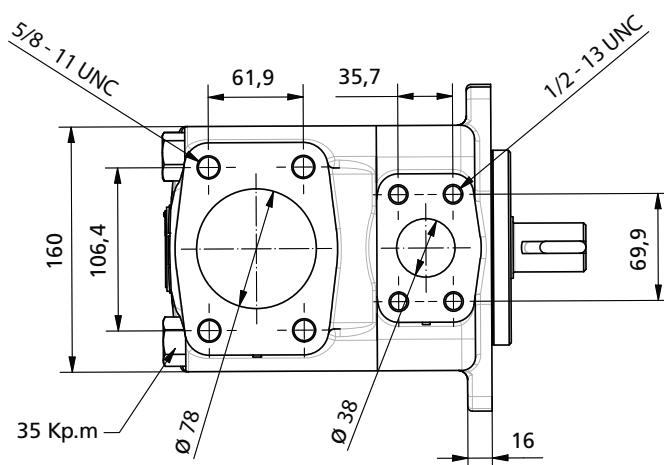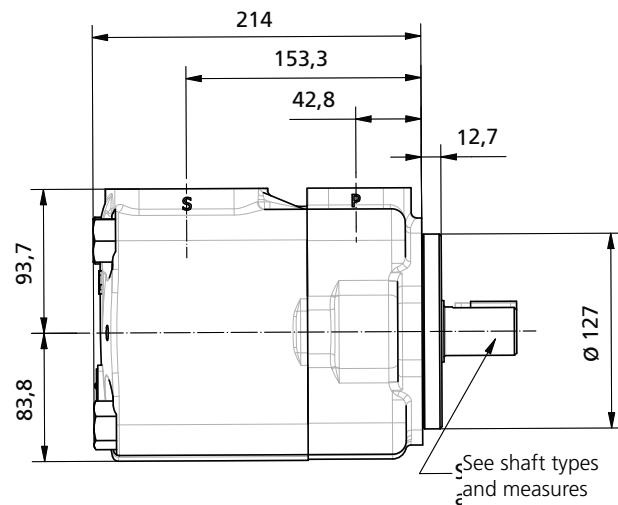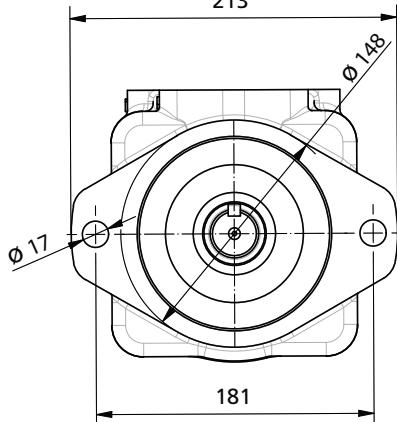


ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

VS-45 / VQ-45

FLOW AND INPUT POWER DIAGRAMS

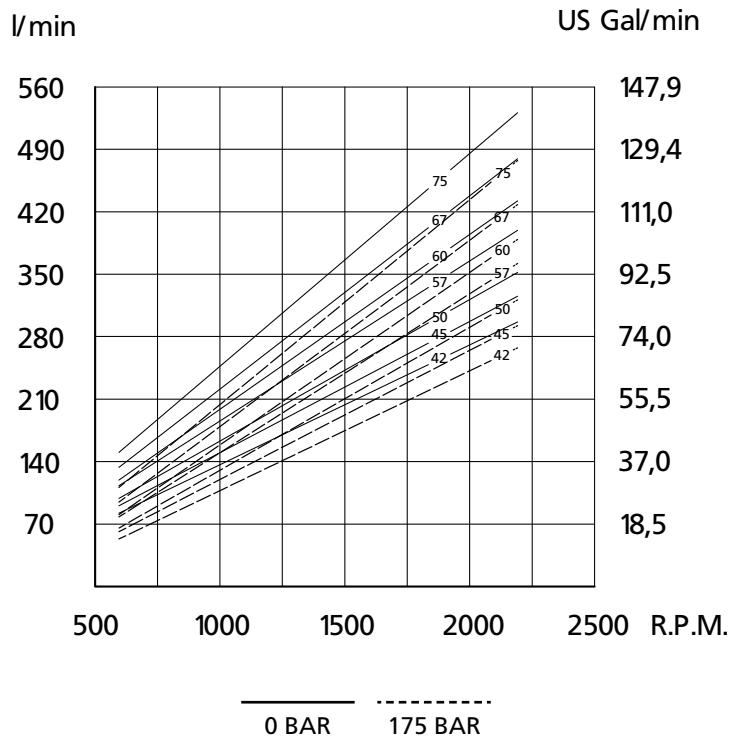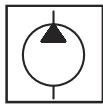


0 BAR 175 BAR

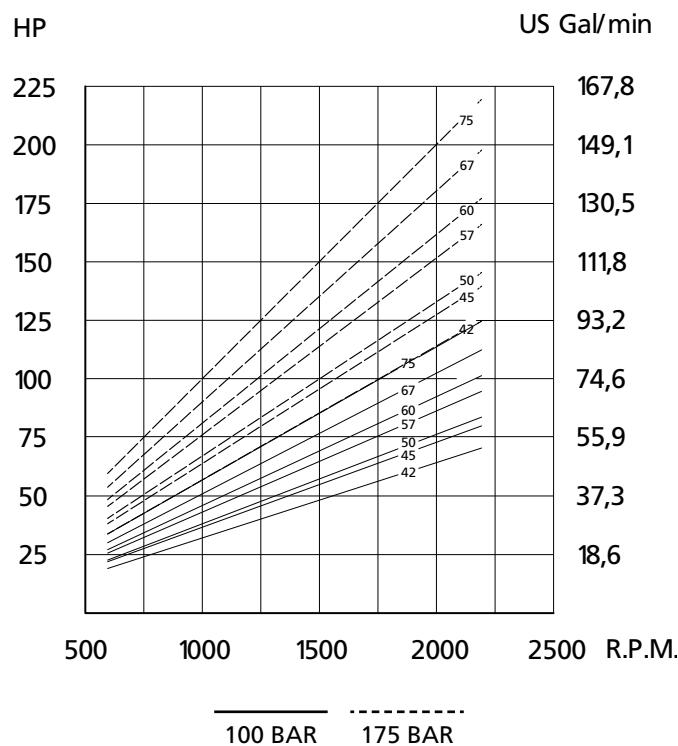

100 BAR 175 BAR

ORDERING CODE

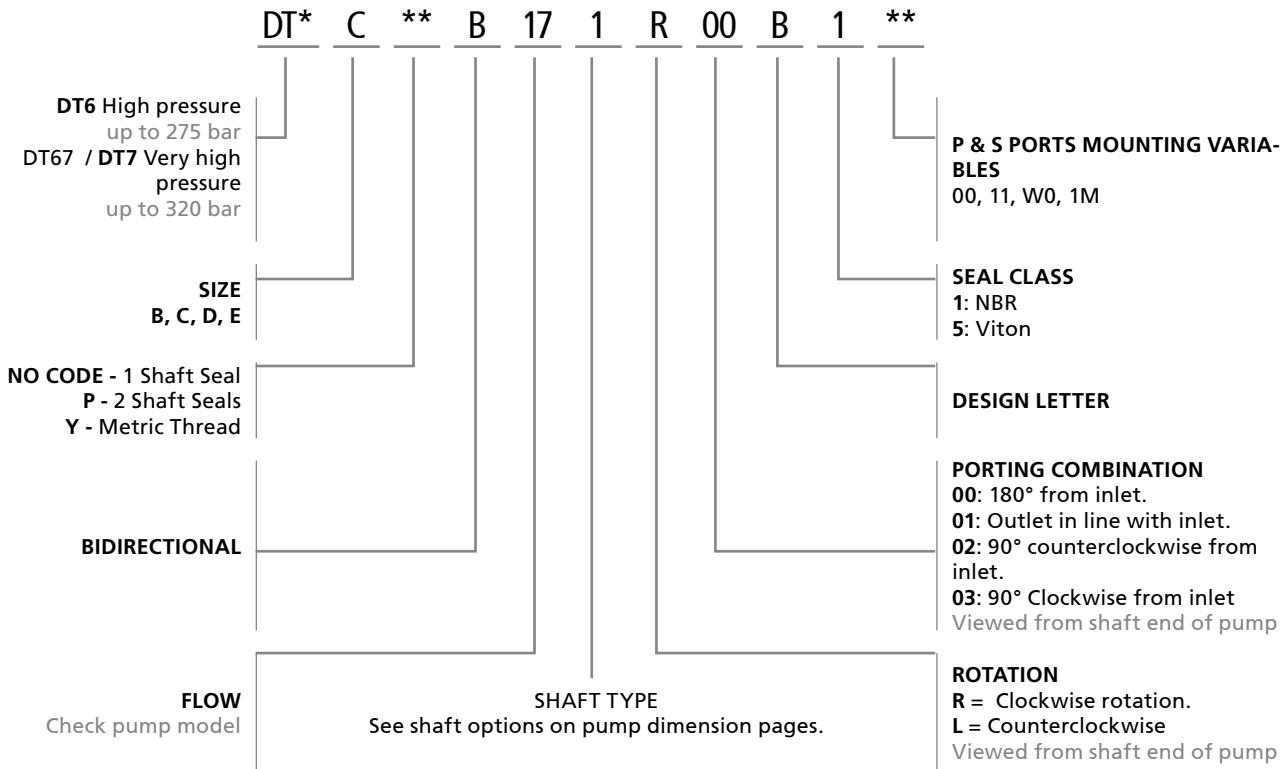





PORTING COMBINATION

00

01

02

03

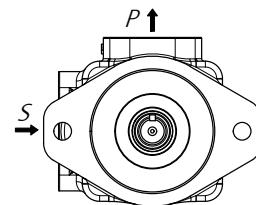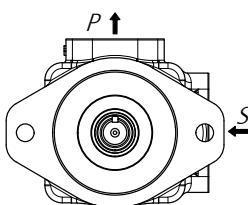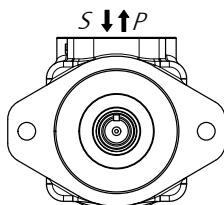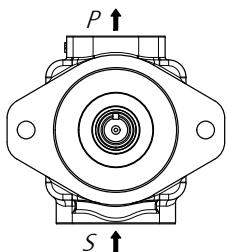

GENERAL CHARACTERISTICS

TYPE	FLOW		SPEED(rpm)		PRESSURE (bar)		NOMINAL POWER	CONNECTION			WEIGHT				
DENISON	GAL. @ 1200RPM	L @ 1000RPM	MIN	MAX	CONT	INTERMIT	(2)	FLANGE	INLET	OUTLET	KG				
DT7BS DT67B	2	6	600 (1)	3600	290	320	1,3	SAE B	$\emptyset 1\frac{1}{2}''$	$\emptyset \frac{3}{4}''$ $\emptyset 1''$	23				
	3	10					2,2								
	4	13					2,9								
	5	16					3,6								
	6	20					4,4								
	7	23					5,1								
	8	25					5,6								
	9	28					6,2								
	10	32					7,1								
	11	35					7,8								
	12	41					9,1								
	14	45					10,0								
	15	50					11,1								
DT7DS DT67D	14	44	600	3000	250	300	9,8	SAE C	$\emptyset 2''$ $\emptyset 2\frac{1}{2}''$	$\emptyset 1\frac{1}{4}''$	29				
	17	55					12,2								
	20	66					14,7								
	22	70					15,6								
	24	81					18,0								
	28	90					20,0								
	31	99					22,0								
	35	113					25,1								
	38	121					26,9								
	42	138					30,7								
	45	146					32,4								
	50	158					35,1								
	61	191					42,4								
DT6C	3	11	500	2800	240	275	2,4	SAE B	$\emptyset 1\frac{1}{2}''$	$\emptyset 1''$	15				
	5	17					3,8								
	6	21					4,7								
	8	26					5,8								
	10	34					7,6								
	12	37					8,2								
	14	46					10,2								
	17	58					12,9								
	20	64					14,2								
	22	70					15,6								
	25	79					17,6								
	28	89			2500	160	210								
	31	100													
DT6CP Pump model only mount B14 to B31 cartridges.															
DT6D	14	48	500	2500	210	240	10,7	SAE C	$\emptyset 2''$	$\emptyset 1\frac{1}{4}''$	24				
	20	66					14,7								
	24	80					17,8								
	28	90					20,0								
	31	98					21,8								
	35	111					24,7								
	38	120					26,7								
	42	136					30,2								
	45	146					32,4								
	50	158			1800	80	120								
	61	191													
DT6E	42	132	500	2200	210	240	29,3	SAE C	$\emptyset 3''$	$\emptyset 1\frac{1}{2}''$	44				
	45	142					31,6								
	50	159					35,3								
	52	165					36,7								
	57	183					43,8								
	62	197					47,3								
	66	213					50,4								
	72	227					60,0								
	85	270													

(1) Lower speed can be achieved depending of pressure, temperature, oil viscosity. Consult our technical department

(2) Nominal Power in H.P. at 100 Bar and 1000 RPM (to convert into Kw multiply by 0.735).


To obtain the real input power at different pressure and revolutions, use the formula as follows:

$$\text{Real input power} = \text{Input power} \times \frac{\text{R.P.M}}{1000} \times \frac{\text{Pressure (Bar)}}{1000}$$

DT7BS / DT67B CHARACTERISTICS


	FLOW												SPEED(rpm)		PRESSURE (bar)		WEIGHT	
	Lts/min.at 1000 rpm	6	10	13	16	20	22	25	28	32	35	41	45	50	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at 1200 rpm	2	3	4	5	6	7	8	9	10	11	12	14	15	500	3600	290	320	23

* See page 41 for further information about speed & pressure.

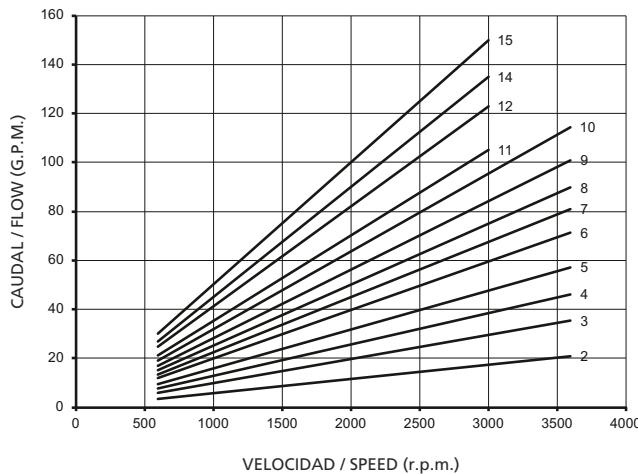

Theoretical Flow (0 Bar)

To calculate the real flow at a given operating pressure, subtract the internal leakage value for this pressure (see diagram below) from the theoretical flow. (See diagram above).

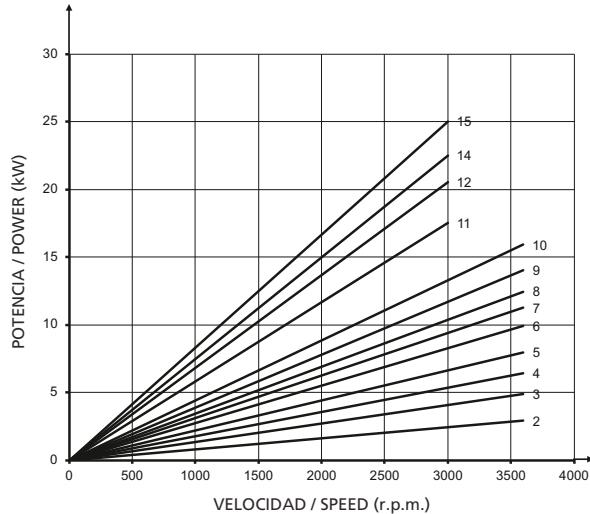


Theoretical Input Power at 300 Bar

To calculate the theoretical input power at other pressures and speeds, use the formula:

$$P(\text{Kw}) = \frac{Q(\text{L/min.}) \times P(\text{Bar})}{600}$$


Where Q is the theoretical flow (upper left diagram) and P the operating pressure.

To calculate the real input power, add to the theoretical power the hydromechanical power losses (see diagram below).

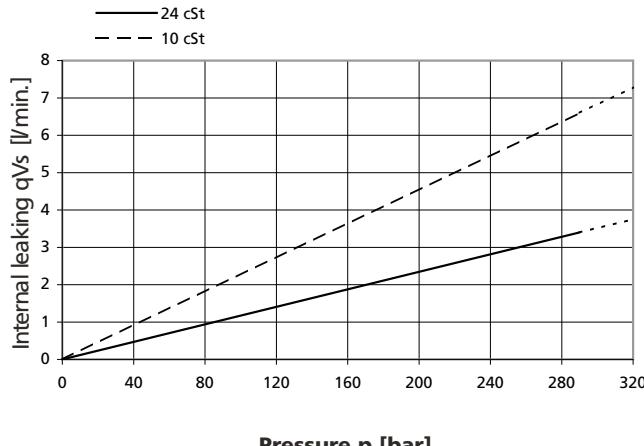

Pressure p [bar]




Do not operate pump more than 5 seconds at any speed or viscosity if internal leakage is more than 50 % of theoretical flow

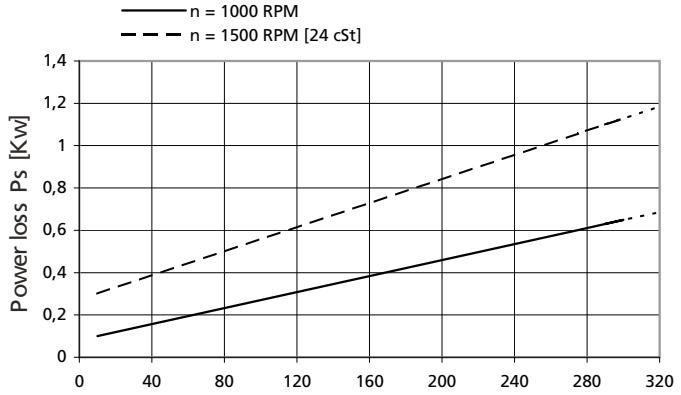

Pressure p [bar]

DT7BS DIMENSIONS

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

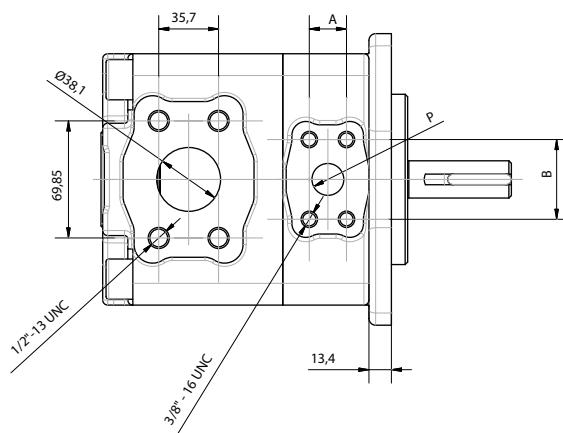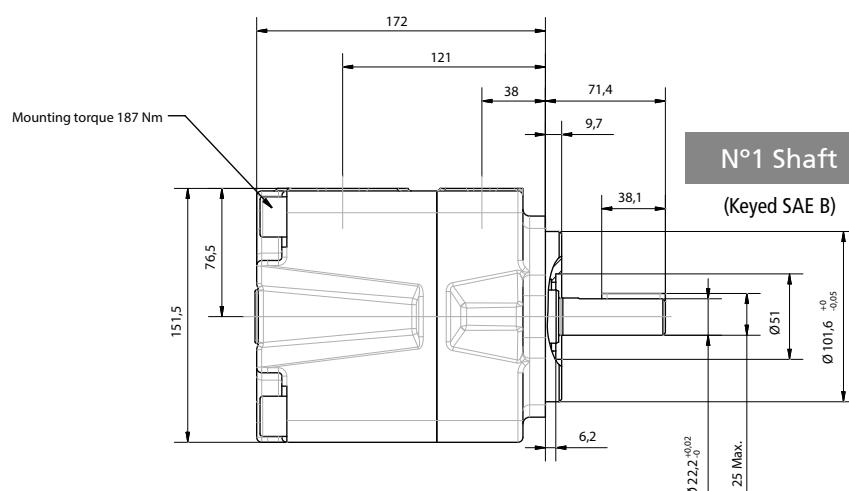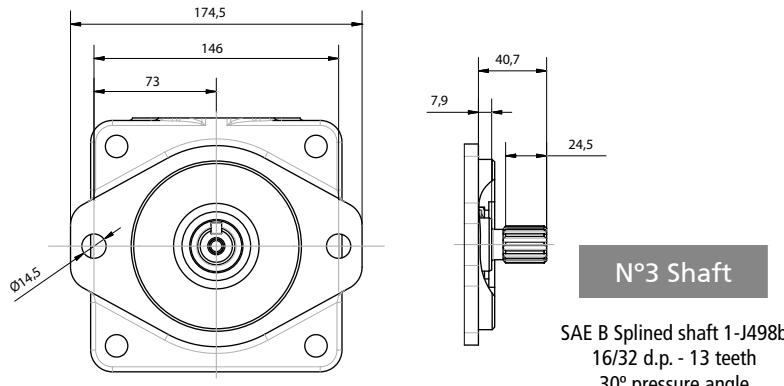

	00/M0	01/03/M1
P	25,4	19,1
A	26,2	22,2
B	52,4	47,6

P	UNC		METRIC		
	00	01	03	M0	M1
S	1 1/2"	3/4"	1"	3/4"	
	1 1/4"		1 1/4"	1 1/2"	


SHAFT TORQUE LIMITS	
SHAFT	Nm
1	262,7
3	328

ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

DT7DS / DT67D OPERATING CHARACTERISTICS

	FLOW												SPEED(rpm)		PRESSURE (bar)		WEIGHT	
Lts/min.at 1000 rpm	44	55	66	70	81	90	99	113	121	138	146	158	191	Min.	Máx.*	Contin.*	Intermit.*	(Kgs.)
Gal/min.at 1200 rpm	14	17	20	22	24	28	31	35	38	42	45	50	61	600	3000	250	300	29


* See page 41 for further information about speed & pressure.

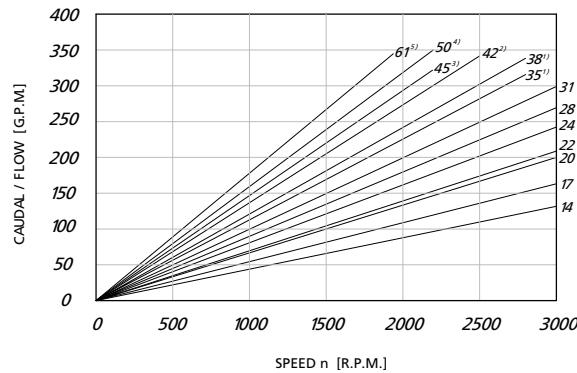

- 1) B35 - B38 = 280 bar max. int. / 2800 rpm max.
- 2) B42 = 260 bar max. int. / 2500 rpm max.
- 3) B45 = 240 bar max. int. / 2200 rpm max.
- 4) B50 = 210 bar max. int. / 2200 rpm max.
- 5) B61 = 120 bar max. int / 1800 rpm max.

Theoretical Flow (0 Bar)

To calculate the real flow at a given operating pressure, subtract the internal leakage value for this pressure (see diagram below) from the theoretical flow. (See diagram above).

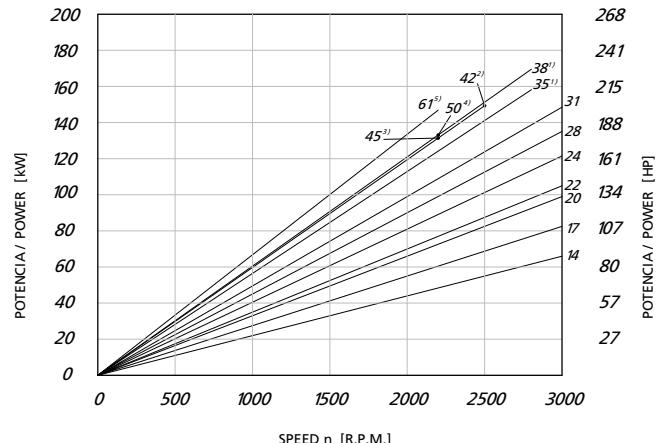



Theoretical Input Power at max. int. pressure

To calculate the theoretical input power at other pressures and speeds, use the formula:

$$P(\text{kW}) = \frac{Q(\text{L/min.}) \times P(\text{Bar})}{600}$$

Where Q is the theoretical flow (upper left diagram) and P the operating pressure.

To calculate the real input power, add to the theoretical power the hydromechanical power losses (see diagram below).

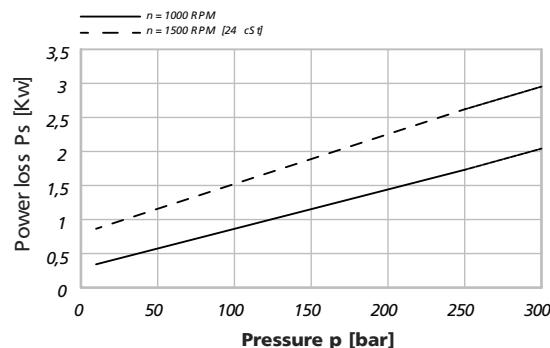
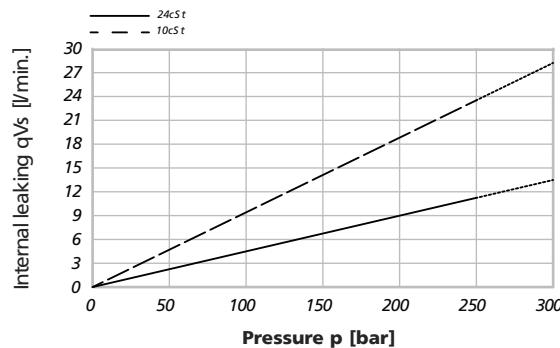


Do not operate pump more than 5 seconds at any speed or viscosity if internal leakage is more than 50 % of theoretical flow

DT7DS DIMENSIONS

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm



DT7DSW

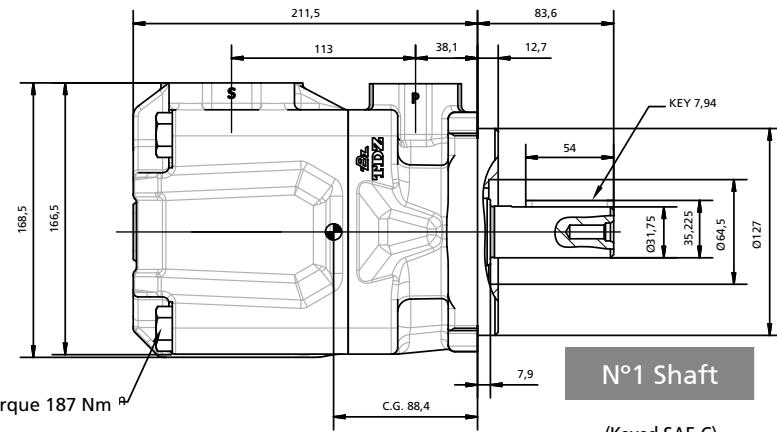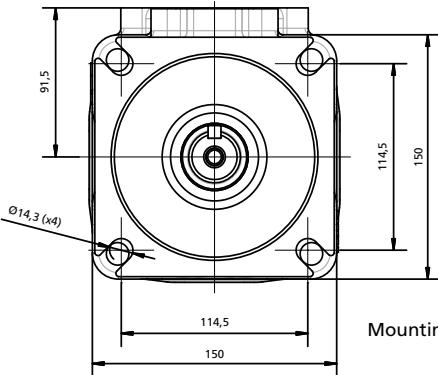

N°1 Shaft


(Keyed SAE C)

DT7DS

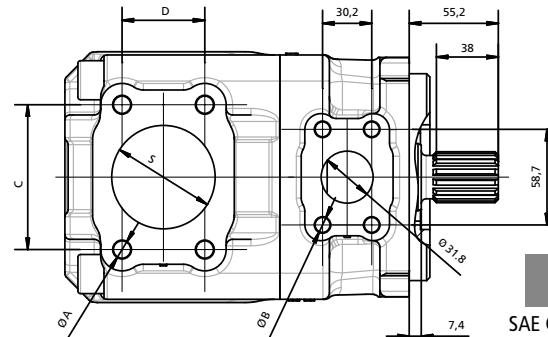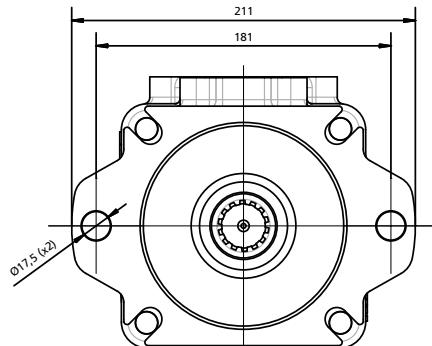


N°3 Shaft

SAE C Splined shaft 1-J498b
12/24 d.p. - 14 teeth
30° pressure angle

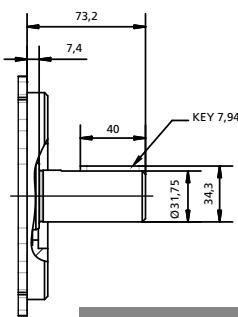

N°2 Shaft

(Non Keyed SAE C)

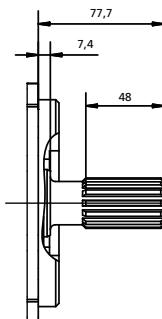

N°4 Shaft

Non SAE C Splined shaft 1-J498b
12/24 d.p. - 14 teeth
30° pressure angle

UNC METRIC

T7DSW T7DS 00 M0 Y0^{*1}^{*1} 250 BAR MAX INT.

T7DS

00 M0 Y0¹⁾ W1 M0 Y0¹⁾

ØA	1/2" 13 UNC 7/16" 14 UNC	M12	1/2" 13 UNC 7/16" 14 UNC	M12	M12
ØB		M10		M12	M10
C	77,8			88,9	
D	42,9			50,8	
S	50,8			63,5	

^{*1} 250 BAR MAX INT.

SHAFT TORQUE LIMITS


SHAFT	Nm
1	688,5
2	550,8
3	974,5
4	

DT6C OPERATING CHARACTERISTICS

	FLOW										SPEED(rpm)		PRESSURE (bar)	WEIGHT				
Lts/min.at 1000 rpm	11	17	21	26	34	37	46	58	64	70	79	89	100	Min.	Máx.*	Contin.*	Intermit.*	(Kgs.)
Gal/min.at 1200 rpm	3	5	6	8	10	12	14	17	20	22	25	28	31	500	2800	240	275	15

* See page 41 for further information about speed & pressure.

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

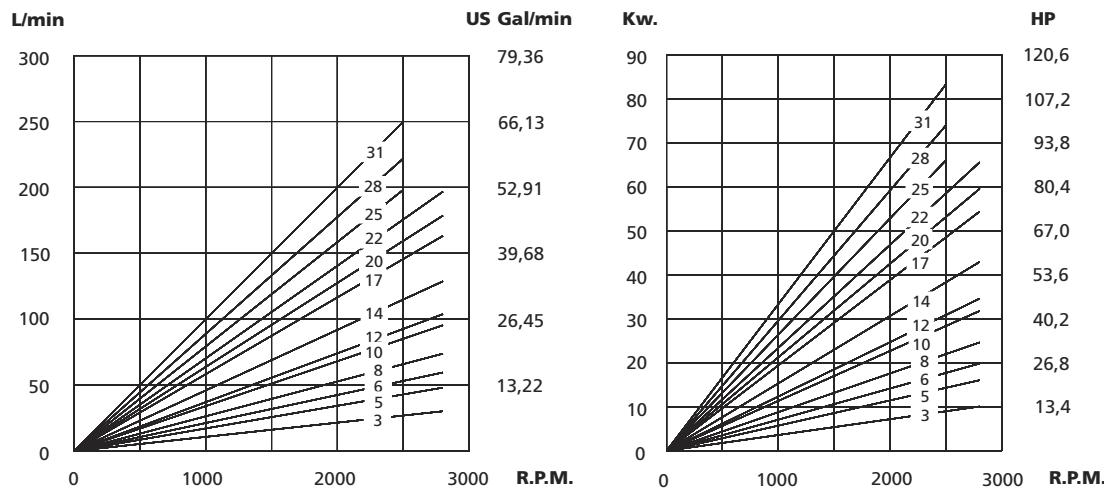

Theoretical Flow (0 Bar)

To calculate the real operating flow, subtract the internal leakage value for this pressure (see diagram below) from the theoretical flow. (See diagram above).



Theoretical Input Power at 200 Bar

To calculate the theoretical input power at other pressures and speeds, use the formula:

$$P(\text{Kw}) = \frac{Q(\text{L/min.}) \times P(\text{Bar})}{600}$$

Where Q is the theoretical flow (upper left diagram) and P the operating pressure.

To calculate the real input power, add to the theoretical power the hydromechanical power losses (see diagram below).

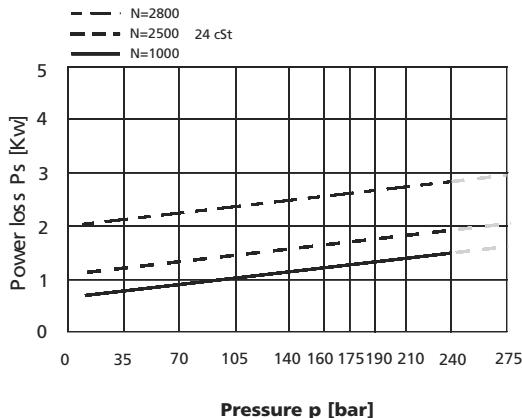
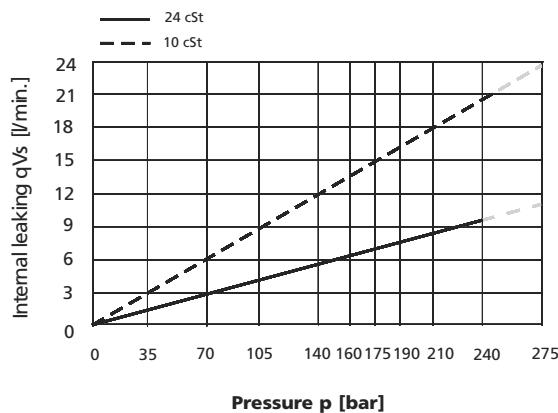


Do not operate pump more than 5 seconds at any speed or viscosity if internal leakage is more than 50 % of theoretical flow

DT6C / DT67B* DIMENSIONS


DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

*FOR FURTHER INFO ABOUT DT67B SEE PAGE 42

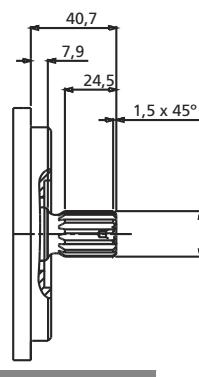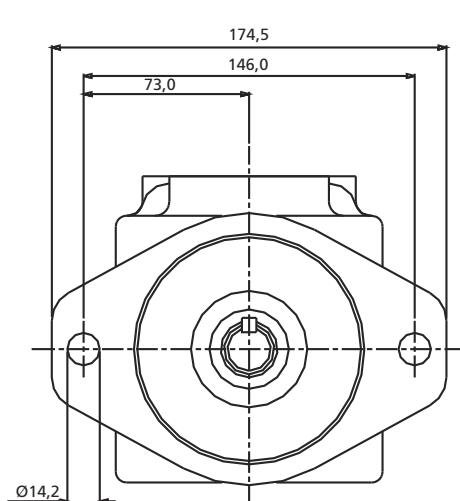


N°3 Shaft

SAE B Splined shaft 1-J498b
16/32 d.p. - 13 teeth
30° Pressure angle

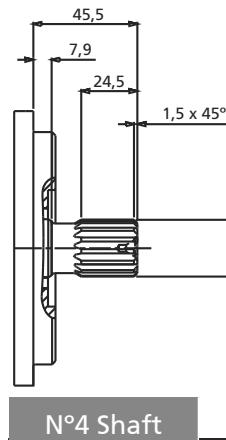


N°4 Shaft

SAE BB 1-J498b Splined shaft
16/32 d.p. - 15 teeth
30° Pressure angle

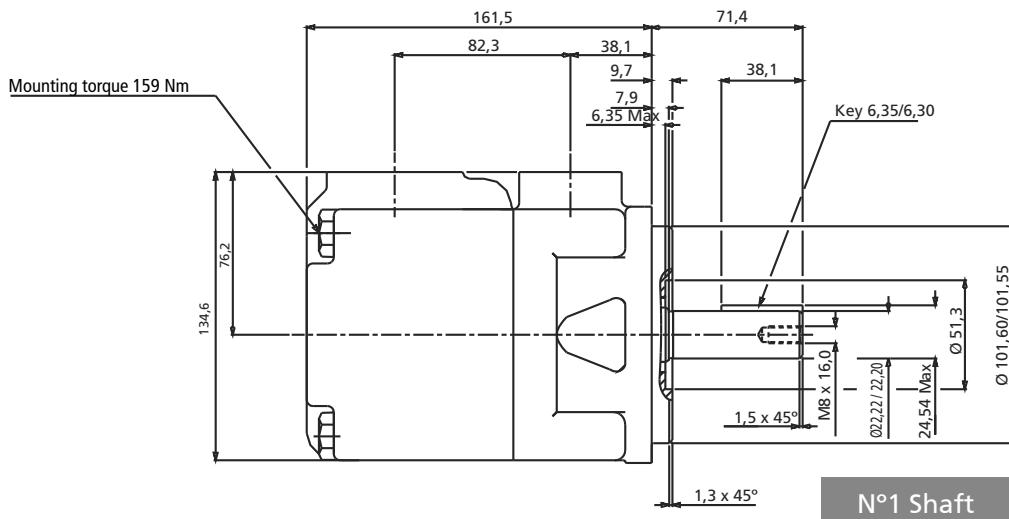

N°1 Shaft

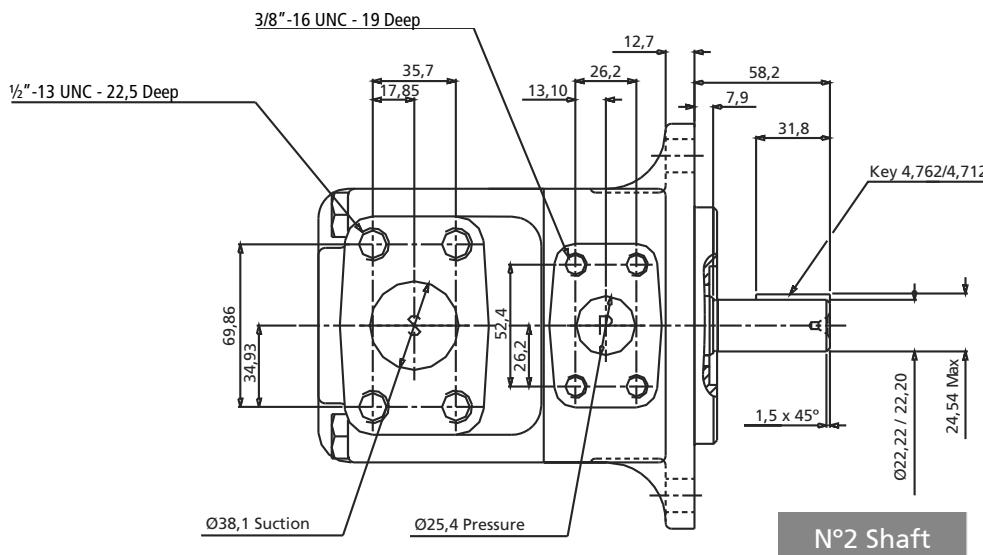


N°2 Shaft

ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

DT6D OPERATING CHARACTERISTICS

	FLOW											SPEED(rpm)		PRESSURE (bar)	WEIGHT	
Lts/min.at 1000 rpm	48	66	80	90	98	111	120	136	146	158	191	Min.	Máx.*	Contin.*	Intermit.*	(Kgs.)
Gal/min.at 1200 rpm	14	20	24	28	31	35	38	42	45	50	61	500	2500	210	240	24

* See page 41 for further information about speed & pressure.

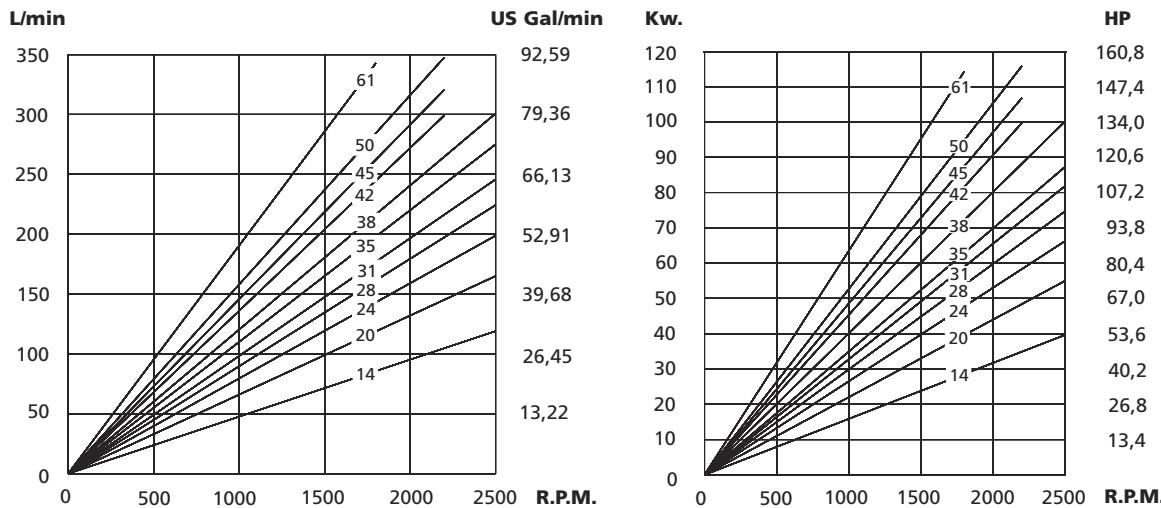

Theoretical Flow (0 Bar)

To calculate the real flow at a given operating pressure, subtract the internal leakage value for this pressure (see diagram below) from the theoretical flow. (See diagram above).


Theoretical Input Power at 200 Bar

To calculate the theoretical input power at other pressures and speeds, use the formula:

$$P(\text{Kw}) = \frac{Q(\text{L/min.}) \times P(\text{Bar})}{600}$$

Where Q is the theoretical flow (upper left diagram) and P the operating pressure.

To calculate the real input power, add to the theoretical power the hydromechanical power losses (see diagram below).


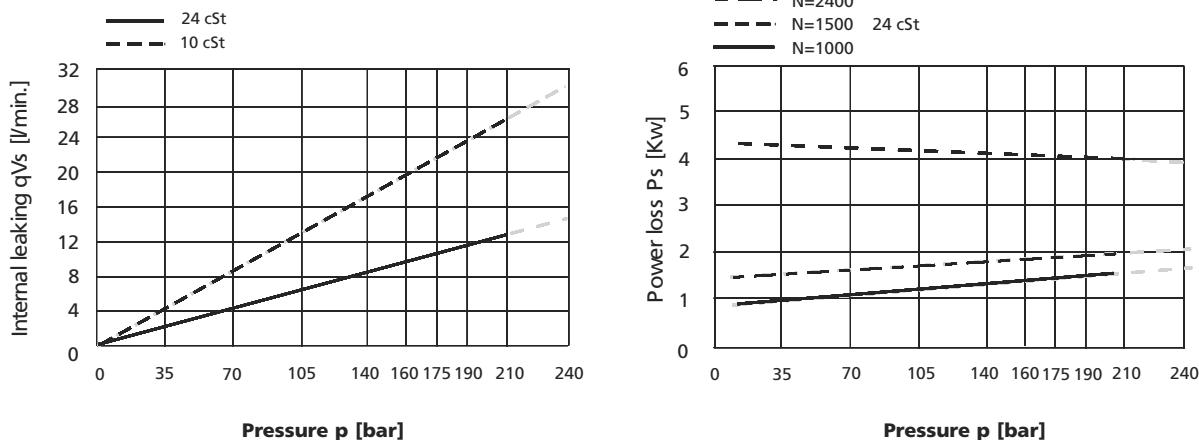


Do not operate pump more than 5 seconds at any speed or viscosity if internal leakage is more than 50 % of theoretical flow

DT6D / DT67D* DIMENSIONS


DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

*FOR FURTHER INFO ABOUT DT67D SEE PAGE 44

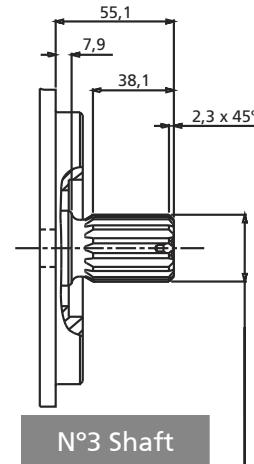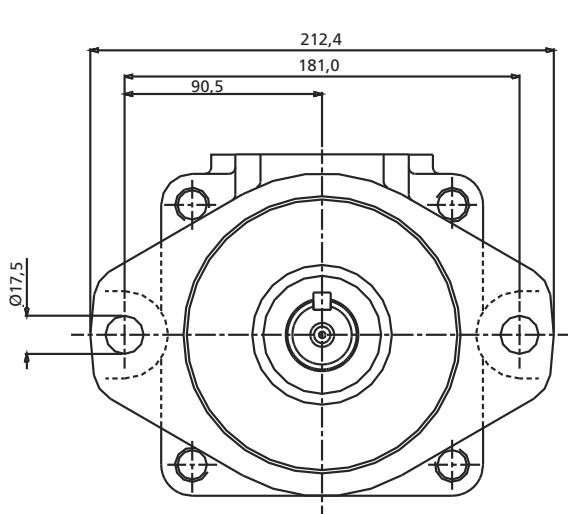


N°3 Shaft

SAE C Splined shaft 1-J498b
12/24 d.p. - 14 Teeth
30° Pressure angle

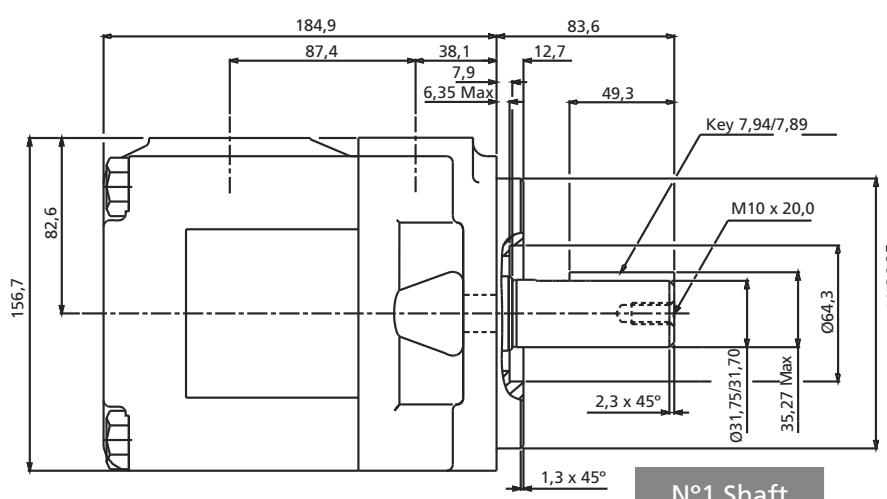


N°1 Shaft

	00	M0
A	1/2" - 13 UNC	M12
B	7/16" - 14 UNC	M10

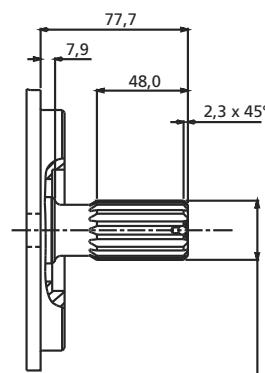

N°4 Shaft

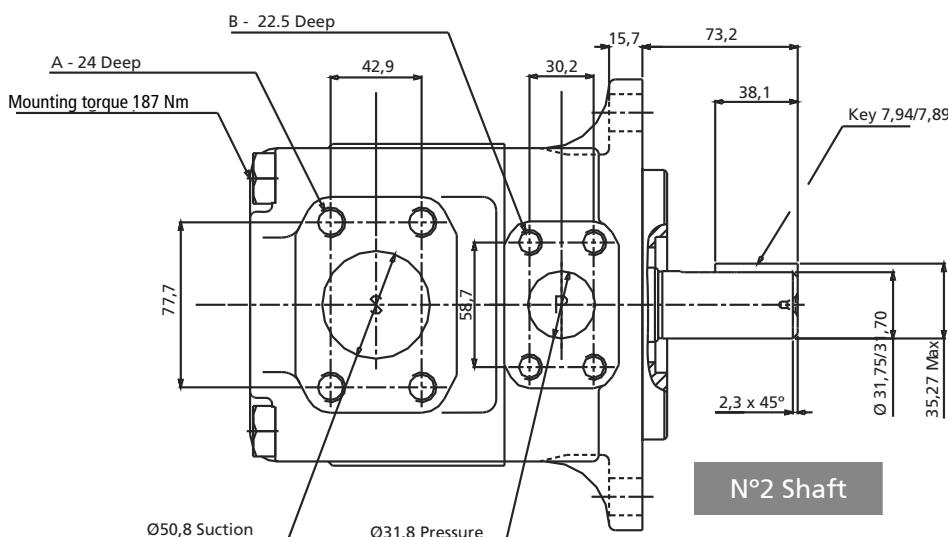

N°2 Shaft


No SAE splined shaft 1-J498b
16/24 d.p. - 14 teeth
30° Pressure angle

ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

DT6E OPERATING CHARACTERISTICS

	FLOW							SPEED(rpm)		PRESSURE (bar)		WEIGHT		
Lts/min.at 1000 rpm	132	142	159	165	183	197	213	227	270	Mín.	Máx.*	Contin.*	Intermit. *	(Kgs.)
Gal/min.at 1200 rpm	42	45	50	52	57	62	66	72	85	500	2200	210	240	44


* See page 41 for further information about speed & pressure.

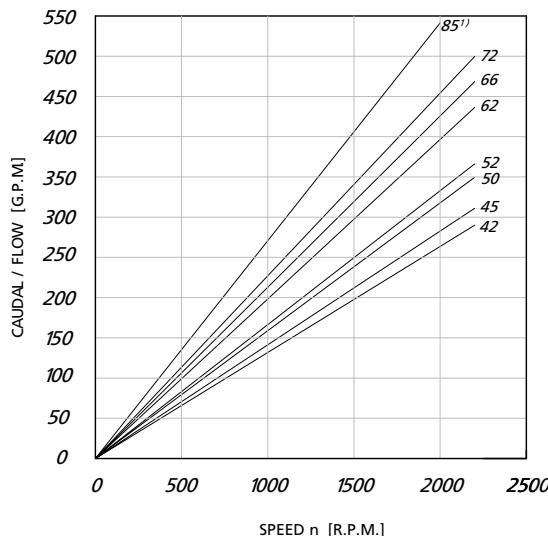

¹⁾ B85 = 90 bar max. int. / 2000 rpm max.

Theoretical Flow (0 Bar)

To calculate the real flow at a given operating pressure, subtract the internal leakage value for this pressure (see diagram below) from the theoretical flow. (See diagram above).

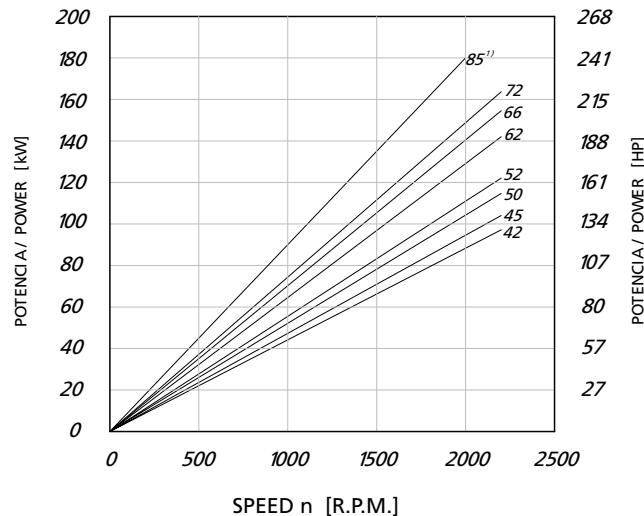

¹⁾ B85 = 90 bar max. int. / 2000 rpm



Theoretical Input Power at 200 Bar¹⁾

To calculate the theoretical input power at other pressures and speeds, use the formula:

$$P(\text{Kw}) = \frac{Q(\text{L/min.}) \times P(\text{Bar})}{600}$$

Where Q is the theoretical flow (upper left diagram) and P the operating pressure.





To calculate the real input power, add to the theoretical power the hydromechanical power losses (see diagram below).

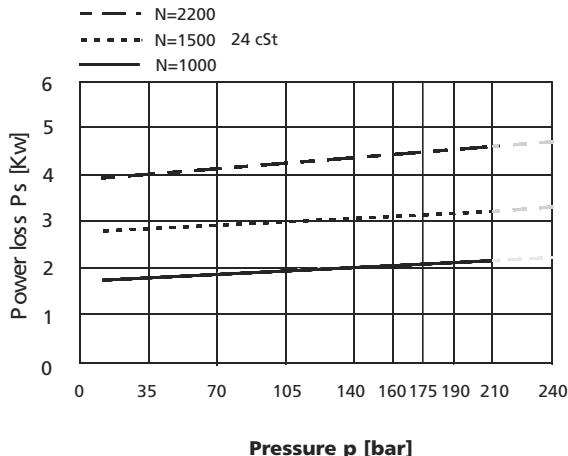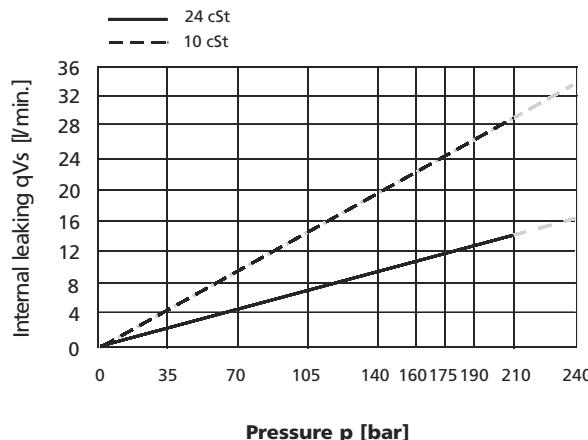

Do not operate pump more than 5 seconds at any speed or viscosity if internal leakage is more than 50 % of theoretical flow


DT6E DIMENSIONS

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

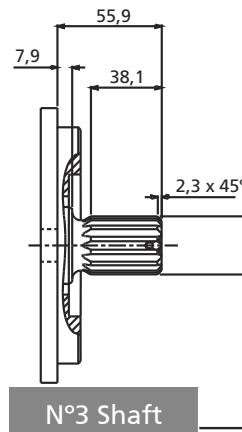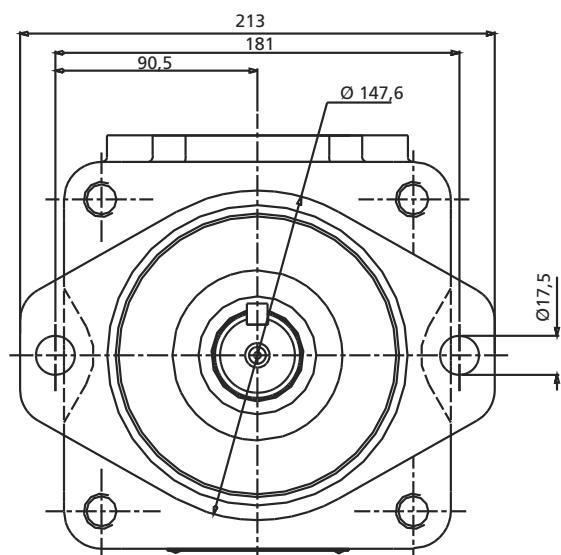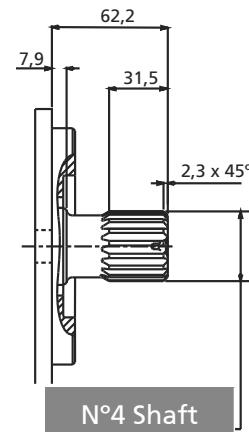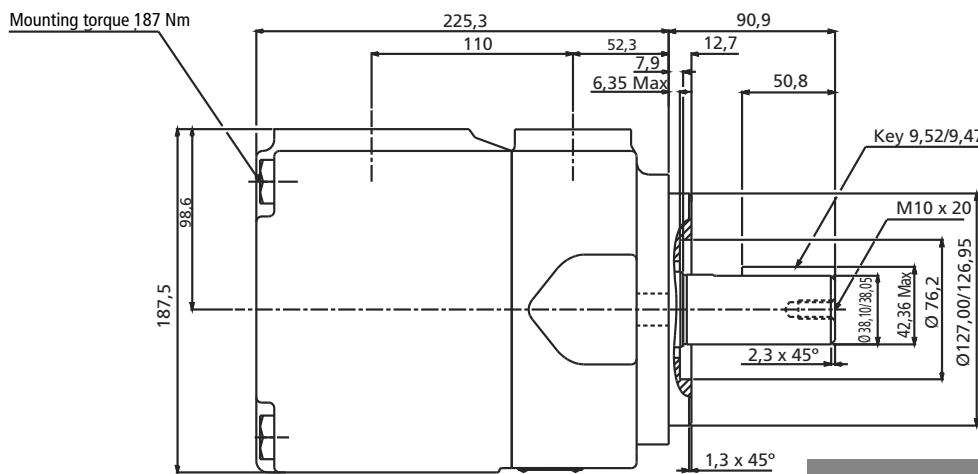SAE C Splined shaft 1-J498b
12/24 d.p. - 14 Teeth
30° Pressure angleSAE C-C Splined shaft
1-J498b 12/24 d.p. - 17 Teeth
30° Pressure angle

N°1 Shaft

SAE C-C

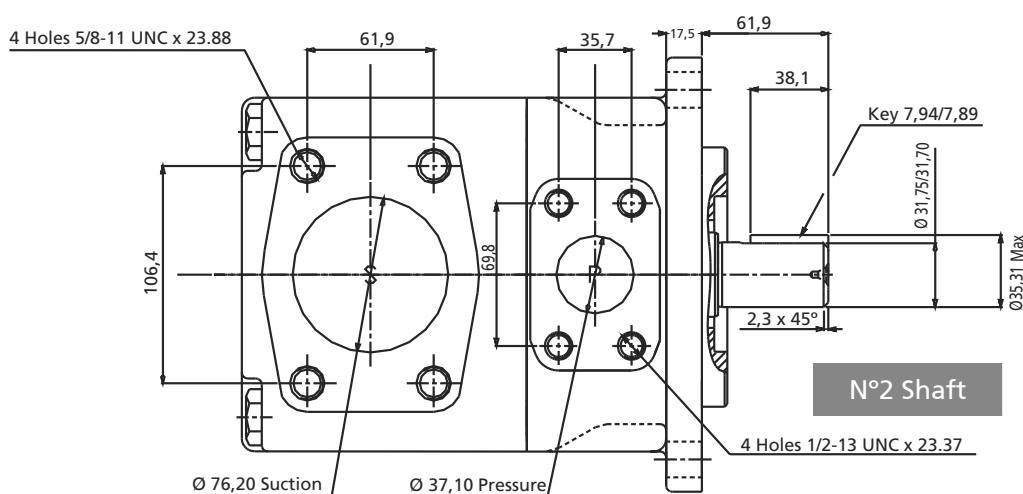

N°2 Shaft

4 Holes 1/2-13 UNC x 23.37


ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118



Bezares Group

THRU DRIVE VANE PUMPS

V**T thru drive single vane pumps

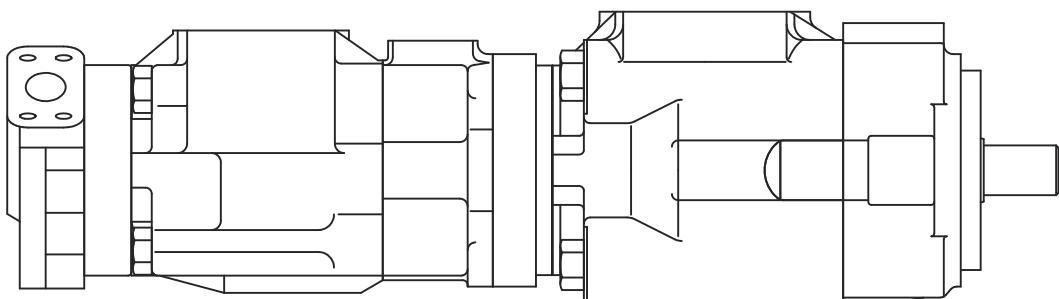

See single V* pumps for displacement & power diagrams (Pages 35, 37 and 39)


V*7TC thru drive pump with V*64 double pump

ORDERING CODE


F3	VS	7T	C	60	D	86	A	A
F3 - special seals for fire-resistant fluids. Omit if not required								
VS = 12 vane pump Industrial use (very quiet), UNC threads								
VQ = 10 vanes & bronze plates Mobile use, UNC threads								
PUMP MODEL 4T, 6T, 7T								
REAR PUMP MOUNTING: SAE mounting flange, 2-bolts								
A - SAE-A B - SAE-B C - SAE-C								
FLOW								
US Gallons per minute @1200 rpm and 7 Bar								
REAR FLANGE POSITION Viewed from flange								
SAE A Flanges:								
A: 45° clockwise B: 45° counterclockwise								
SAE B & SAE C Flanges:								
A: In line with in-front flange B: 90° rotated								
PORTING COMBINATION A: Outlet in line with inlet. B: 90° clockwise from inlet. C: 180° from inlet. D: 90° counterclockwise from inlet.								
Viewed from shaft end of pump								
SHAFT TYPE 1 - Parallel keyed 11 - Splined 86 - Heavy duty parallel keyed								
ROTATION D = Clockwise rotation. Y = Counterclockwise								
Viewed from shaft end of pump								

PORTING COMBINATION


A

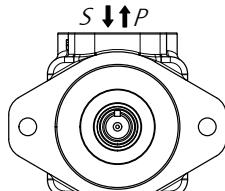


B

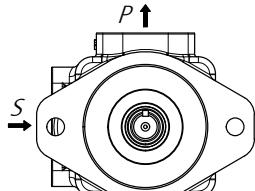

C

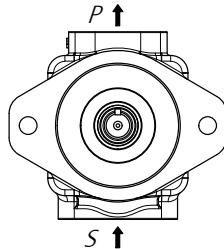

D

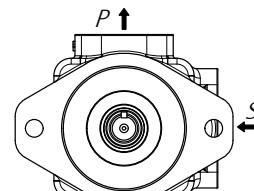

CHARACTERISTICS

TYPE	FLOW			SPEED(rpm)		PRESSURE (bar)		NOMINAL POWER	CONNECTION		WEIGHT
VICKERS	L @ 1000RPM	GAL. @ 1200RPM	REDUC-TION (1)	MIN	MAX	CONT	INTERMIT	(2)	INLET	OUTLET	KG
VQ4T VS4T	32	10	4,5	600	2500 1800 (VS)	175	210	6,9	Ø64	Ø25,4	19,5
	40	12	5,7					10,4			
	45	14						11,6			
	55	17	5,8					13,8			
	60	19						14,6			
	67	21	6					16,8			
	80	25	6,2					20,3			
VQ6T VS6T	66	21	8,6	600	2400 1800 (VS)	175	210	16,8	Ø76	Ø31,8	29,5
	81	25	9					20,3			
	97	30	10					24,3			
	112	35	11,4					27,4			
	121	38						29,3			
	142	45	13,1					33,3			
VQ7T VS7T	138	42	15	600	2200 1800 (VS)	155	175	32,3	Ø89	Ø38,1	38
	148	47	15,7					36,3			
	162	50	14,3					37,9			
	180	57	17,9					43,2			
	193	60	18,6					46,1			
	214	67	22					51,2			
	240	75	26					57,4			

(1) Delivery flow reduction in Ltrs./min. at 100 Bar. 22 cST of oil viscosity at operating temperature. To calculate the approximate delivery flow at a given pressure and speed, use the following formula with flow reduction and theoretical flow values shown in the chart. Flow reduction values are independent of shaft speed.

(2) Nominal Power in H.P. at 100 Bar and 1000 RPM (to convert into Kw multiply by 0.735). To obtain the real input power at different pressure and revolutions, use the formula as follows:

$$\text{Real input power} = \text{Input power} \times \frac{\text{R.P.M}}{1000} \times \frac{\text{Pressure (Bar)}}{1000}$$

REAR PUMP MOUNTING

The mounted pump to the V**T* should have the shaft shown below:

MODEL	MOUNTED PUMP SHAFT			
	DP SPLINED	TEETH	PRESS ANGLE	FLANGE
V**TA	16/32	9		SAE A
V**TB		13	30°	SAE B
V**TC	12/24	14		SAE C

TRANSMISSIBLE MAXIMUM TORQUE

The torque of the V**T plus the torque of the rear pump, in pressure, shall be equal to or less than the below torques:

SHAFT	Max. Torque Nm		
	V*4T	V*6T	V*7T
1	313	392	588
11		568	803
86	392	588	

MAXIMUM TORQUE OF THE MOUNTED REAR PUMP


The torque of the mounted pump to the V**T rear pump, in pressure, shall be equal to or less than the indicated torques on next page.

REAR FLANGE MOUNTING OF THE V**T* DIMENSIONS


DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

V*4TA, V*6TA & V*7TA


REAR FLANGE (CONNECTION)	MAX TORQUE Nm
A	130
B	315
C	400 (V*6TC) 700 (V*7TC)

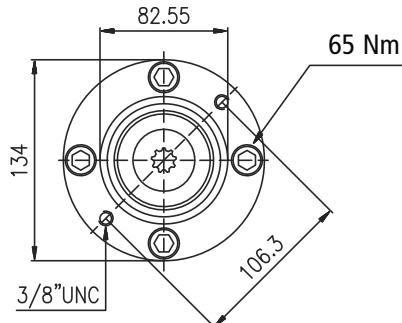

V*4TB, V*6TB & V*7TB

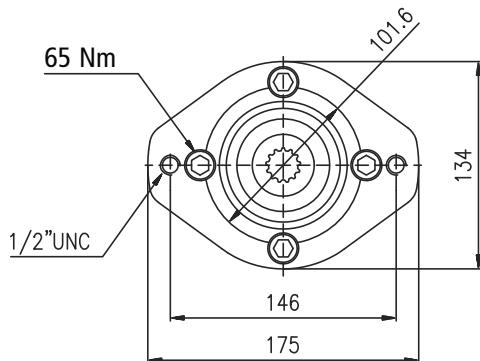


V*6TC & V*7TC

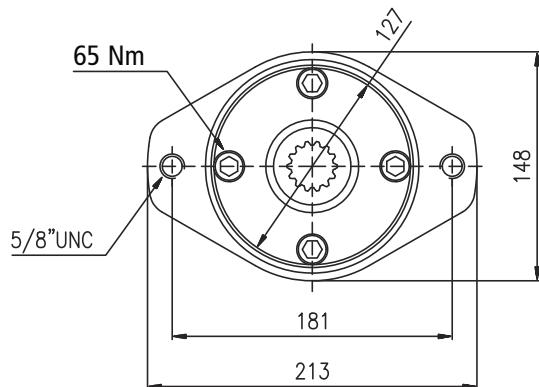


VS4T / VQ4T DIMENSIONS


DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

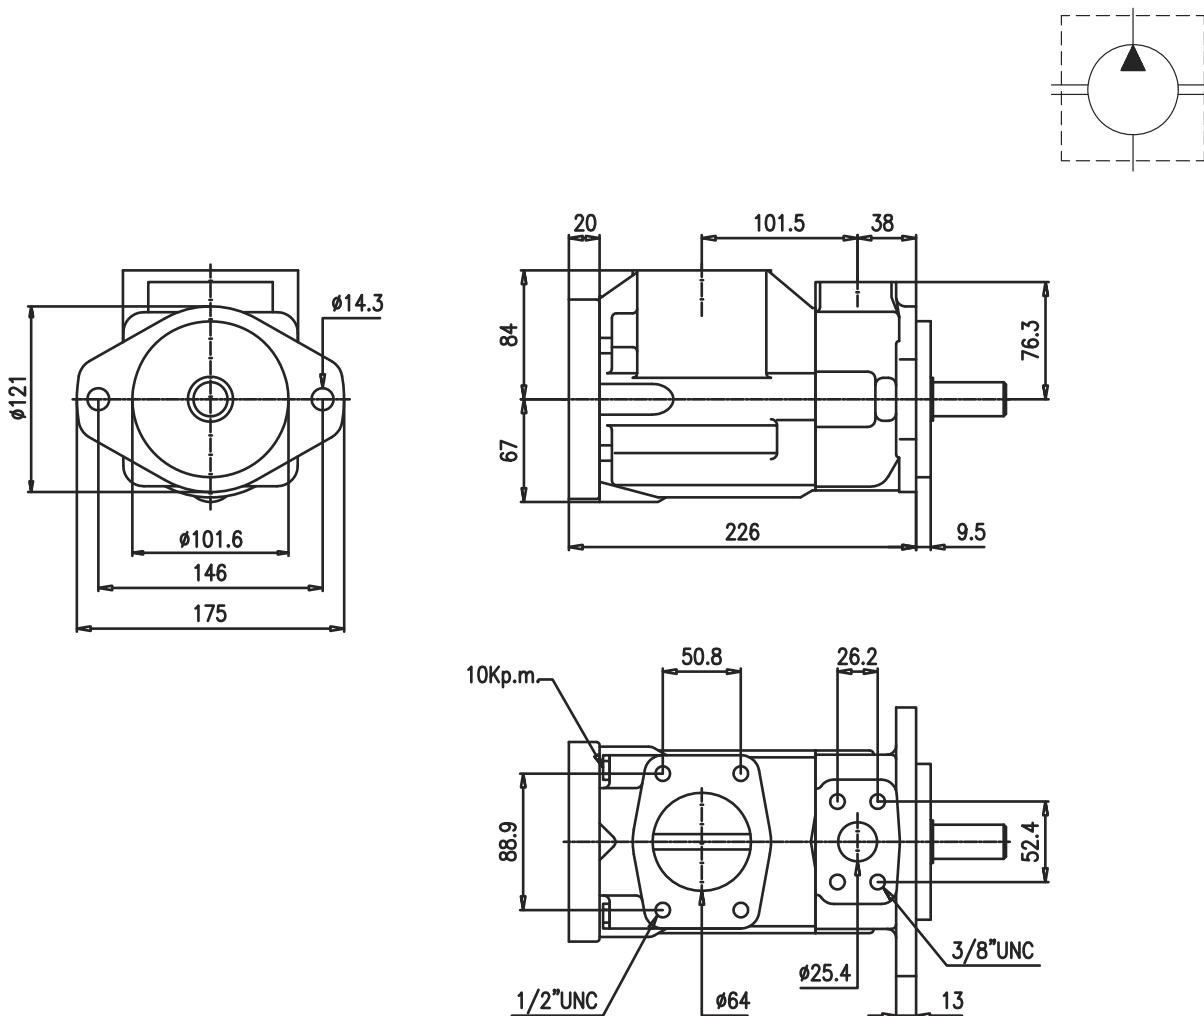


Nº1 Shaft

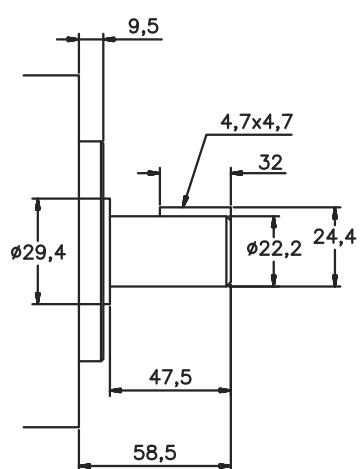

Nº11 Shaft

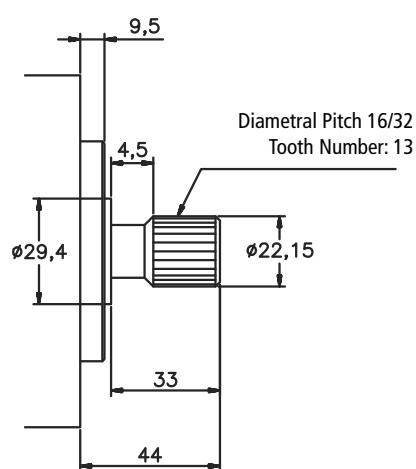

Nº86 Shaft



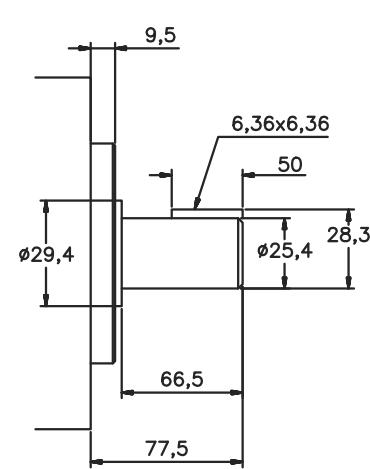


ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118


VS6T / VQ6T DIMENSIONS

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm


DIMENSIONS IN MILLIMETERS 1" = 25.4 mm

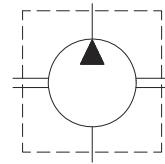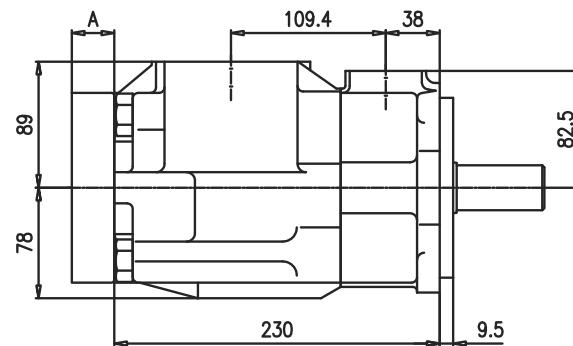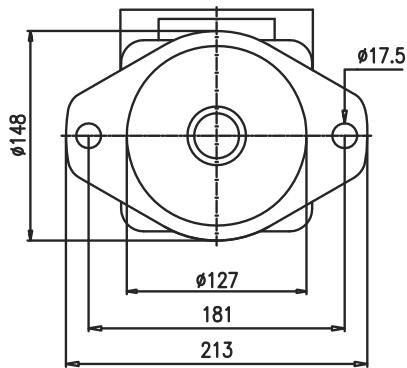


MODEL	A
V*6TA	20
V*6TB	30
V*6TC	38

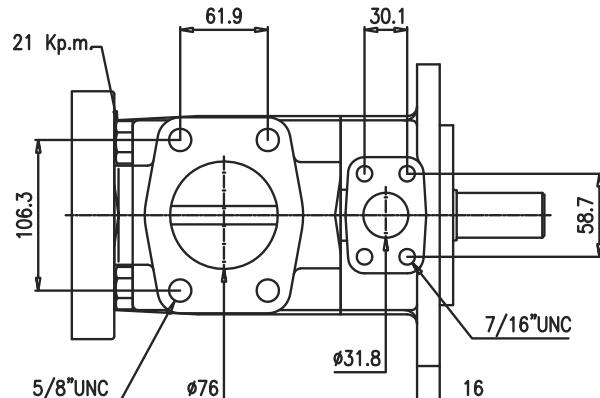

N°11 Shaft

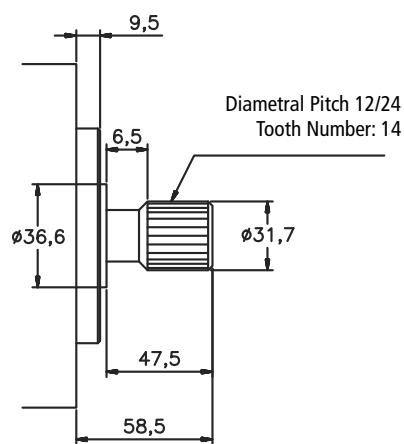



N°86 Shaft

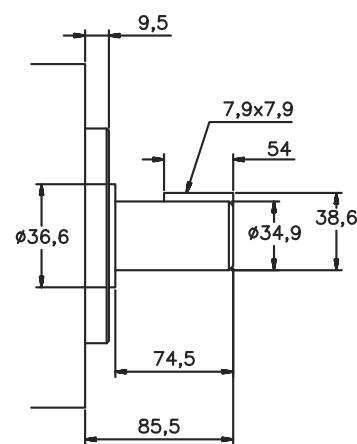

ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

VS7T / VQ7T DIMENSIONS

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

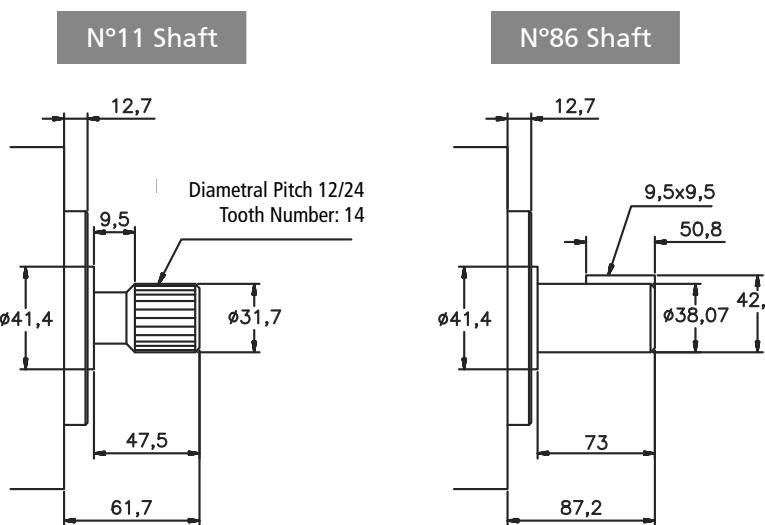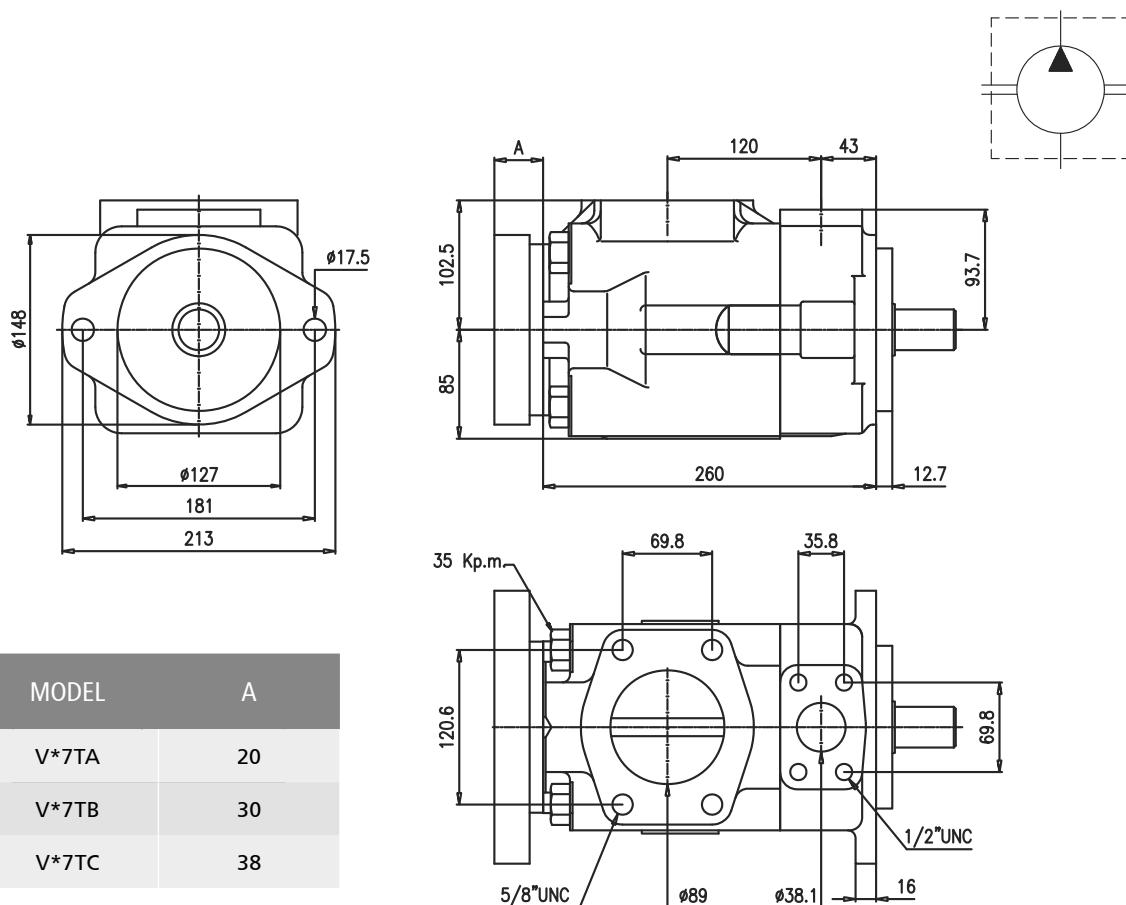

ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118



Bezares Group

DOUBLE VANE PUMPS

VQ, VS, DT6, DT67 & DT7

Double vane pumps

(See single pumps for displacement & power diagrams)

Pages 35, 37 and 39 for VQ & VS

Pages 42, 44 and 46 for DT6 & DT7

ORDERING CODE


F3	VS	43	21	8	D	86	A	A
F3 - Special seals for fire-resistant fluids. Omit if not required								
VC = 12 Vane pump Medium pressure application								
VS = 12 Vane pump Except the cover end cartridge of the VS*3 pump, industrial uses (very quiet), UNC threads.								
VQ = 10 Vanes & bronze plates Mobile use, UNC threads								
PUMP MODEL 2010,2020,43,63,64,73,74, 76								
PUMP FLOW AT SHAFT SIDE US Gallons per minute @1200 rpm and 7 Bar (See flow chart)								
	PUMP FLOW AT COVER SIDE US Gallons per minute @1200 rpm and 7 Bar (See flow chart)							

REAR FLANGE POSITION
A: 45° Clockwise
B: 135° Clockwise
C: 135° Counterclockwise
D: 45° Counterclockwise
Viewed from shaft end of pump

PORTING COMBINATION
A: Outlet in line with inlet.
B: 90° Clockwise from inlet.
C: 180° From inlet.
D: 90° Counterclockwise from inlet.
Viewed from shaft end of pump

SHAFT TYPE
1 - Parallel keyed
11 - Splined
86 - Heavy duty parallel keyed

ROTATION
D = Clockwise rotation.
Y = Counterclockwise
Viewed from shaft end of pump

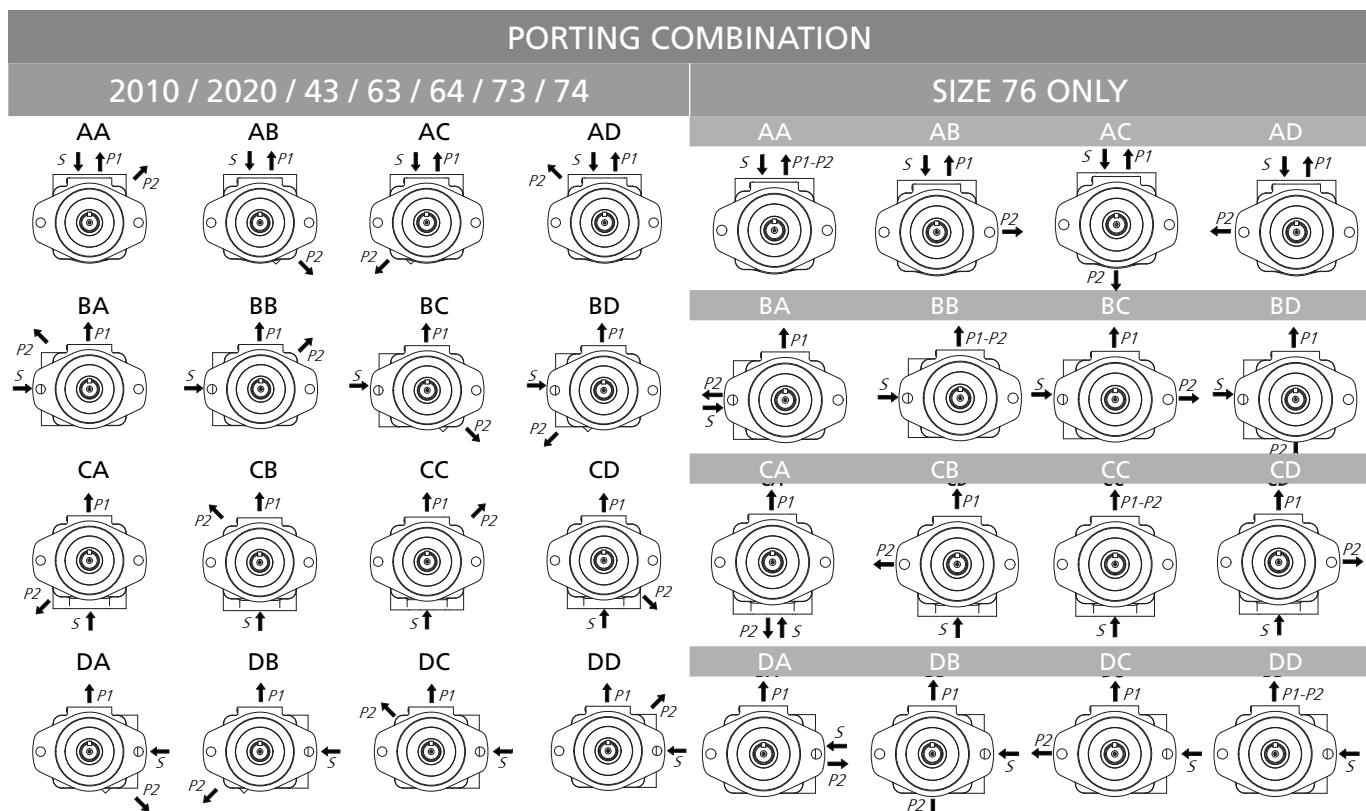

CHARACTERISTICS

TYPE	SHAFT END								COVER END								WEIGHT
	FLOW			SPEED (rpm)	PRESSURE (bar)		NOMI- NAL POWER	FLOW			SPEED (rpm)	PRESSURE (bar)		NOMI- NAL POWER			
MODEL	L @ 1000RPM	GAL. @ 1200RPM	Reduc. (1)	MAX	CONT	INTERMIT	(2)	L @ 1000RPM	GAL. @ 1200RPM	Reduc. (1)	MAX	CONT	INTERMIT	(2)	KG		
VC2010	16	5	2	3400	155	180	3,2	3000	155	180	2400	140	3,2	13,6			
	20	6	2,84	3000			3,9									0,7	
	23	7	4	3000			4,4									1,4	
	27	8	4,2	2800			5,1									2,1	
	30	9	4,5	2800			5,6									2,7	
	34	10	4,8	2500			6,1									3,2	
	36	11	4,8	2500			6,5									3,7	
	39	12	5,4	2400			7,5									4,2	
	42	13	6	2400			8,1										
	16	5	2	3400			3,2										
VC2020	20	6	2,84	3000	155	180	3,9	3000	155	180	2400	140	3,2	15,9			
	23	7	4	3000			4,4									3,9	
	27	8	4,2	2800			5,1									4,4	
	30	9	4,5	2800			5,6									5,1	
	34	10	4,8	2500			6,1									5,6	
	36	11	4,8	2500			6,5									6,5	
	39	12	5,4	2400			7,5									7,5	
	42	13	6	2400			8,1									8,1	
	16	5	2	3400			3,2										
	20	6	2,84	3000			3,9										
VQ43 VS43	40	12	5,7	2500	175	210	10,4	2500	175	210	2400	140	1,9	21			
	45	14	5,7	1800 (VS)			11,6									4	
	55	17	5,8	1800 (VS)			13,8									6,6	
	60	19	6	1500			15,2									6,9	
	67	21	6	1500			16,8									7,3	
	80	25	6,2	1500			20,3									7,4	
	66	21	8,6	2500			16,8									7,6	
	81	25	9	2500			20,3									1,9	
	97	30	10	1800 (VS)			24,3									4	
	112	35	11,4	1500			27,3									6,6	
VQ63 VS63	121	38	11,4	1500			29,3									6,9	
	142	45	13,1	1500			33,3									7,3	
	66	21	8,6	2500			32,3									7,4	
	81	25	9	2500			36,3									7,6	
	97	30	10	1800 (VS)			43,2									13,8	
	112	35	11,4	1500			46,1									15,2	
	121	38	11,4	1500			51,2									16,8	
	142	45	13,1	1500			57,4									20,3	
	138	42	15	2200	155	175	32,3	2500 (VS)	175	210	2400	140	1,9	46			
	148	45	15,7	2200			36,3									4	
	162	50	14,3	1800 (VS)			37,9									6,6	
	180	57	17,9	1800 (VS)			43,2									6,9	
	193	60	18,6	1800 (VS)			46,1									7,3	
	214	67	22	1500			51,2									7,4	
	240	75	26	1500			57,4									7,6	
	138	42	15	2200			32,3									6,9	
	148	45	15,7	1800 (VS)			36,3									10,4	
	162	50	14,3	1500			37,9									11,6	
VQ74 VS74	180	57	17,9	1500			43,2									13,8	
	193	60	18,6	1500			46,1									15,2	
	214	67	22	1500			51,2									16,8	
	240	75	26	1500			57,4									20,3	
	138	42	15	2200			32,3									16,8	
	148	45	15,7	1800 (VS)			36,3									20,3	
	162	50	14,3	1500			37,9									24,3	
	180	57	17,9	1500			43,2									27,4	
	193	60	18,6	1500			46,1									29,3	
	214	67	22	1500			51,2									33,3	

(1) Delivery flow reduction in Ltrs./min. at 100 Bar. 22 cST of oil viscosity at operating temperature. To calculate the approximate delivery flow at a given pressure and speed, use the following formula with flow reduction and theoretical flow values shown in the chart. Flow reduction values are independent of shaft speed.

$$\text{Approx. output flow (Ltrs./min.)} = \text{Theoretical flow} \times \frac{\text{R.P.M}}{1000} - \text{Reduction} \times \frac{\text{Pressure (Bar)}}{1000}$$






(2) Nominal Power in H.P. at 100 Bar and 1000 RPM (to convert into Kw multiply by 0.735). To obtain the real input power at different pressure and revolutions, use the formula as follows:

$$\text{Real input power} = \text{Input power} \times \frac{\text{R.P.M}}{1000} \times \frac{\text{Pressure (Bar)}}{1000}$$

(3) See options on dimension pages.

VC2010 DIMENSIONS

*mm (in)

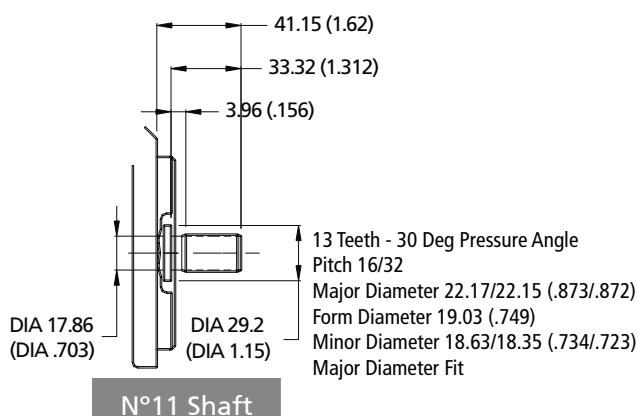
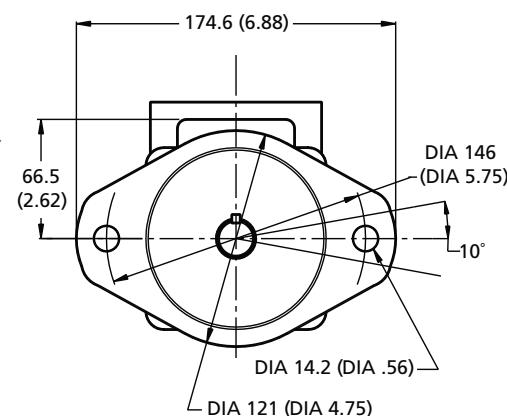
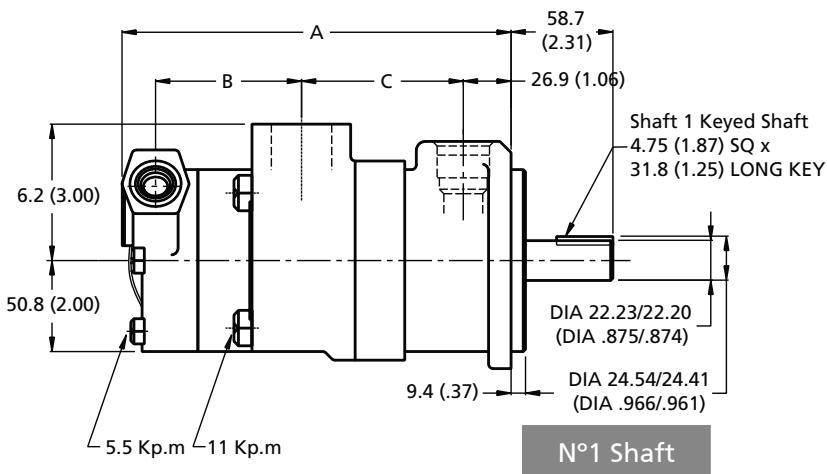
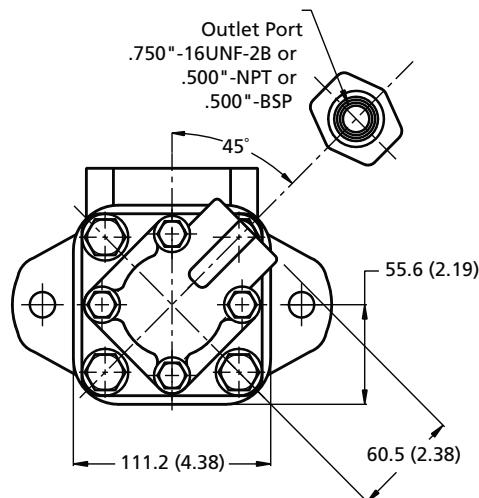
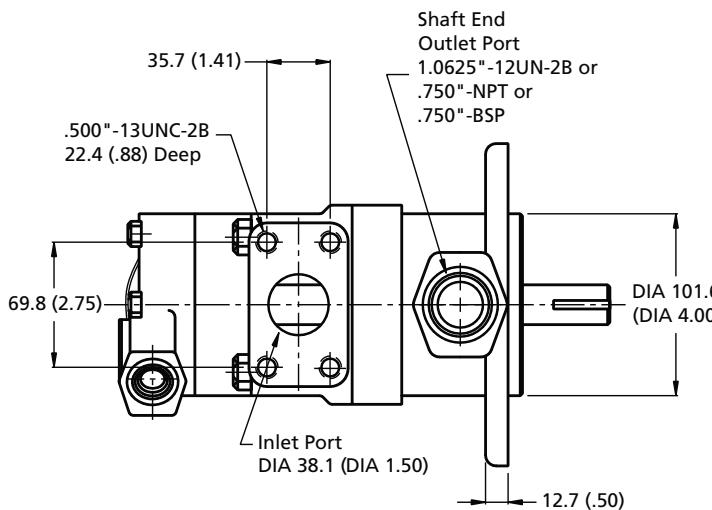


Splined Shaft

SHAFT END	COVER END	Delivery @ 1200 RPM & 7 Bar (100 psi)			DIMENSION
		A	B	C	
5, 6, 7, 8, 9	1, 2, 3, 4, 5, 6, 7	213,1 8.39	75,9 2.99	219,5 8.64	86,4 3.40
		219,5 8.64	82,3 3.24	224,5 8.84	87,4 3.44
		224,5 8.84	87,4 3.44		
10, 11	1, 2, 3, 4, 5, 6, 7	218,2 8.59	75,9 2.99	224,5 8.84	91,2 3.59
		224,5 8.84	82,3 3.24	229,6 9.04	87,4 3.44
		229,6 9.04	87,4 3.44		
12, 13	1, 2, 3, 4, 5, 6, 7	221,7 8.73	75,9 2.99	227,8 8.97	94,7 3.73
		227,8 8.97	82,3 3.24	232,9 9.17	87,4 3.44
		232,9 9.17	87,4 3.44		

VC2020 DIMENSIONS

*mm (in)

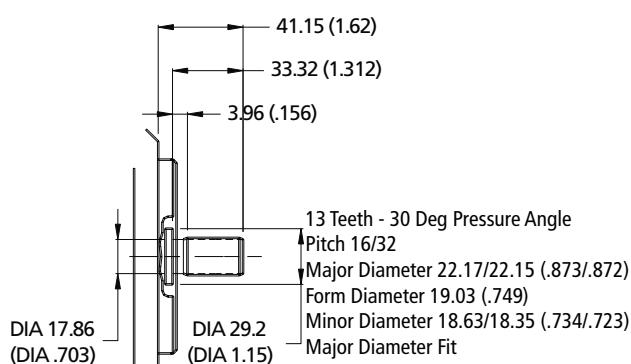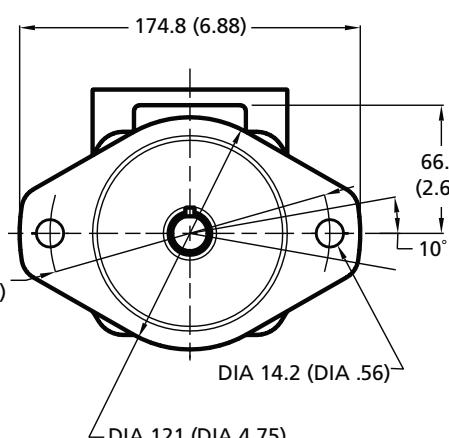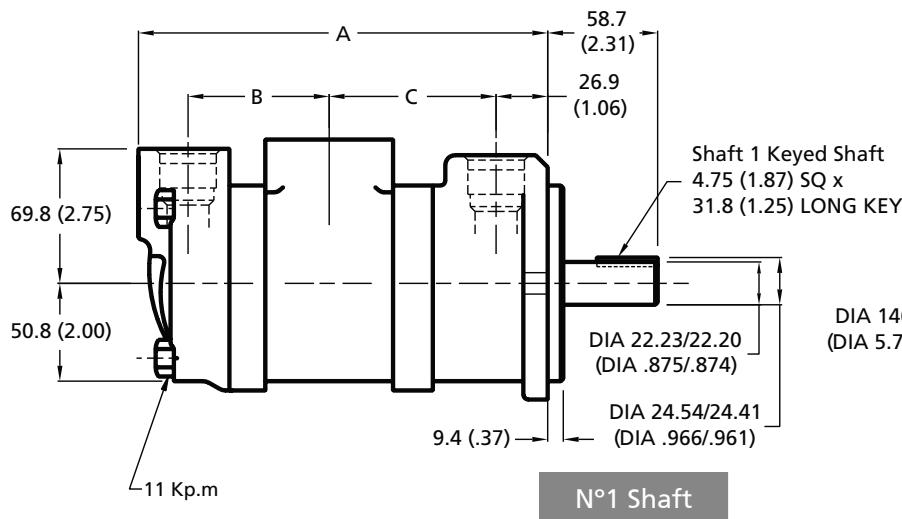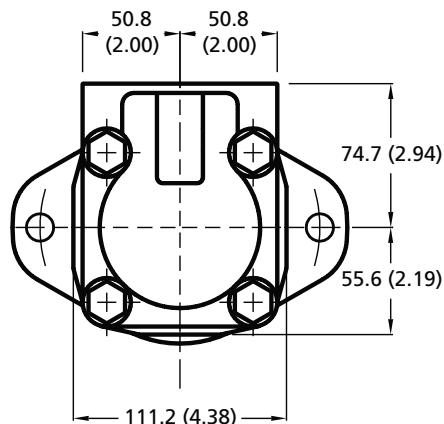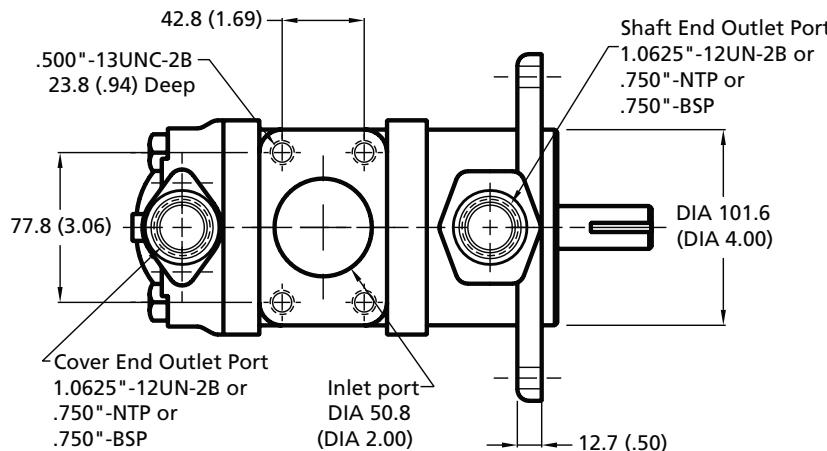

N°11 Shaft

Splined Shaft




SHAFT END	COVER END	DIMENSION		
		A	B	C
5, 6, 7, 8, 9	5, 6, 7, 8, 9	213,6 8.41 220 8.66	73,7 2.9 80 3.15	87,1 3.43
10, 11	5, 6, 7, 8, 9, 10, 11	218,7 8.61 225 8.86	73,7 2.9 80 3.15	92,2 3.63
12, 13	5, 6, 7, 8, 9, 11	229,9 9.05 222,3 8.75	85,1 3.35 73,7 2.9	95,5 3.76
		228,3 8.99 233,4 9.19	80 3.15 85,1 3.35	

VS-43 / VQ-43 DIMENSIONS



SHAFT END FLOW								SPEED(rpm)		PRESSURE (bar)		CONNECTION	
Lts/min.at 1000 rpm	32	40	45	55	60	67	80	Mín.	Máx.*	Contin.*	Intermit.*	Inlet	Outlet
Gal/min.at 1200 rpm	10	12	14	17	19	21	25	600	2500	175	210	Ø2.5"	Ø1"
COVER END FLOW								SPEED(rpm)		PRESSURE (bar)		CONNECTION	
Lts/min.at 1000 rpm	8	18	27	29	36	39	46	Mín.	Máx.*	Contin.*	Intermit.*	Inlet	Outlet
Gal/min.at 1200 rpm	2	5	8	9	11	12	14	600	2500	175	210	Ø2.5"	Ø3/4"

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm


* See page 27 for further information about speed & pressure

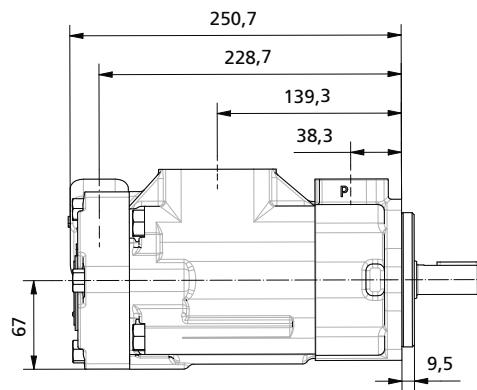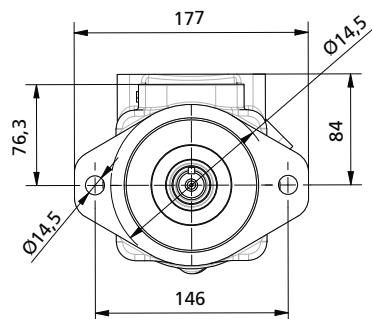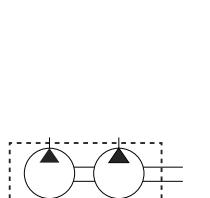


COVER DETAIL

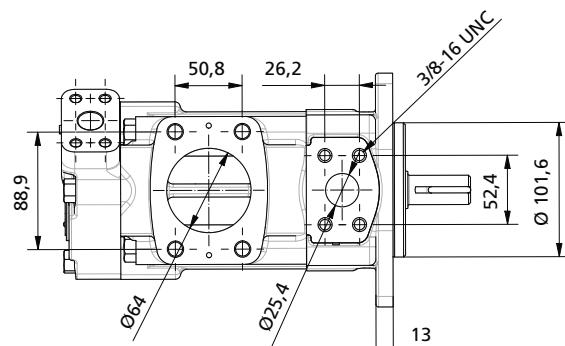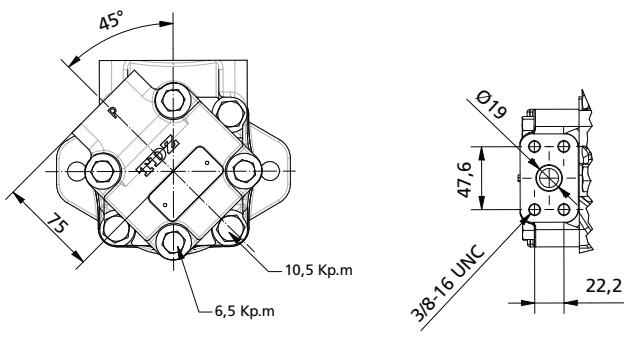


Nº1 Shaft

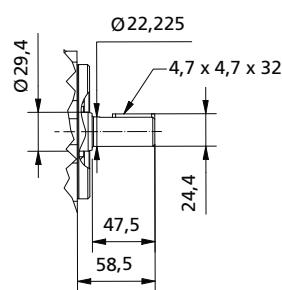

Nº11 Shaft

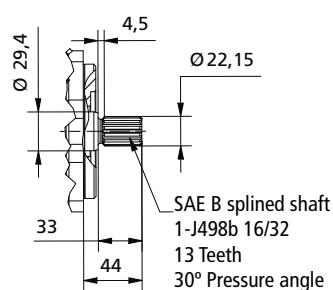

Nº86 Shaft

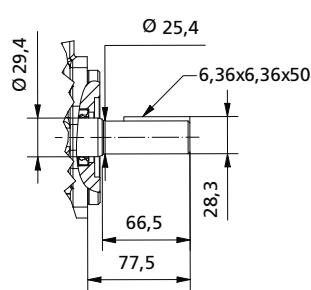


ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

VS-63 / VQ-63 DIMENSIONS


SHAFT END FLOW							SPEED(rpm)		PRESSURE (bar)		CONNECTION		
Lts/min.at 1000 rpm	66	81	97	112	121	142*	Mín.	Máx.*	Contin.*	Intermit.*	Inlet	Outlet	
Gal/min.at 1200 rpm	21	25	30	35	38	45*	600	2400	175	210	Ø3"	Ø1.25"	
COVER END FLOW							SPEED(rpm)		PRESSURE (bar)		CONNECTION		
Lts/min.at 1000 rpm	8	18	27	29	36	39	46	Mín.	Máx.*	Contin.*	Intermit.*	Inlet	Outlet
Gal/min.at 1200 rpm	2	5	8	9	11	12	14	600	2500	175	210	Ø3"	Ø3/4"

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm


* See page 27 for further information about speed & pressure

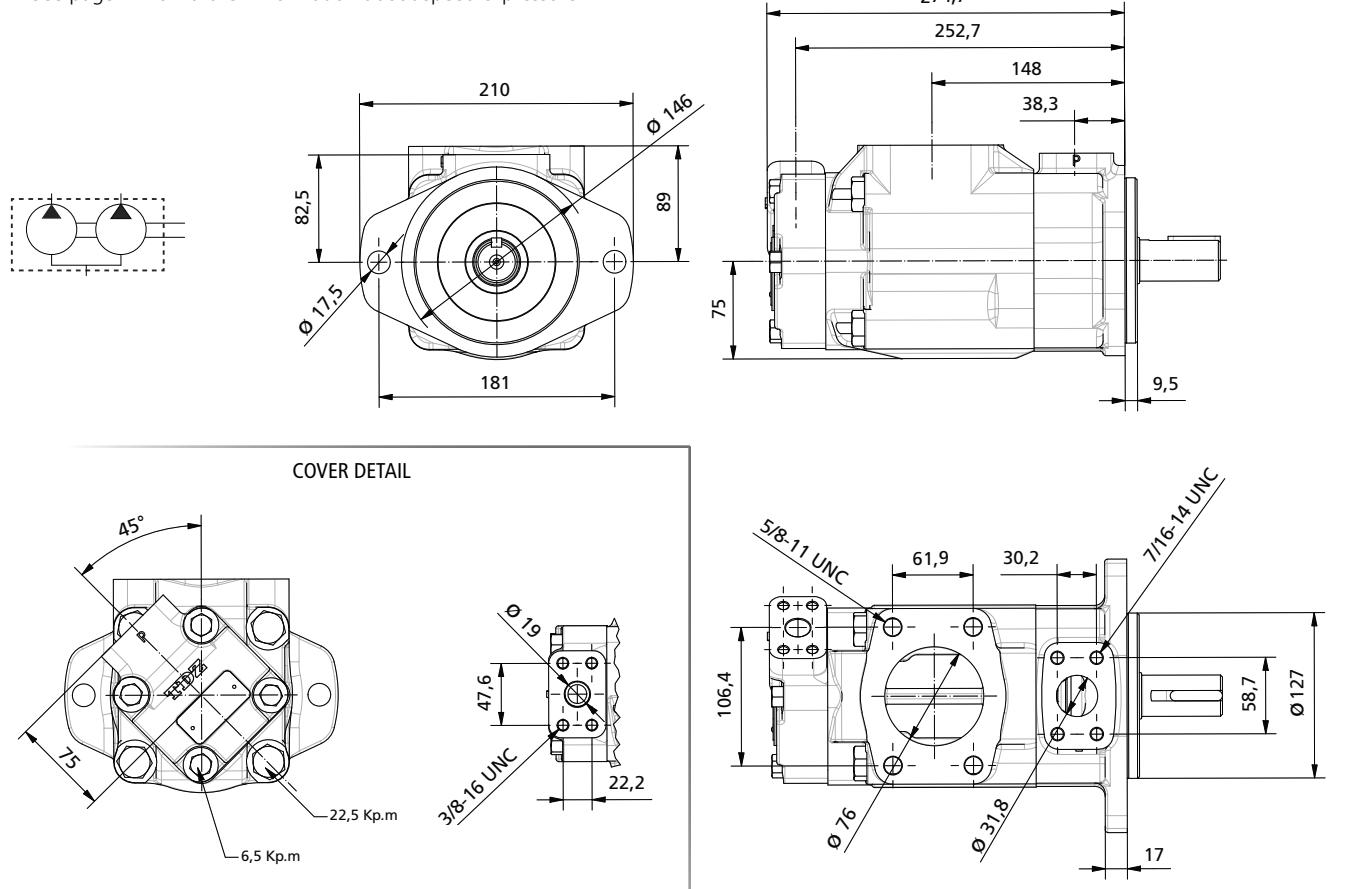


Nº1 Shaft

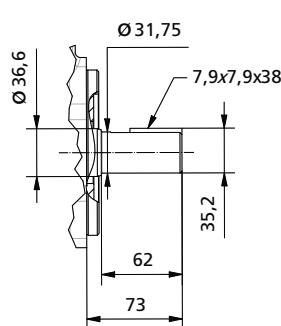

Nº11 Shaft

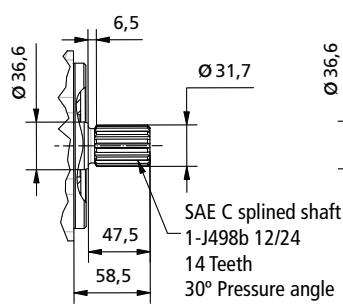

Nº86 Shaft

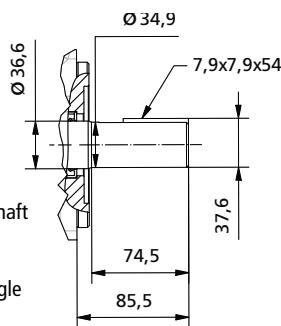






ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

VS-64 / VQ-64 DIMENSIONS


SHAFT END FLOW							SPEED(rpm)		PRESSURE (bar)		CONNECTION		
Lts/min.at 1000 rpm	66	81	97	112	121	142*	Mín.	Máx.*	Contin.*	Intermit.*	Inlet	Outlet	
Gal/min.at 1200 rpm	21	25	30	35	38	45*	600	2400	175	210	Ø3"	Ø1.25"	
COVER END FLOW							SPEED(rpm)		PRESSURE (bar)		CONNECTION		
Lts/min.at 1000 rpm	32	40	45	55	60	67	80	Mín.	Máx.*	Contin.*	Intermit.*	Inlet	Outlet
Gal/min.at 1200 rpm	10	12	14	17	19	21	25	600	2500	175	210	Ø3"	Ø1"

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm


* See page 27 for further information about speed & pressure

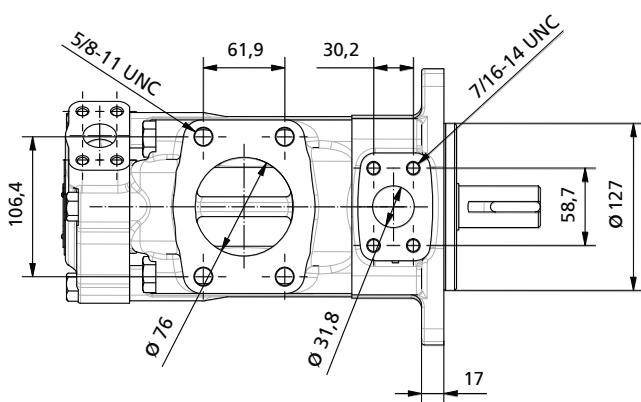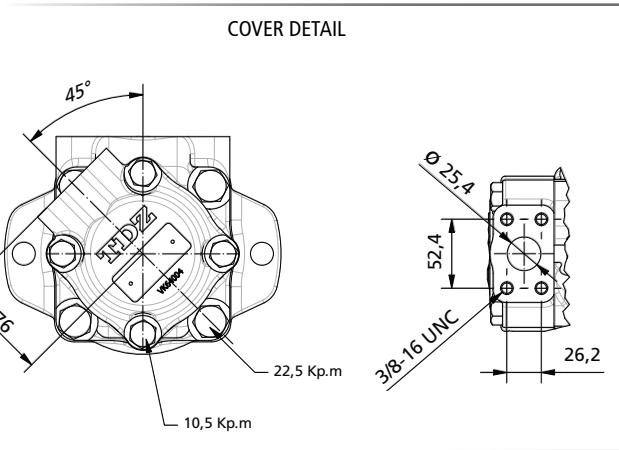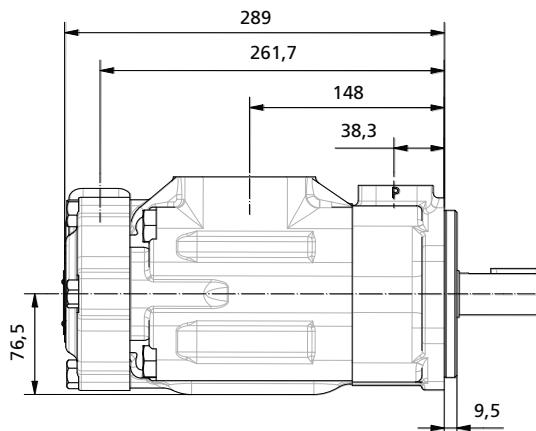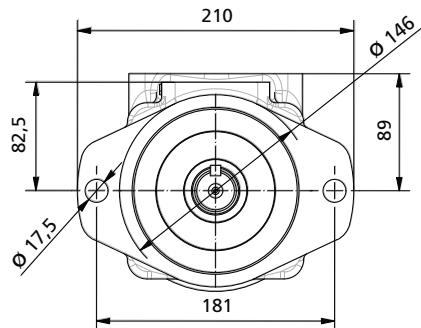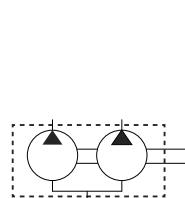


Nº1 Shaft

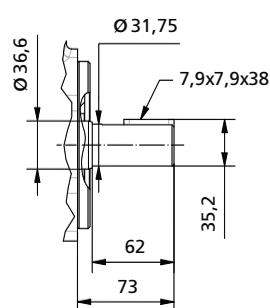

Nº11 Shaft

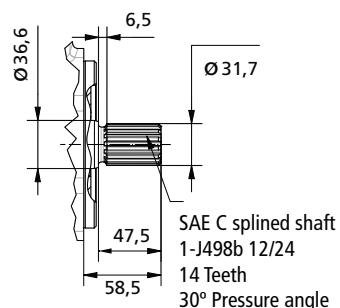

Nº86 Shaft

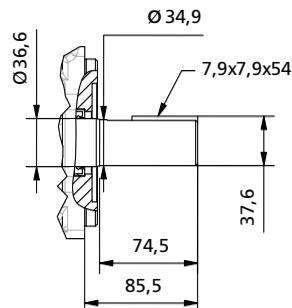



ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

VS-73 / VQ-73 DIMENSIONS

SHAFT END FLOW							SPEED(rpm)		PRESSURE (bar)		CONNECTION		
Lts/min.at 1000 rpm	138	148	162	180	193	214	240	Mín.	Máx.*	Contin.*	Intermit.*	Inlet	Outlet
Gal/min.at 1200 rpm	42	45	50	57	60	67	75	600	2200	155	175	Ø3.5"	Ø1.5"
COVER END FLOW							SPEED(rpm)		PRESSURE (bar)		CONNECTION		
Lts/min.at 1000 rpm	8	18	27	29	36	39	46	Mín.	Máx.*	Contin.*	Intermit.*	Inlet	Outlet
Gal/min.at 1200 rpm	2	5	8	9	11	12	14	600	2500	175	210	Ø3.5"	Ø3/4"

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

* See page 27 for further information about speed & pressure

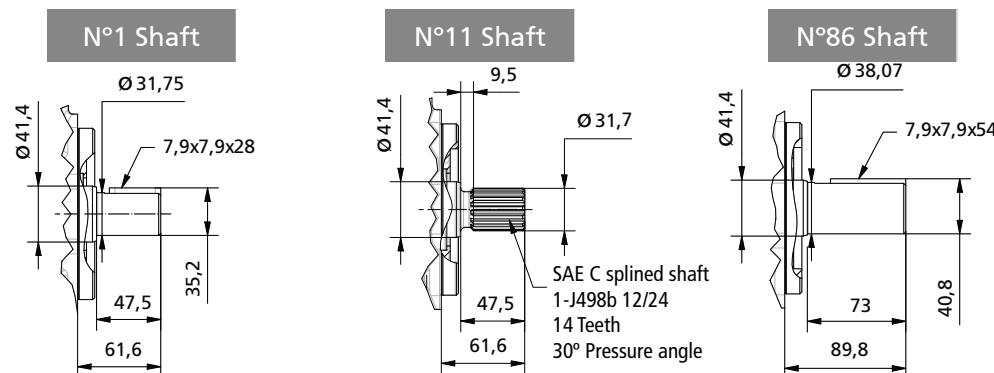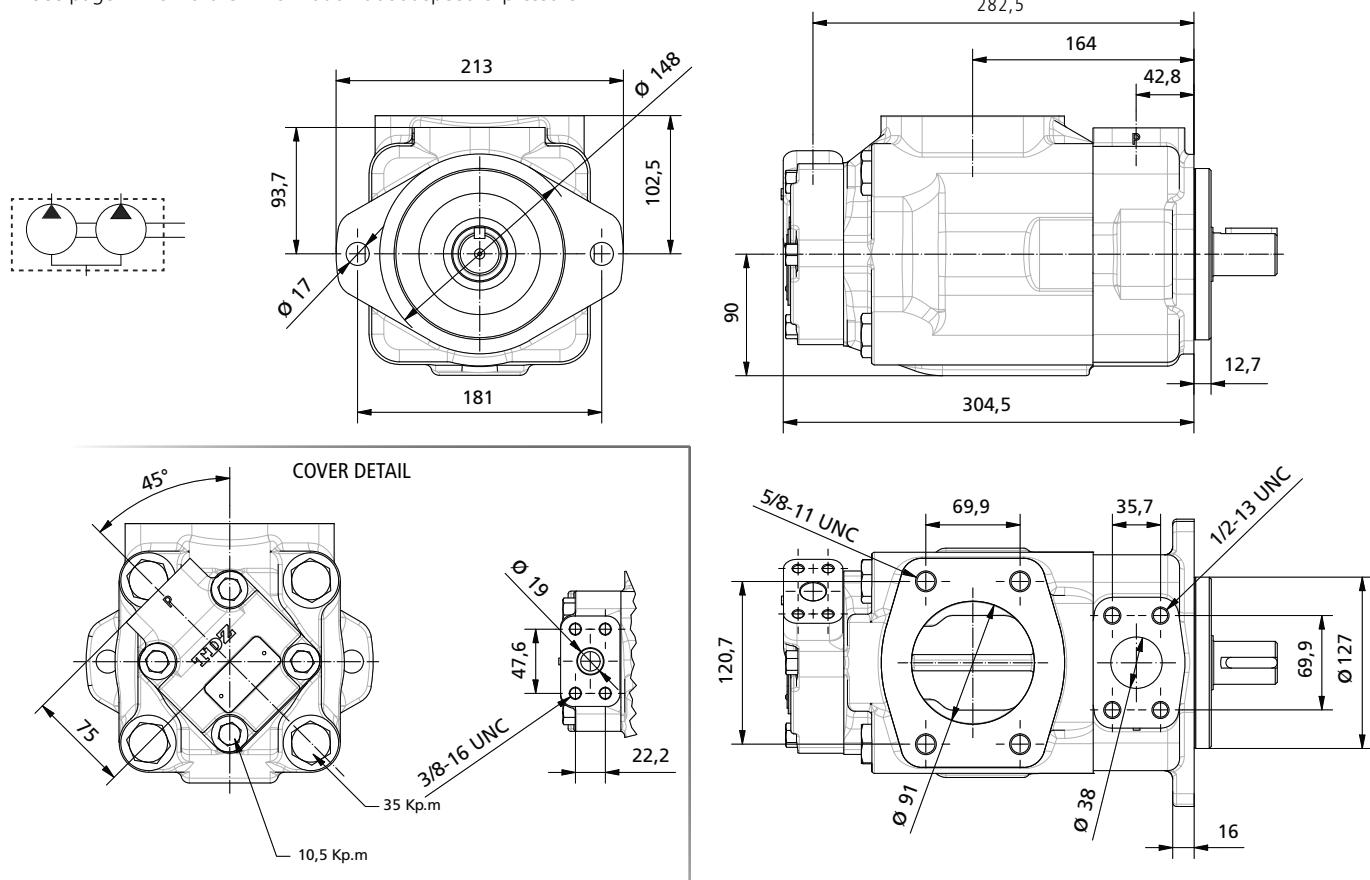


ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

VS-74 / VQ-74 DIMENSIONS


SHAFT END FLOW							SPEED(rpm)		PRESSURE (bar)		CONNECTION		
Lts/min.at 1000 rpm	138	148	162	180	193	214	240	Mín.	Máx.*	Contin.*	Intermit.*	Inlet	Outlet
Gal/min.at 1200 rpm	42	45	50	57	60	67	75	600	2200	155	175	Ø3.5"	Ø1.5"
COVER END FLOW							SPEED(rpm)		PRESSURE (bar)		CONNECTION		
Lts/min.at 1000 rpm	32	40	45	55	60	67	80	Mín.	Máx.*	Contin.*	Intermit.*	Inlet	Outlet
Gal/min.at 1200 rpm	10	12	14	17	19	21	25	600	2500	175	210	Ø3.5"	Ø1"

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm


* See page 27 for further information about speed & pressure

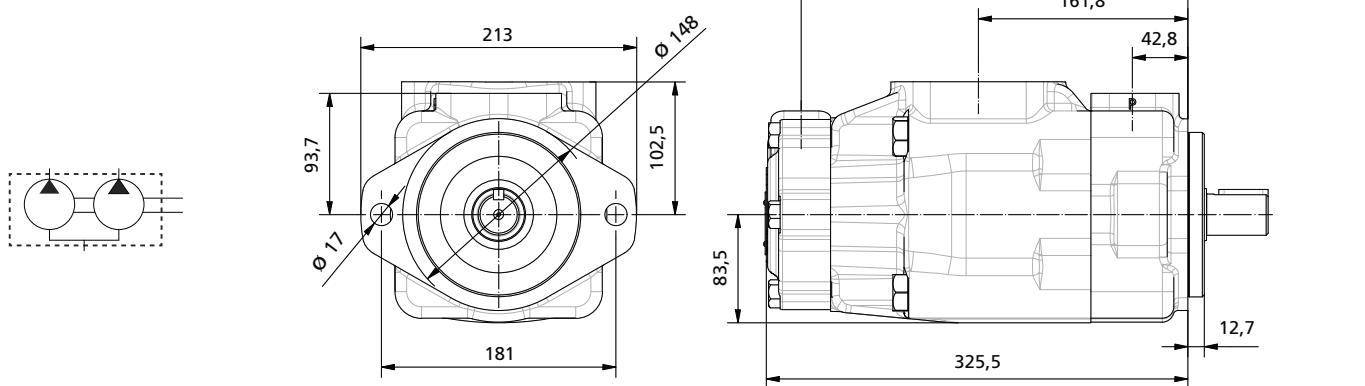


COVER DETAIL

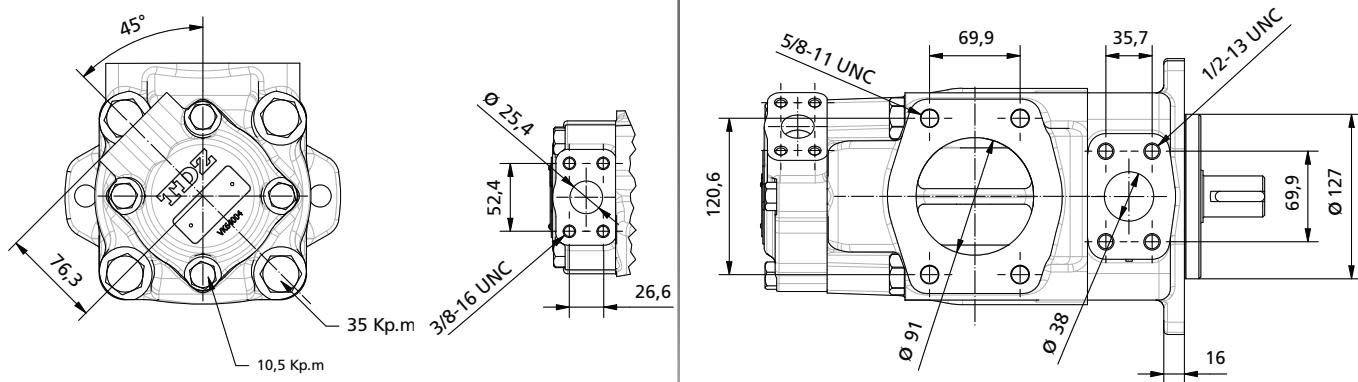


Nº1 Shaft

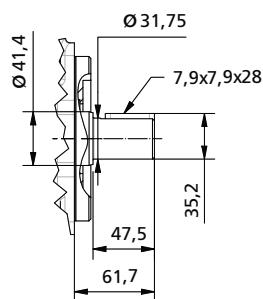

Nº11 Shaft

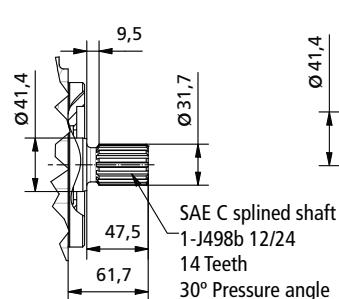

Nº86 Shaft

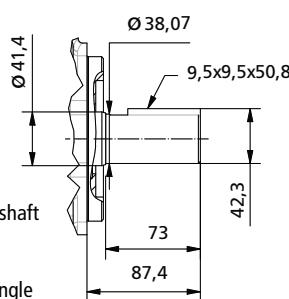



ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

VS-76 / VQ-76 DIMENSIONS


SHAFT END FLOW								SPEED(rpm)		PRESSURE (bar)		CONNECTION	
Lts/min.at 1000 rpm	138	148	162	180	193	214	240	Mín.	Máx.*	Contin.*	Intermit.*	Inlet	Outlet
Gal/min.at 1200 rpm	42	45	50	57	60	67	75	600	2200	155	175	Ø4"	Ø1.5"
COVER END FLOW								SPEED(rpm)		PRESSURE (bar)		CONNECTION	
Lts/min.at 1000 rpm	66	81	97	112	121	142*		Mín.	Máx.*	Contin.*	Intermit.*	Inlet	Outlet
Gal/min.at 1200 rpm	21	25	30	35	38	45*		600	2400	175	210	Ø4"	Ø1.25"

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm


* See page 27 for further information about speed & pressure

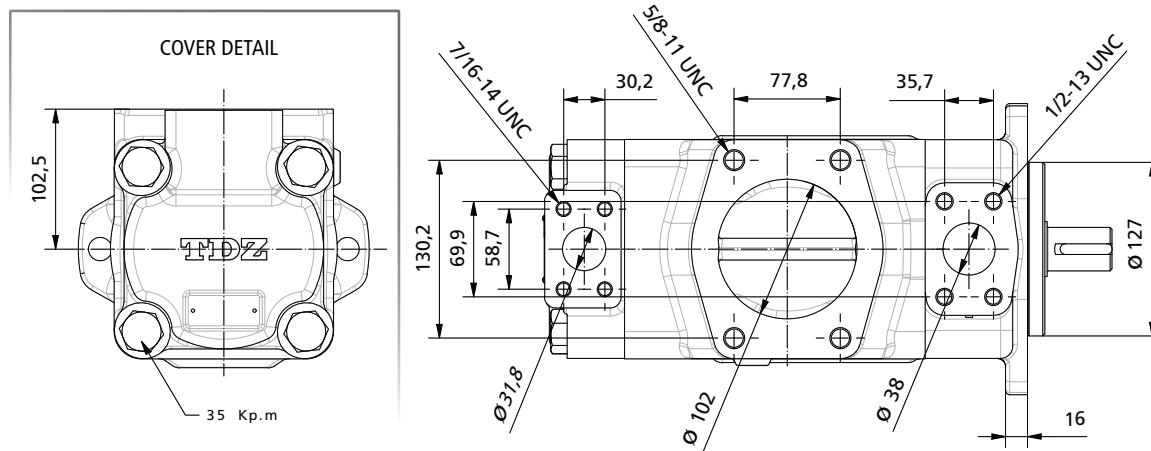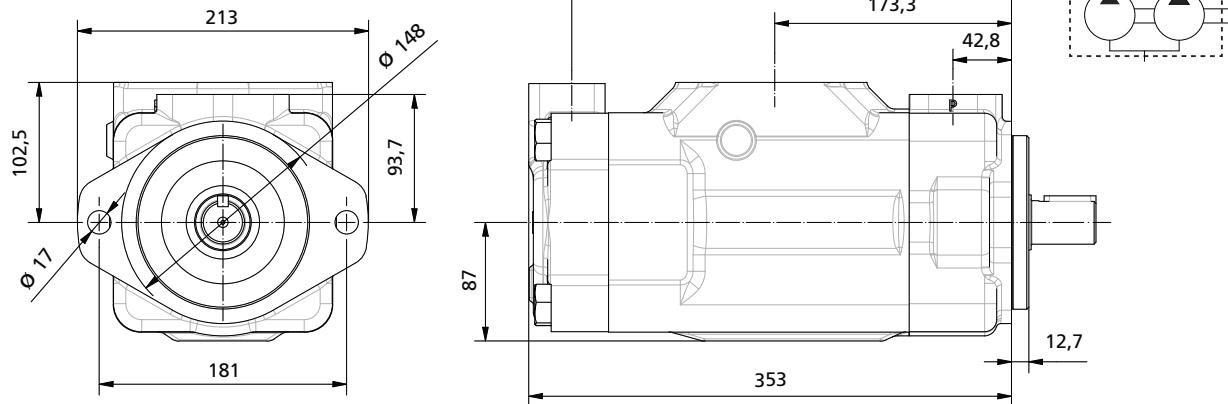


Nº1 Shaft

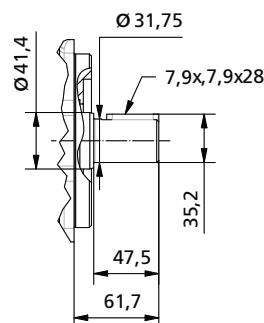

Nº11 Shaft

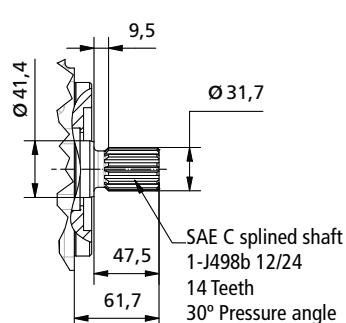


Nº86 Shaft

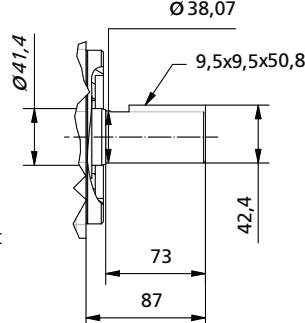


ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

ORDERING CODE

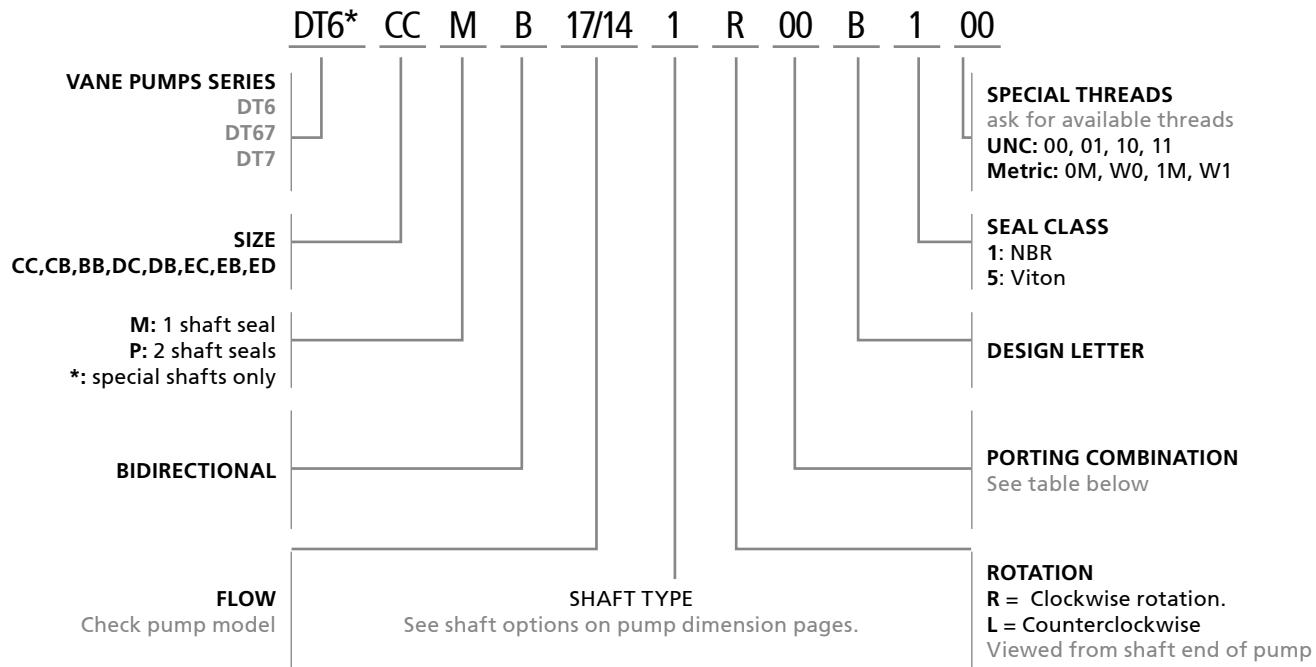

PORTING COMBINATION

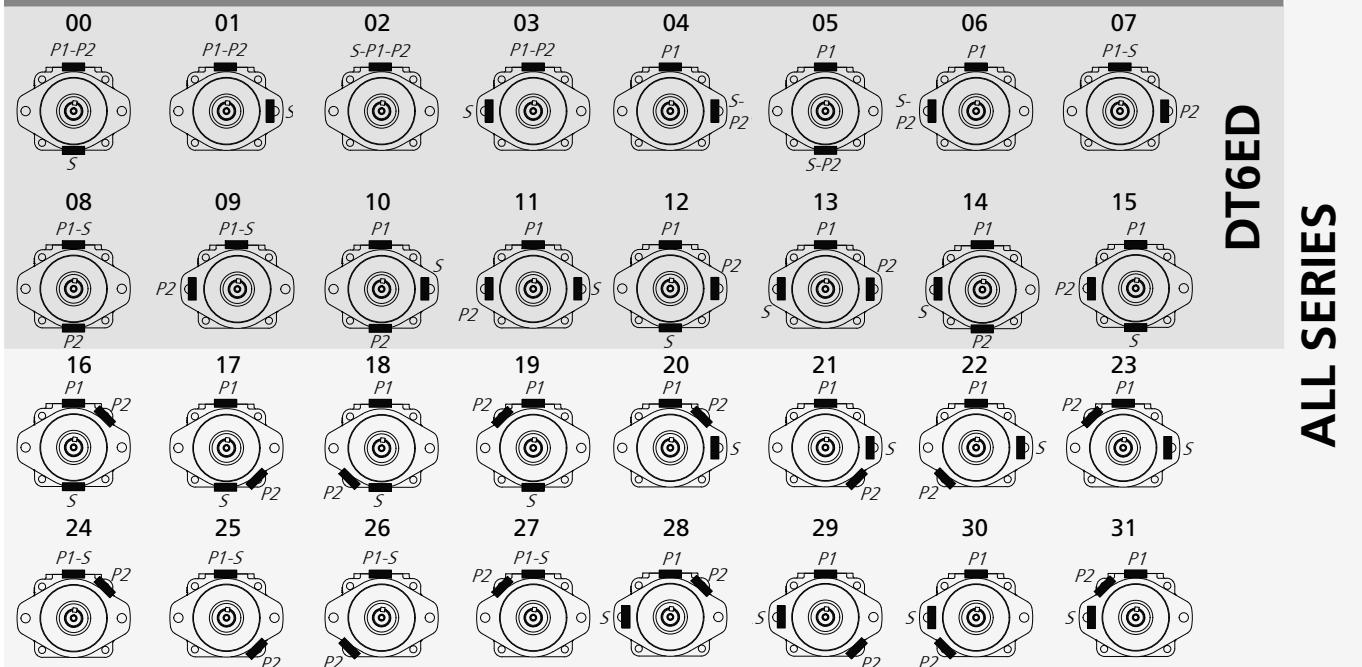

GENERAL CHARACTERISTICS

TYPE	P1*				P2*				SPEED	FRONT FLANGE	WEIGHT	SAE 4 HOLES FLANGE			
	FLOW GAL./min @ 1200 RPM		MAX PRESS. BAR)	NOMINAL POWER	FLOW GAL./min @ 1200 RPM		MAX PRESS. BAR)	NOMINAL POWER				P1	P2		
DENISON	DT6CC/M	3-31	11-100	275	2,4-22,2	3-31	11-100	275	2,4-22,2	500-2800	SAE B	26	2 ½" 3"	1" ¾"	
	DT67CB/M	3-31	11-100	275	2,4-22,2	2-15	6-50	320	1,3-11,1						
	DT67BB/M	2-15	6-50	320	1,3-11,1	2-15	6-50	320	1,3-11,1						
	DT6DC/M	14-61	48-191	240	10,7-42,4	3-31	11-100	275	2,4-22,2						
	DT67DB/M	14-61	48-191	240	10,7-42,4	2-15	6-50	320	1,3-11,1	500-2200	SAE C	37	3" 1 ¼"	1 ¼"	
	DT7DB/M	14-61	44-191	300	9,8-42,4	2-15	6-50	320	1,3-11,1						
	DT6EC/M	42-85	132-270	240	29,3-60	3-31	11-100	275	2,4-22,2				55	3 ½"	1 ½"
	DT67EB/M	42-85	132-270	240	29,3-60	2-15	6-50	320	1,3-11,1						
	DT6ED/M	42-85	132-270	240	29,3-60	14-61	48-191	240	10,7-42,4				66	4"	1 ¼"
	DT67ED/M	42-85	132-270	240	29,3-60	14-61	44-191	300	9,8-42,4						

* See page 41 for further information about speed & pressure

EXCEPTIONS TABLE															6E		
MODEL FLOW		7B				6C				6D				7D			
MAX INTERMITENT PRESSURE (BAR)	RPM MAX	011	012	014	015	025	028	031	035	038	042	042	045	050	061	085	
300	280	-	210	280	260	-	210	120	90								
3000	2500	2800	2500	2200	2000												

Above mentioned values of maximum speed and maximum pressure are based on use of antiwear oil only.
 Please contact Bezares SA for particular values when different fluids are used, (synthetic fluids, water in oil emulsions, water glycol, etcetera)

DT6CC / DT67CB / DT67BB OPERATING CHARACTERISTICS

T6C SHAFT END FLOW														SPEED(rpm)		PRESSURE (bar)	
Lts/min.at 1000 rpm	11	17	21	26	34	37	46	58	64	70	79	89	100	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at1200 rpm	3	5	6	8	10	12	14	17	20	22	25	28	31	500	2800	240	275

T7BS SHAFT END FLOW														SPEED(rpm)		PRESSURE (bar)	
Lts/min.at 1000 rpm	6	10	13	16	20	22	25	28	32	35	41	45	50	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at1200 rpm	2	3	4	5	6	7	8	9	10	11	12	14	15	500	3600	290	320

T6C COVER END FLOW														SPEED(rpm)		PRESSURE (bar)	
Lts/min.at 1000 rpm	11	17	21	26	34	37	46	58	64	70	79	89	100	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at1200 rpm	3	5	6	8	10	12	14	17	20	22	25	28	31	500	2800	240	275

T7BS COVER END FLOW														SPEED(rpm)		PRESSURE (bar)	
Lts/min.at 1000 rpm	6	10	13	16	20	22	25	28	32	35	41	45	50	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at1200 rpm	2	3	4	5	6	7	8	9	10	11	12	14	15	500	3600	290	320

* See page 41 for further information about speed & pressure

Flow & input power diagrams	
SHAFT END	COVER END
See DT6C Single Pumps for flow and input power diagrams (page 46)	
See DT7BS single pumps for flow and input power diagrams (page 42)	

Shaft torque limitS	
Shaft	Nm
1	227.7
2	341.1
3	520.2
5	328

Mounting with connection variables				
UNC	00*	01*	10*	11*
METRIC	0M*	W0*	1M*	W1*
S	3		2 ½	
P1		1		
P2	1	¾	1	¾


You may use suction S of 2 ½ for 126 cc/rev. max.
You may use pressure port P2 of ¾ for 46 cc/rev max.

*Add the following numbers at the end of the DT6CC reference depending your option.



DT6CC/DT67CB/DT67BB DIMENSIONS

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

Suction and pressure Port dimension variables.						
Thread	Port	A	B	C	D	E
S	3	106,4	61,9	76,2		5/8 -11UNC x 28,5 (M16 x 28,5)
	2 1/2	88,9	50,8	63,5		1/2 - 13UNC x 24 (M12 x 24)
P1	1	52,4	26,2	25,4		
P2	3/4	47,7	22,4	19	76,2	3/8 - 16UNC x 19 (M10 x 19)
	1	52,4	26,2	25,4	74,7	

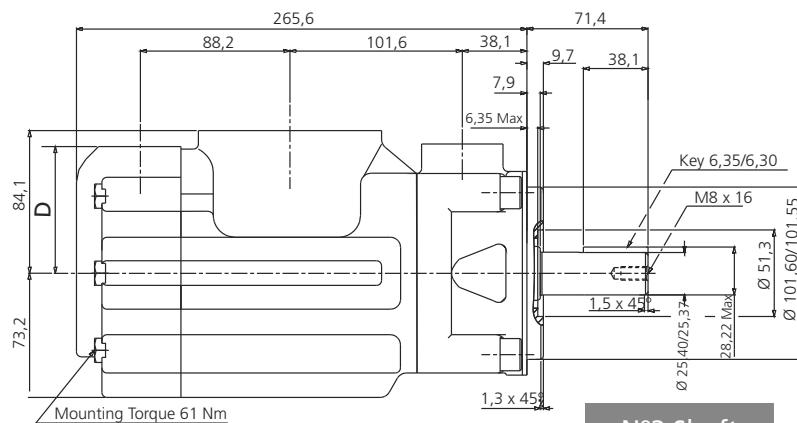


N°2 Shaft

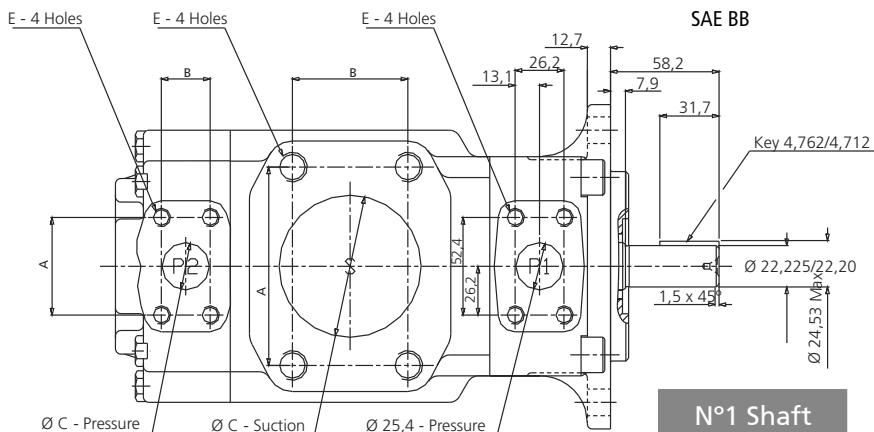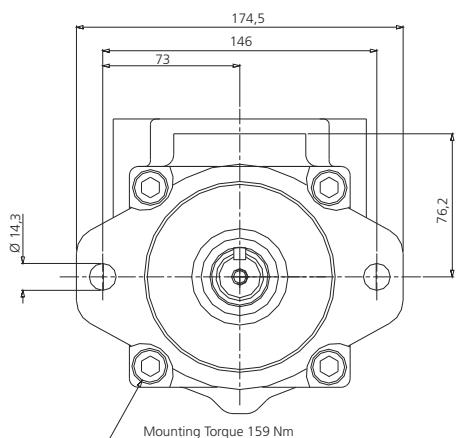


N°1 Shaft

Keyed no SAE

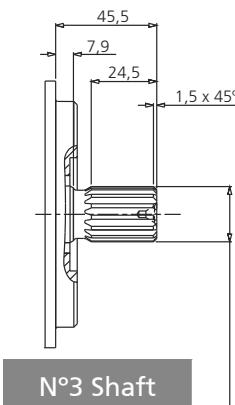

SAE BB Splined shaft
1-J498b 16/32 d.p. - 15 Teeth
30° Pressure angle

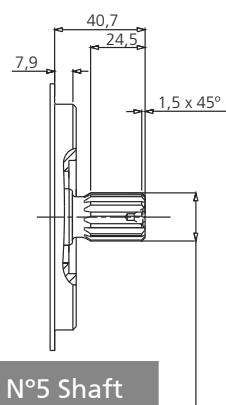

SAE B Splined shaft
1-J498b 16/32 d.p. - 13 Teeth
30° Pressure angle

ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

DT6DC / DT67DB / DT7DBS OPERATING CHARACTERISTICS

T6D SHAFT END FLOW													SPEED(rpm)		PRESSURE (bar)		
Lts/min.at 1000 rpm	48	66	80	90	98	111	120	136	146	158	191		Mín.	Máx.*	Contin.*	Intermit.*	
Gal/min.at 1200 rpm	14	20	24	28	31	35	38	42	45	50	61		500	2500	210	240	
T7DS SHAFT END FLOW													SPEED(rpm)		PRESSURE (bar)		
Lts/min.at 1000 rpm	44	55	66	70	81	90	99	113	121	138	146	158	191	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at 1200 rpm	14	17	20	22	24	28	31	35	38	42	45	50	61	600	3000	250	300
T6C COVER END FLOW													SPEED(rpm)		PRESSURE (bar)		
Lts/min.at 1000 rpm	11	17	21	26	34	37	46	58	64	70	79	89	100	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at 1200 rpm	3	5	6	8	10	12	14	17	20	22	25	28	31	500	2800	240	275
T7BS COVER END FLOW													SPEED(rpm)		PRESSURE (bar)		
Lts/min.at 1000 rpm	6	10	13	16	20	22	25	28	32	35	41	45	50	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at 1200 rpm	2	3	4	5	6	7	8	9	10	11	12	14	15	500	3600	290	320

* See page 41 for further information about speed & pressure

FLOW & INPUT POWER DIAGRAMS




SHAFT END	COVER END
See DT6D single pumps for flow and input power diagrams (page 48)	See DT6C single pumps for flow and input power diagrams (page 46)
See DT7DS single pumps for flow and input power diagrams (page 44)	See DT7BS single pumps for flow and input power diagrams (page 42)

P2 Mounting w/ connection variables		
UNC	00	01
Metric	M0	M1
S	3"	
P1	1 1/4"	
P2	1	3/4

Shaft torque limits	
Shaft	Nm
1	688,5
2	621

DT6DC / DT67DB / DT7DBS DIMENSIONS

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

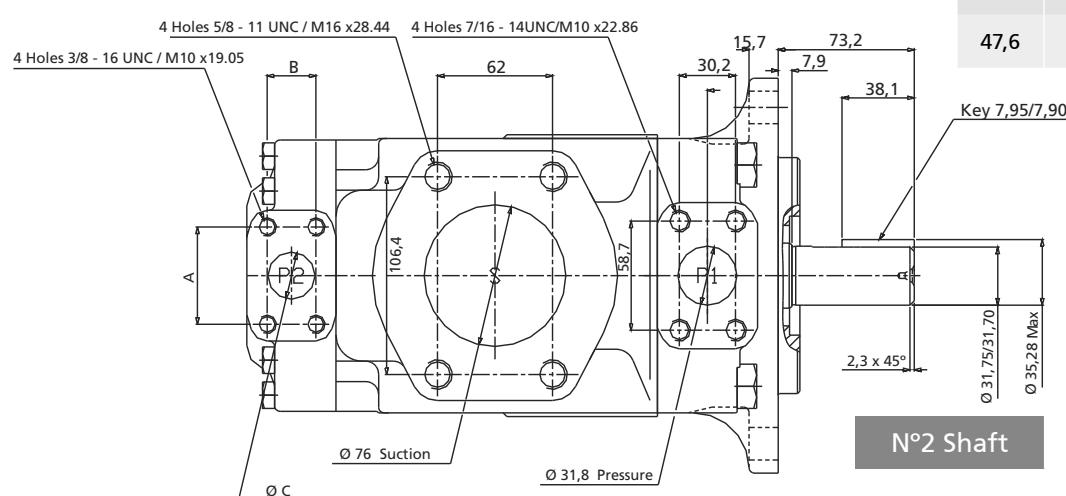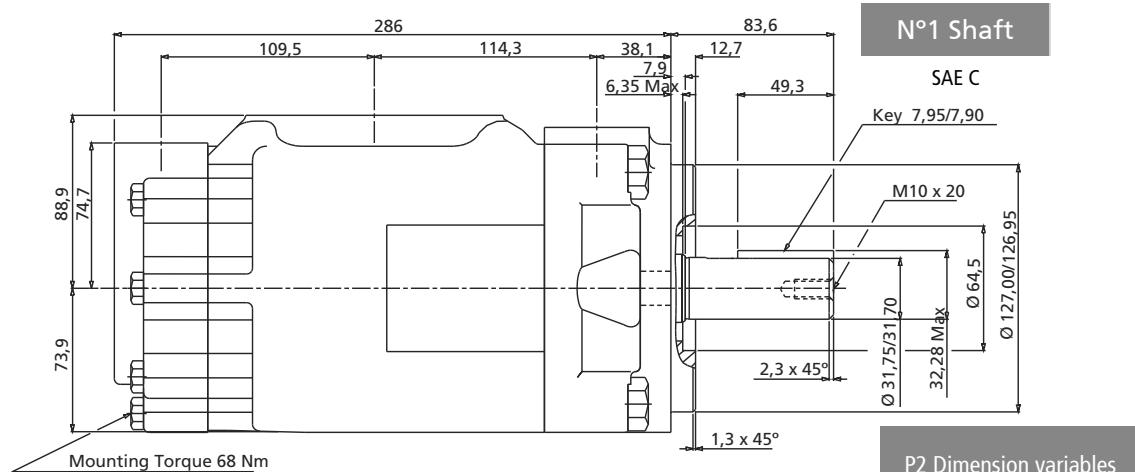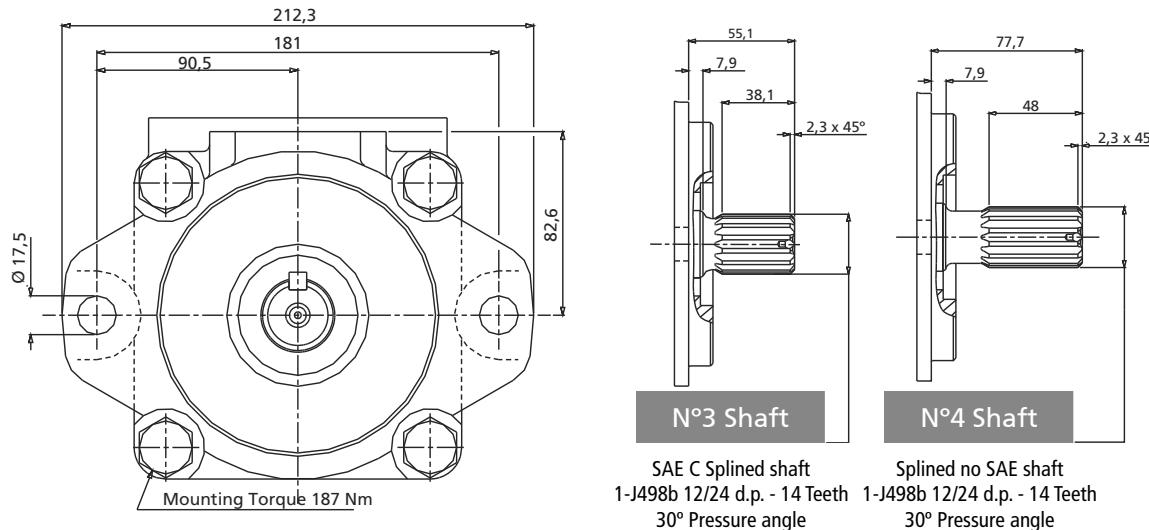

ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

DT6EC / DT67EB OPERATING CHARACTERISTICS

T6E SHAFT END FLOW												SPEED(rpm)		PRESSURE (bar)	
Lts/min.at 1000 rpm	132	142	156	165	183	197	213	227	270	Mín.	Máx.*	Contin.*	Intermit.*		
Gal/min.at 1200 rpm	42	45	50	52	57	62	66	72	85	500	2200	210	240		
T6C COVER END FLOW												SPEED(rpm)		PRESSURE (bar)	
Lts/min.at 1000 rpm	11	17	21	26	34	37	46	58	64	70	79	89	100	Mín.	Máx.*
Gal/min.at 1200 rpm	3	5	6	8	10	12	14	17	20	22	25	28	31	500	2800
T7BS COVER END FLOW												SPEED(rpm)		PRESSURE (bar)	
Lts/min.at 1000 rpm	6	10	13	16	20	22	25	28	32	35	41	45	50	Mín.	Máx.*
Gal/min.at 1200 rpm	2	3	4	5	6	7	8	9	10	11	12	14	15	500	3600

* See page 41 for further information about speed & pressure

FLOW & INPUT POWER DIAGRAMS



SHAFT END	COVER END
See DT6E Single Pumps for flow and input power diagrams (page 50)	See DT6C single pumps for flow and input power diagrams (page 46)
	See DT7BS single pumps for flow and input power diagrams (page 42)

P2 Mounting w/ connection variables		
UNC	00	01
METRIC	M0	M1
S	3"	
P1	1 1/4"	
P2	1	3/4


Shaft torque limits	
Shaft	Nm
1	1151,4
2	550,8
3	974,5

DT6EC / DT67EB* DIMENSIONS

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

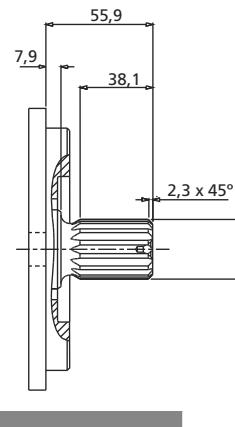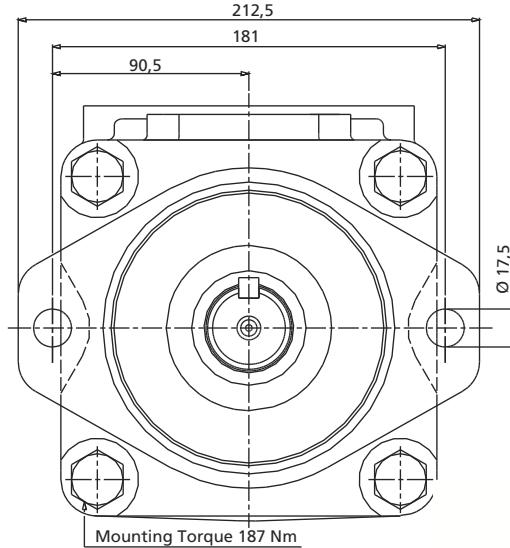



SAE C Splined shaft
1-J498b 12/24 d.p. - 14 Teeth
30° Pressure angle

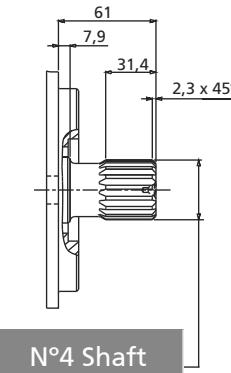

SAE CC Splined shaft
1-J498b 12/24 d.p. - 17 Teeth
30° Pressure angle

P2 Dimension variables

A	B	C
52,4	26,2	25,4
47,6	22,2	19

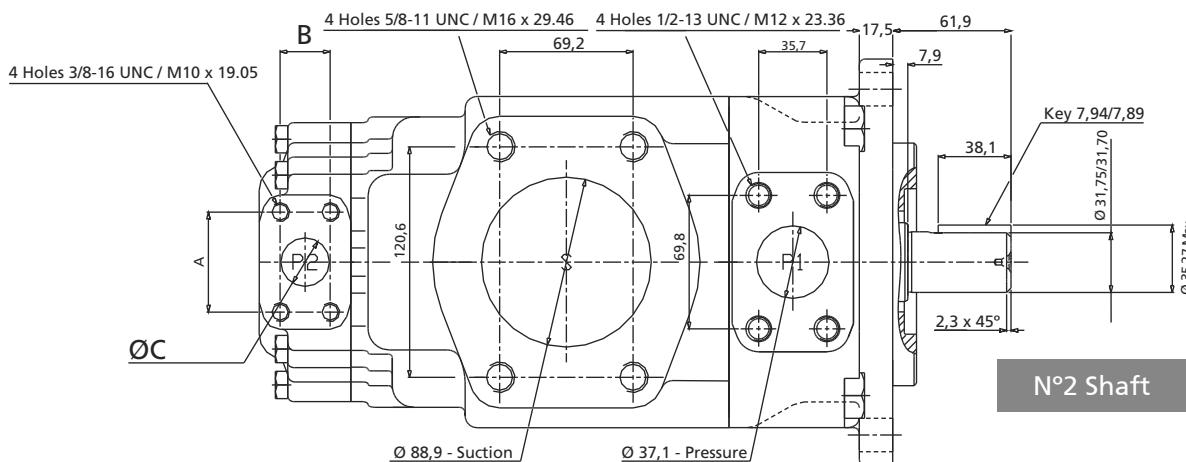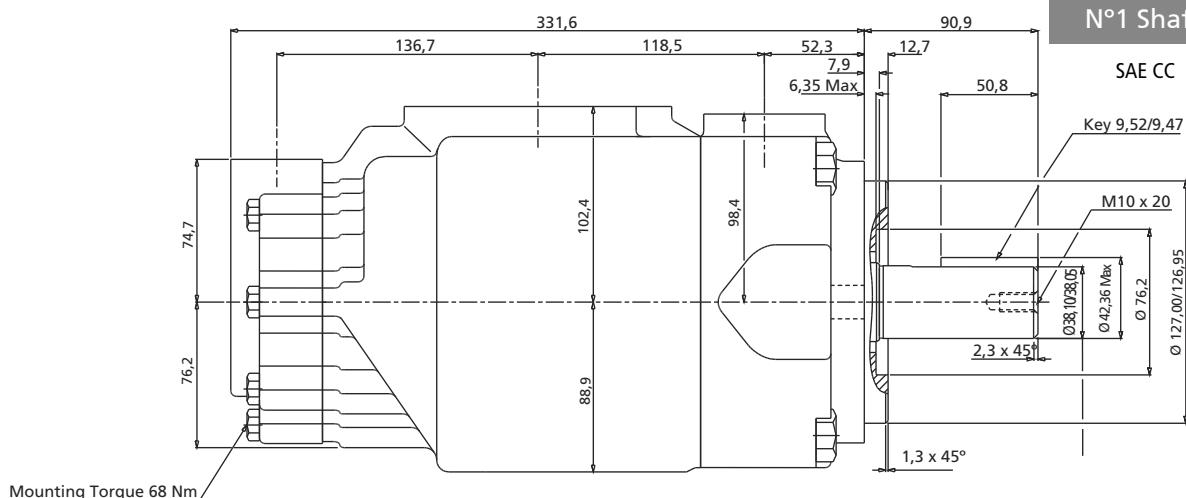

ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

DT6ED / DT67ED OPERATING CHARACTERISTICS

T6E SHAFT END FLOW										SPEED(rpm)		PRESSURE (bar)	
Lts/min.at 1000 rpm	132	142	156	165	183	197	213	227	270	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at 1200 rpm	42	45	50	52	57	62	66	72	85	500	2200	210	240
T6D COVER END FLOW										SPEED(rpm)		PRESSURE (bar)	
Lts/min.at 1000 rpm	48	66	80	90	98	111	120	136	146	158	191	Mín.	Máx.*
Gal/min.at 1200 rpm	14	20	24	28	31	35	38	42	45	50	61	500	2500
T7DS COVER END FLOW										SPEED(rpm)		PRESSURE (bar)	
Lts/min.at 1000 rpm	44	55	66	70	81	90	99	113	121	138	146	158	191
Gal/min.at 1200 rpm	14	17	20	22	24	28	31	35	38	42	45	50	61
										Mín.	Máx.*	Contin.*	Intermit.*
										600	3000	250	300

* See page 41 for further information about speed & pressure






FLOW & INPUT POWER DIAGRAMS

SHAFT END	COVER END
See DT6E Single Pumps for flow and input power diagrams (page 50)	See DT6D Single Pumps for flow and input power diagrams (page 48)
	See DT7DS single pumps for flow and input power diagrams (page 44)

Shaft torque limits	
Shaft	Nm
1	1151,4
2	550,8
3	974,5

DT6ED / DT67ED DIMENSIONS

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

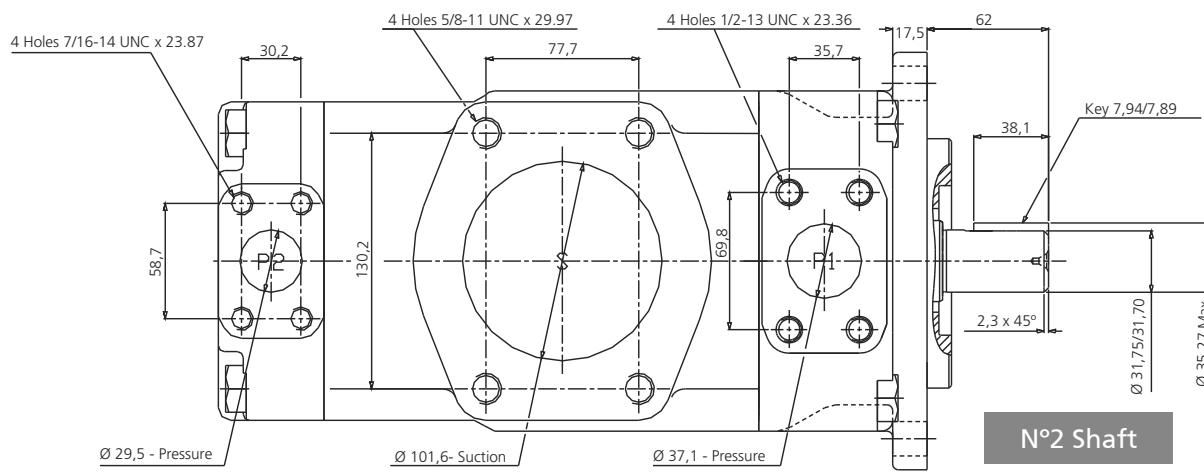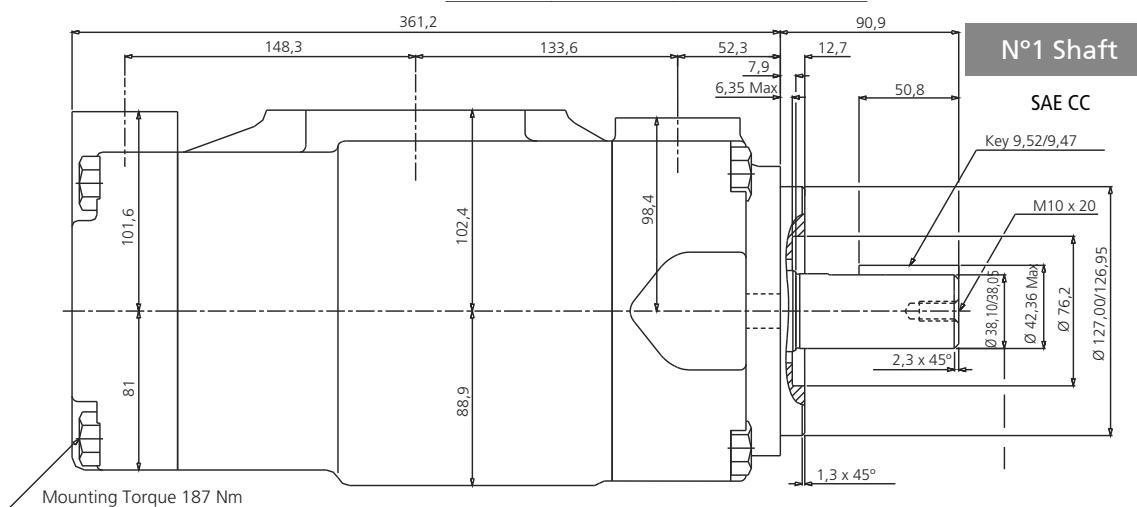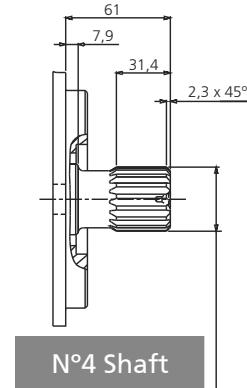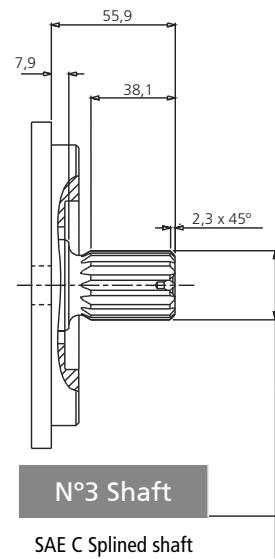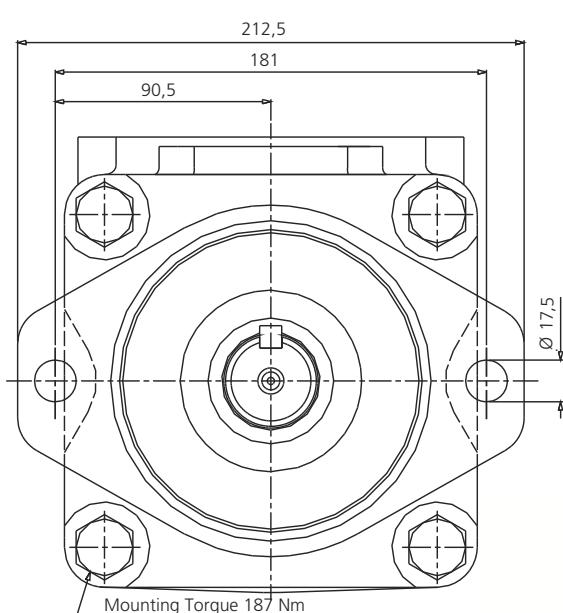

ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

Cylindrical no SAE




Bezares Group

TRIPLE VANE PUMPS

DT6, DT67 and DT7

Triple vane pumps

ORDERING CODE

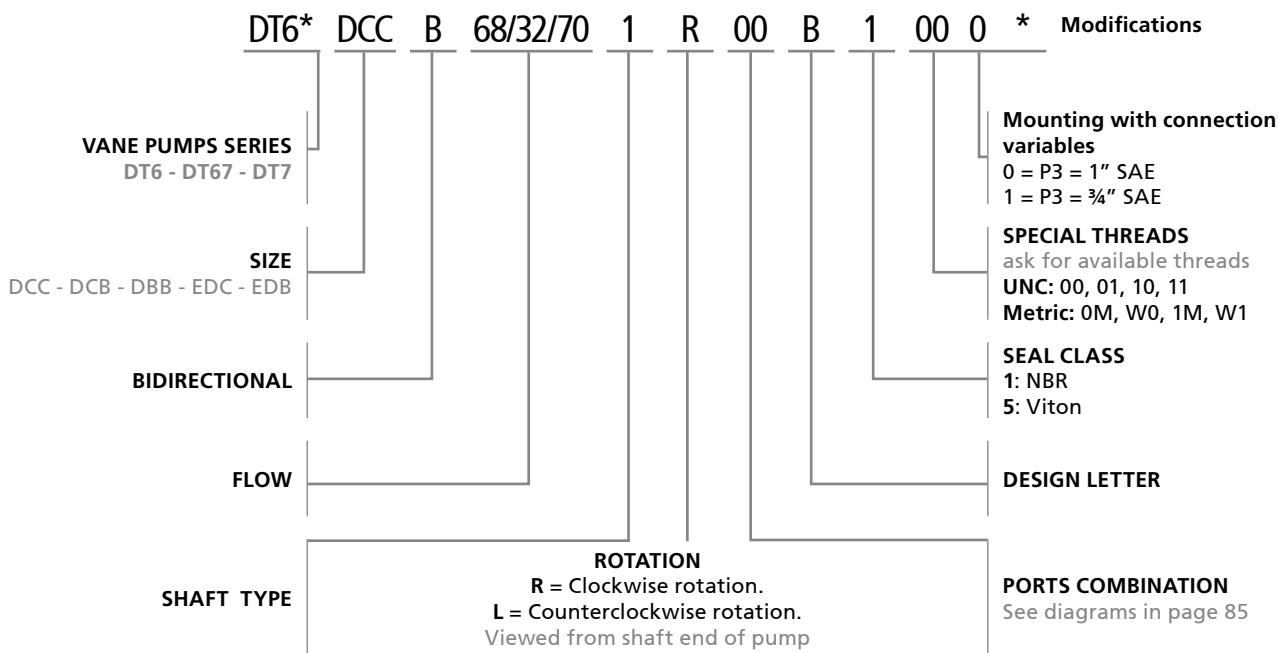

GENERAL CHARACTERISTICS


TYPE	P1			P2			P3			SPEED	FRONT FLANGE	WEIGHT	SAE 4 HOLES FLANGE						
	MODEL	FLOW GAL./min @ 1200 RPM	FLOW L./min @ 1000 RPM	MAX PRESS. (BAR)	NOMINAL POWER	FLOW GAL./min @ 1200 RPM	FLOW L./min @ 1000 RPM	MAX PRESS. (BAR)	NOMINAL POWER	FLOW GAL./min @ 1200 RPM	MAX PRESS. (BAR)	NOMINAL POWER	RANGE	SAE j744c ISO 3019-1	KG	SUC- TION S	P1	P2	P3
DT6DCC/M	14-61	48-191	240	10,7-42,4	3-31	11-100	275	2,4-22,2	3-31	11-100	275	2,4-22,2							
DT67DCB/M	14-61	48-191	240	10,7-42,4	3-31	11-100	275	2,4-22,2	2-15	6-50	320	1,3-11,1							
DT67DBB/M	14-61	48-191	240	10,7-42,4	2-15	6-50	320	1,3-11,1	2-15	6-50	320	1,3-11,1	500-2500		61		1 ¼"	1"	
DT67DCC/M	14-61	44-191	300	9,8-42,4	3-31	11-100	275	2,4-22,2	3-31	11-100	275	2,4-22,2							
DT7DCB/M	14-61	44-191	300	9,8-42,4	3-31	11-100	275	2,4-22,2	2-15	6-50	320	1,3-11,1							
DT7DBB/M	14-61	44-191	300	9,8-42,4	2-15	6-50	320	1,3-11,1	2-15	6-50	320	1,3-11,1	SAE C		4"			1"	¾"
DT6EDC/M	42-85	132-270	240	29,3-60	14-61	48-191	240	10,7-42,4	3-31	11-100	275	2,4-22,2							
DT67EDB/M	42-85	132-270	240	29,3-60	14-61	48-191	240	10,7-42,4	2-15	6-50	320	1,3-11,1	500-2200		100		1 ½"	1 ¼"	
DT67EDC/M	42-85	132-270	240	29,3-60	14-61	44-191	300	9,8-42,4	3-31	11-100	275	2,4-22,2							
DT7EDB/M	42-85	132-270	240	29,3-60	14-61	44-191	300	9,8-42,4	2-15	6-50	320	1,3-11,1							

EXCEPTIONS TABLE

MODEL	7B				6C				6D				7D				6E
FLOW	011	012	014	015	025	028	031	035	038	042	042	045	050	061	085		
MAX INTERMITTENT PRESSURE (BAR)	300				280				210				280				90
RPM MAX	3000				2500				2800				2500				2000

PORTING COMBINATION

PORTING COMBINATION

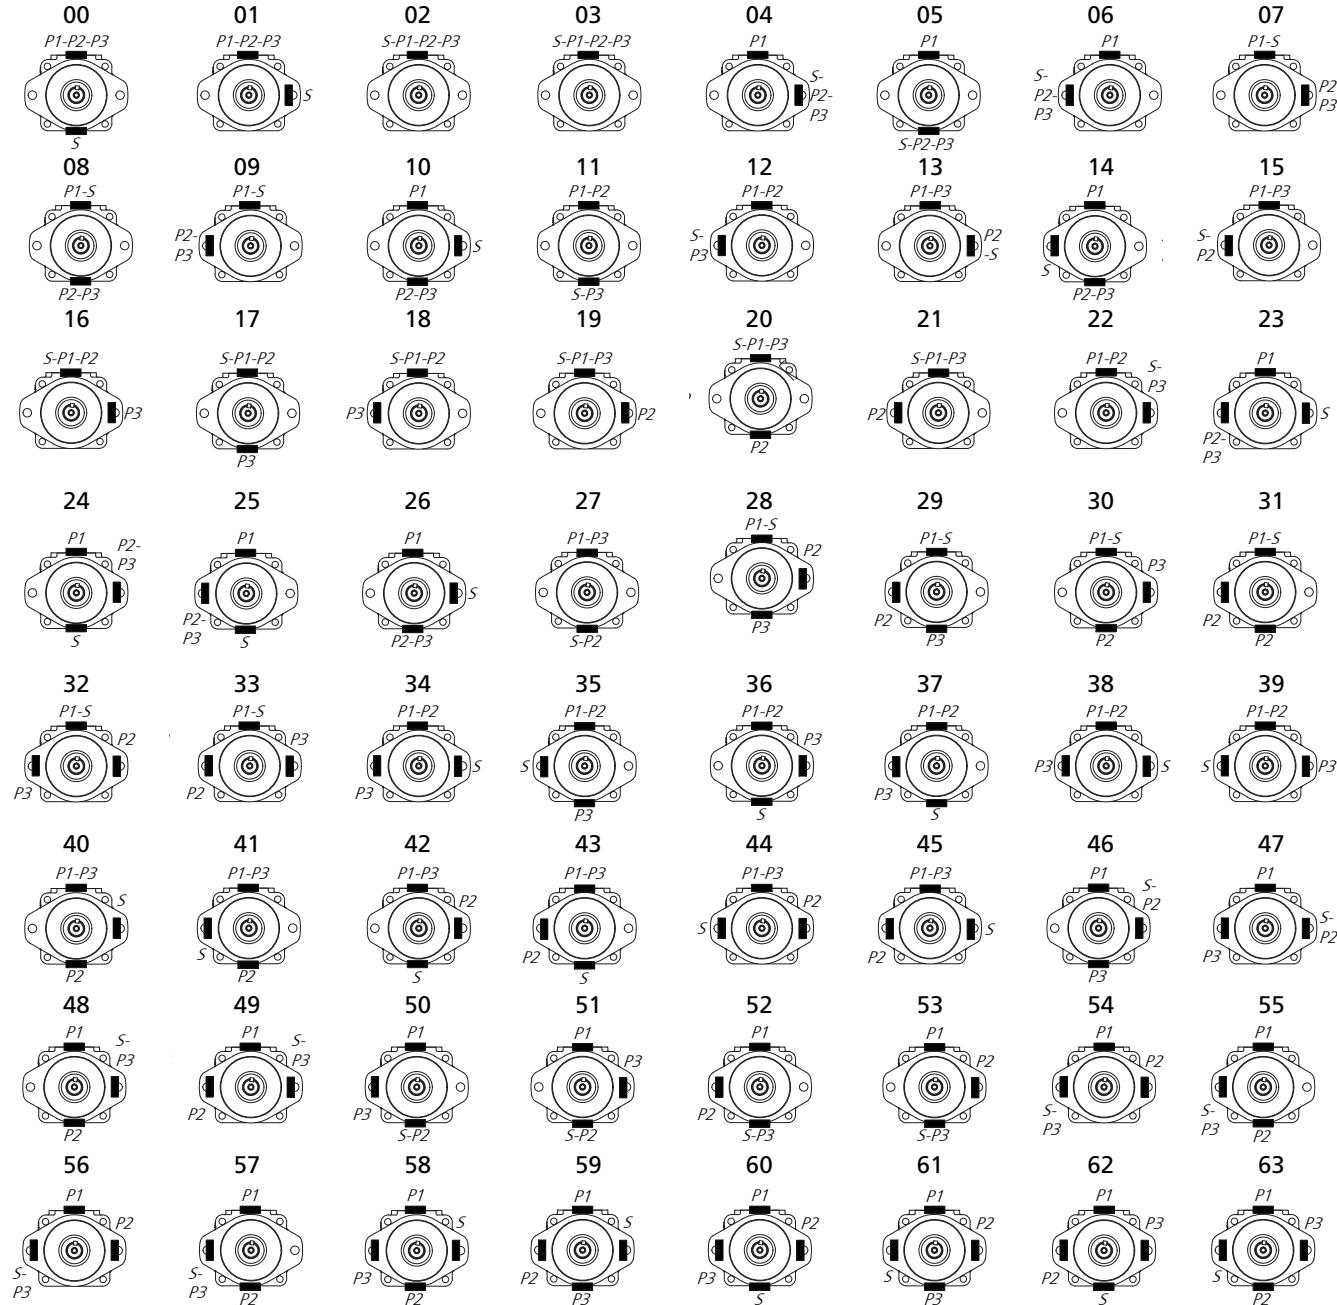

S = Suction port | P1 = Shaft end pressure port | P2 = Middle pressure port | P3 = Cover end pressure port

DT6DCC / DT7DBBS / DT7DCBS / DT67DBBS / DT67DCBS / DT67DCCS OPERATING CHARACTERISTICS

T6D SHAFT END FLOW													SPEED(rpm)		PRESSURE (bar)		
Lts/min.at 1000 rpm	48	66	80	90	98	111	120	136	146	158	191		Mín.	Máx.*	Contin.*	Intermit.*	
Gal/min.at 1200 rpm	14	20	24	28	31	35	38	42	45	50	61		500	2500	210	240	
T7DS SHAFT END FLOW													SPEED(rpm)		PRESSURE (bar)		
Lts/min.at 1000 rpm	44	55	66	70	81	90	99	113	121	138	146	158	191	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at 1200 rpm	14	17	20	22	24	28	31	35	38	42	45	50	61	600	3000	250	300
T6C MIDDLE SECTION FLOW													SPEED(rpm)		PRESSURE (bar)		
Lts/min.at 1000 rpm	11	17	21	26	34	37	46	58	64	70	79	89	100	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at 1200 rpm	3	5	6	8	10	12	14	17	20	22	25	28	31	500	2800	240	275
T7BS MIDDLE SECTION FLOW													SPEED(rpm)		PRESSURE (bar)		
Lts/min.at 1000 rpm	6	10	13	16	20	22	25	28	32	35	41	45	50	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at 1200 rpm	2	3	4	5	6	7	8	9	10	11	12	14	15	500	3600	290	320
T6C COVER END FLOW													SPEED(rpm)		PRESSURE (bar)		
Lts/min.at 1000 rpm	11	17	21	26	34	37	46	58	64	70	79	89	100	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at 1200 rpm	3	5	6	8	10	12	14	17	20	22	25	28	31	500	2800	240	275
T7BS COVER END FLOW													SPEED(rpm)		PRESSURE (bar)		
Lts/min.at 1000 rpm	6	10	13	16	20	22	25	28	32	35	41	45	50	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at 1200 rpm	2	3	4	5	6	7	8	9	10	11	12	14	15	500	3600	290	320

* See page 41 for further information about speed & pressure

FLOW & INPUT POWER DIAGRAMS



SHAFT END			MIDDLE BODY						COVER END				
See DT6D Single Pumps for flow and input power diagrams (page 48)			See DT6C Single Pumps for flow and input power diagrams (page 46)						See DT6C Single Pumps for flow and input power diagrams (page 46)				
See DT7DS single pumps for flow and input power diagrams (page 44)			See DT7BS single pumps for flow and input power diagrams (page 42)						See DT7BS single pumps for flow and input power diagrams (page 42)				

P3 Mounting w/ connection variables		
UNC	00	01
METRIC	M0	M1
S	4"	
P1	1 1/4"	
P3	1	3/4


Shaft torque limits		
Pump	Shaft	Nm
DT6DCC	1	688,5
	3	974,5
DT6DCCM	2 / 4	1058,9

DT6DCC / DT7DBBS / DT7DCBS / DT67DBBS / DT67DCBS / DT67DCCS DIMENSIONS


DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

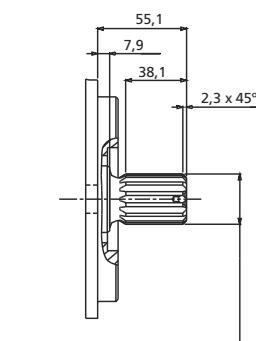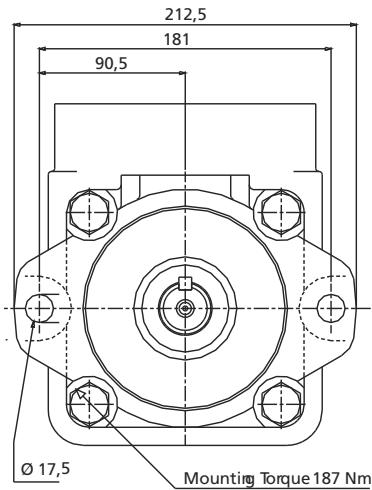

N°3 Shaft
SAE C Splined shaft
1-J498b 12/24 d.p. - 14 Teeth
30° Pressure angle

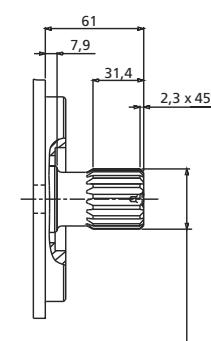


N°4 Shaft
SAE CC Splined shaft
1-J498b 12/24 d.p. - 17 Teeth
30° Pressure angle

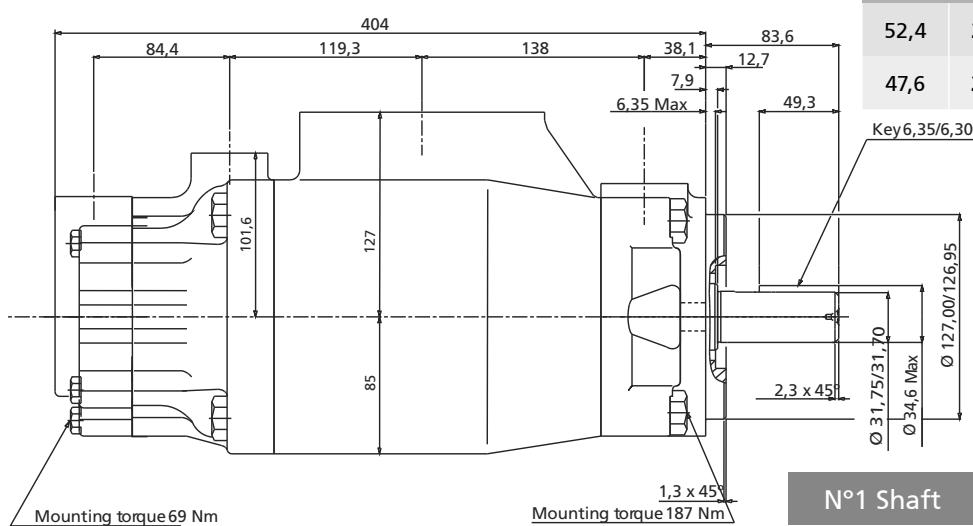

N°1 Shaft

Keyed no SAE

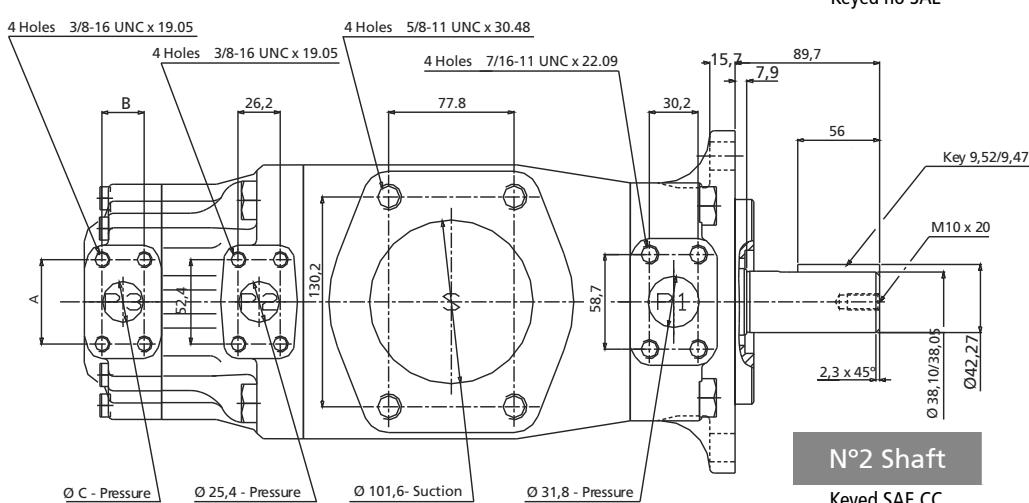

N°2 Shaft

Keyed SAE CC

ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

DT6EDC / DT6EDCM / DT7EDB / DT67EDB / DT67EDC*

OPERATING CHARACTERISTICS

T6E SHAFT END FLOW												SPEED(rpm)		PRESSURE (bar)						
Lts/min.at 1000 rpm				132	142	156	165	183	197	213	227	270	Mín.	Máx.*	Contin.*	Intermit.*				
Gal/min.at 1200 rpm				42	45	50	52	57	62	66	72	85	500	2200	210	240				
T6D MIDDLE SECTION FLOW												SPEED(rpm)		PRESSURE (bar)						
Lts/min.at 1000 rpm				48	66	80	90	98	111	120	136	146	158	191	Mín.	Máx.*	Contin.*	Intermit.*		
Gal/min.at 1200 rpm				14	20	24	28	31	35	38	42	45	50	61	500	2500	210	240		
T7DS MIDDLE SECTION FLOW												SPEED(rpm)		PRESSURE (bar)						
Lts/min.at 1000 rpm				44	55	66	70	81	90	99	113	121	138	146	158	191	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at 1200 rpm				14	17	20	22	24	28	31	35	38	42	45	50	61	600	3000	250	300
T6C COVER END FLOW												SPEED(rpm)		PRESSURE (bar)						
Lts/min.at 1000 rpm				11	17	21	26	34	37	46	58	64	70	79	89	100	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at 1200 rpm				3	5	6	8	10	12	14	17	20	22	25	28	31	500	2800	240	275
T7BS COVER END FLOW												SPEED(rpm)		PRESSURE (bar)						
Lts/min.at 1000 rpm				6	10	13	16	20	22	25	28	32	35	41	45	50	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at 1200 rpm				2	3	4	5	6	7	8	9	10	11	12	14	15	500	3600	290	320

* See page 41 for further information about speed & pressure

FLOW & INPUT POWER DIAGRAMS															
SHAFT END				MIDDLE BODY								COVER END			
See DT6E Single Pumps for flow and input power diagrams (page 50)				See DT6D Single Pumps for flow and input power diagrams (page 48)								See DT6C Single Pumps for flow and input power diagrams (page 46)			
See DT7DS single pumps for flow and input power diagrams (page 44)				See DT7BS single pumps for flow and input power diagrams (page 42)											

P3 Mounting w/ connection variables		
UNC	00	01
METRIC	M0	M1
S	4"	
P1	1 1/4"	
P3	1	3/4





DT6EDC / DT6EDCM / DT7EDB / DT67EDB / DT67EDC*


DIMENSIONS

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

*FOR FURTHER INFO ABOUT DT67B & DT67D SEE PAGE 42 & PAGE 44 RESPECTIVELY

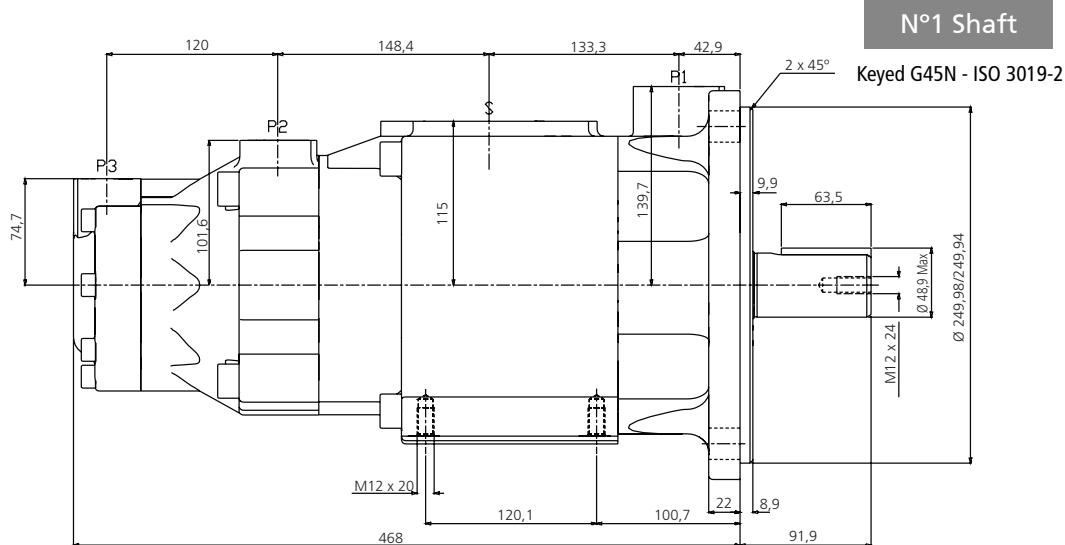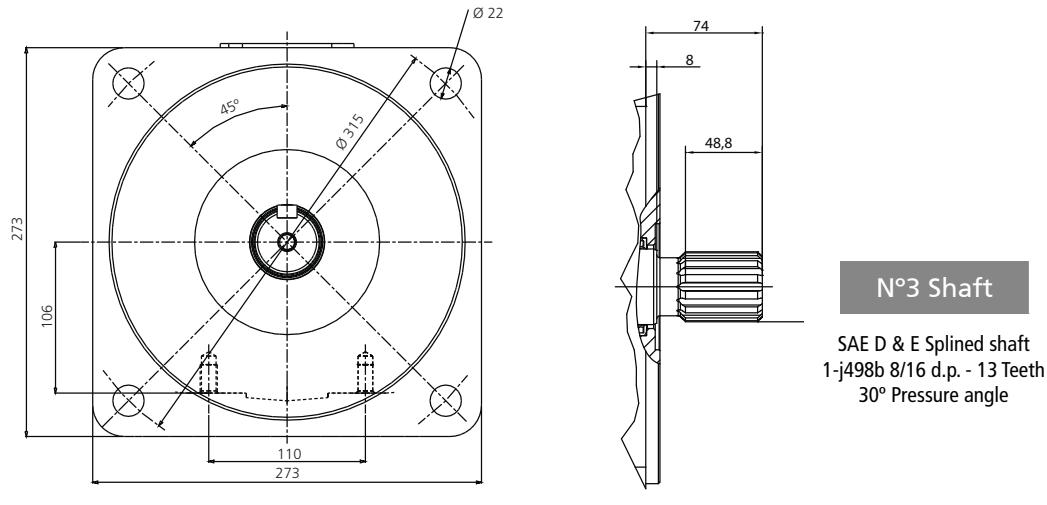

P3 Dimension variables		
A	B	C
52,4	26,2	25,4
47,6	22,2	19

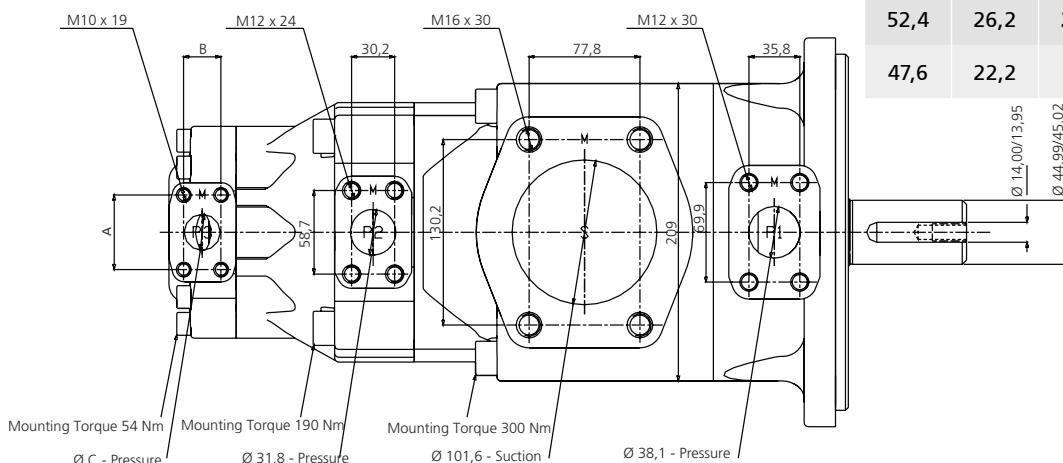

ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118




Bezares Group





T6G & T67G SINGLE & DOUBLE VANE PUMPS - 4 HOLES ISO FLANGE

For direct mounting in Power Take Off


DT6G & DT67G ORDERING CODE

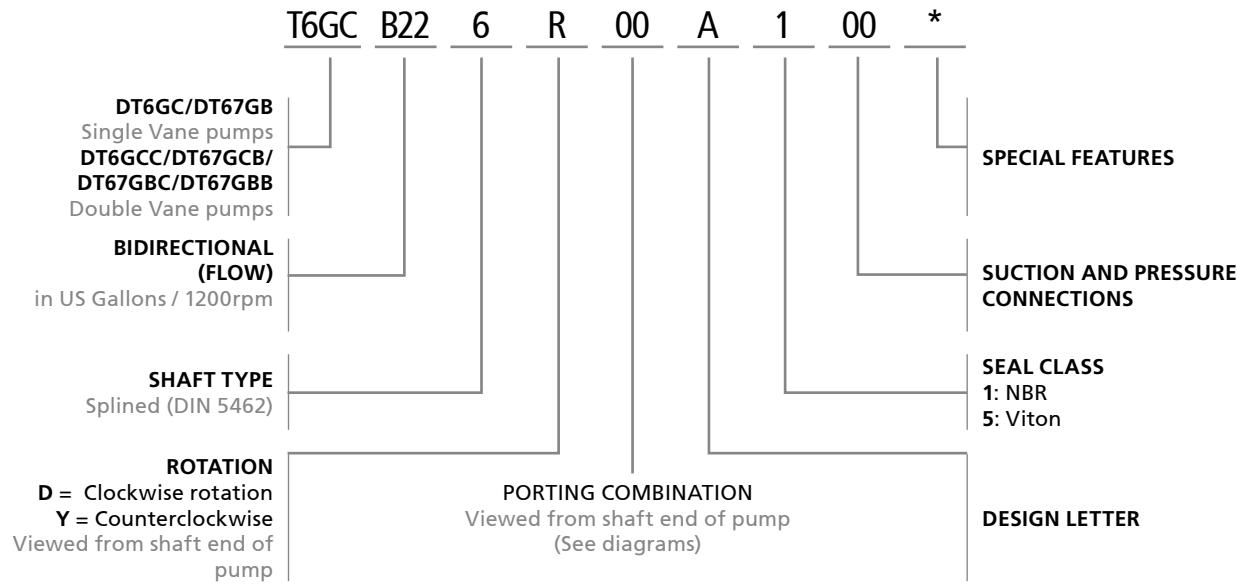

PORTING COMBINATION | DT6GC

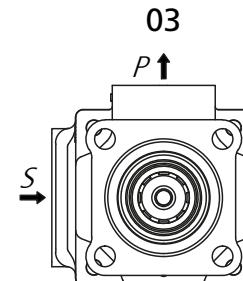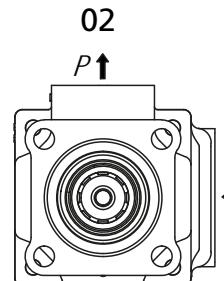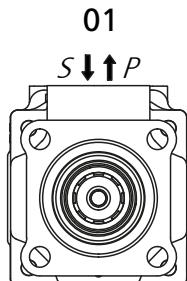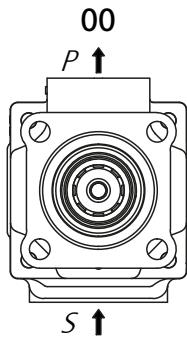

PORTING COMBINATION | DT6GCC

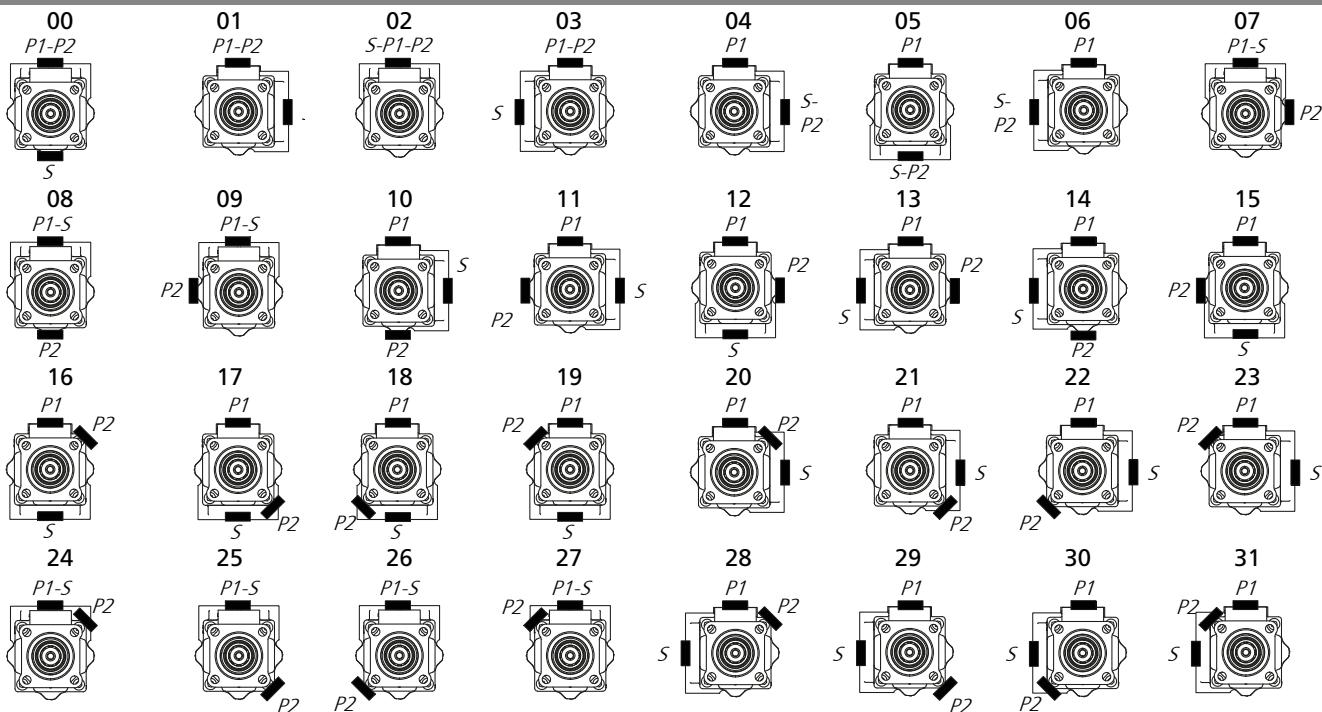

OPERATING CHARACTERISTICS


	T6C FLOW												SPEED(rpm)	PRESSURE (bar)	WEIGHT			
Lts/min.at 1000 rpm	11	17	21	26	34	37	46	58	64	70	79	89	100	Mín.	Máx.*	Contin.*	Intermit.*	(Kgs.)
Gal/min.at 1200 rpm	3	5	6	8	10	12	14	17	20	22	25	28	31	700	2800	240	275	18

	T7B FLOW												SPEED(rpm)	PRESSURE (bar)	WEIGHT			
Lts/min.at 1000 rpm	6	10	13	16	20	22	25	28	32	35	41	45	50	Mín.	Máx.*	Contin.*	Intermit.*	(Kgs.)
Gal/min.at 1200 rpm	2	3	4	5	6	7	8	9	10	11	12	14	15	500	3600	290	320	23


* See page 41 for further information about speed & pressure.

DIMENSIONS


DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

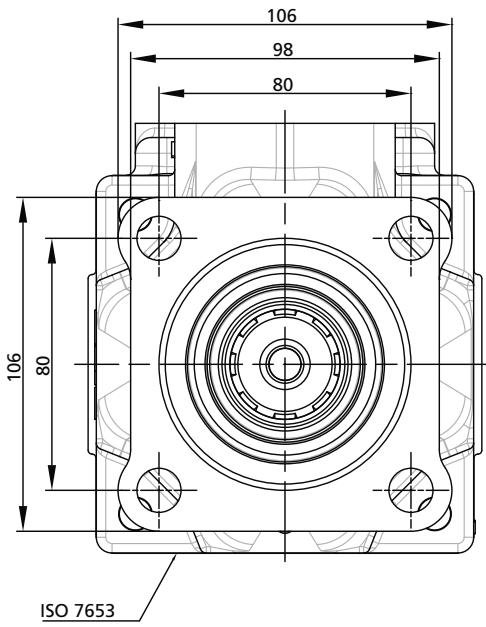

	PORTS OPTIONS			
	ØD1	ØD3	L1	L2
COVER	1 1/2" SAE	1/2" 13H UNC M12	69,85	35,7
	ØD2	ØD4	L3	L4
FLANGE	1" SAE	3/8" 16H UNC M10	52,4	26,2
	1" BSP		-	-
	3/4" BSP		-	-

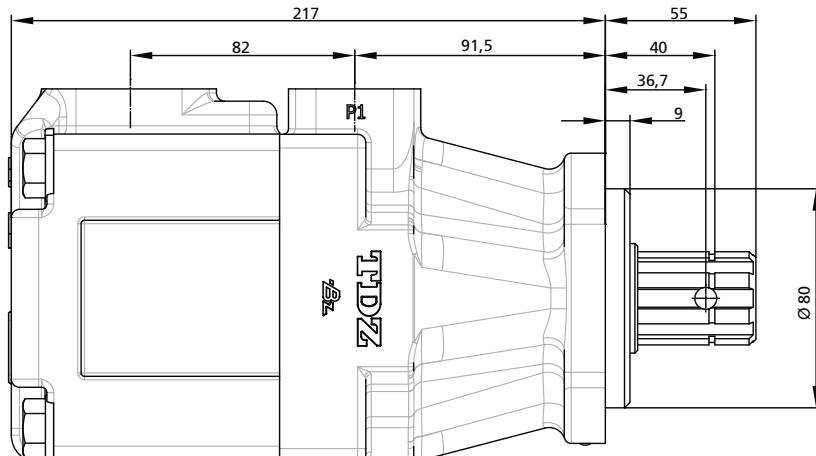

CODE	A	B	S	P
00*	1/2" 13 UNC	3/8" 16 UNC	1 1/2"	1"
M0*	M12	M10		

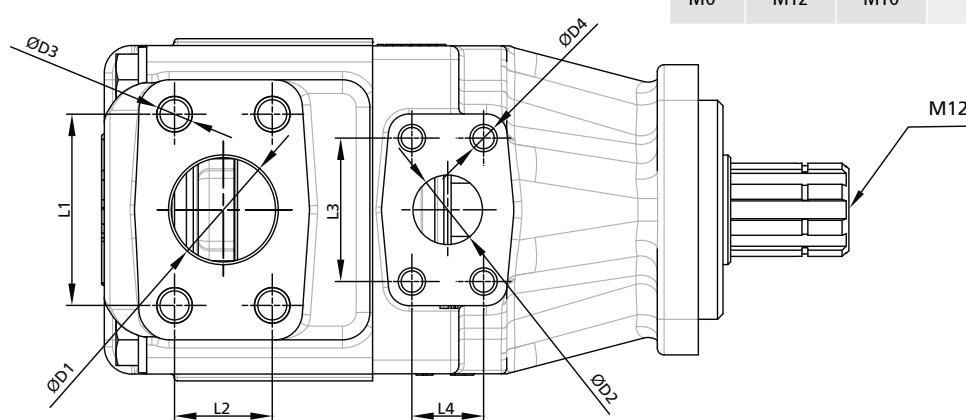

OPERATING CHARACTERISTICS


T6GC SHAFT END FLOW													SPEED(rpm)	PRESSURE (bar)			
Lts/min.at 1000 rpm	11	17	21	26	34	37	46	58	64	70	79	89	100	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at 1200 rpm	3	5	6	8	10	12	14	17	20	22	25	28	31	500	2800	240	275

T67GB SHAFT END FLOW													SPEED(rpm)	PRESSURE (bar)			
Lts/min.at 1000 rpm	6	10	13	16	20	22	25	28	32	35	41	45	50	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at 1200 rpm	2	3	4	5	6	7	8	9	10	11	12	14	15	500	3600	290	320

T6GC COVER END FLOW													SPEED(rpm)	PRESSURE (bar)			
Lts/min.at 1000 rpm	11	17	21	26	34	37	46	58	64	70	79	89	100	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at 1200 rpm	3	5	6	8	10	12	14	17	20	22	25	28	31	500	2800	240	275


T67GB COVER END FLOW													SPEED(rpm)	PRESSURE (bar)			
Lts/min.at 1000 rpm	6	10	13	16	20	22	25	28	32	35	41	45	50	Mín.	Máx.*	Contin.*	Intermit.*
Gal/min.at 1200 rpm	2	3	4	5	6	7	8	9	10	11	12	14	15	500	3600	290	320

* See page 41 for further information about speed & pressure

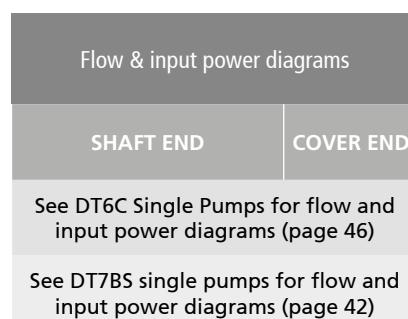



DIMENSIONS - WEIGHT: 29 Kg

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

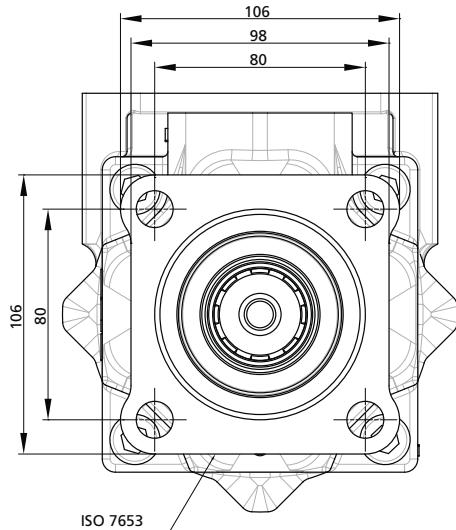

Mounting with connection variables				
		P1 = 1"	S = 3"	P1 = 1" - S = 2 1/2"
P2		1"	3/4"	1"
CODE	UNC	00	01	10
	METRIC	0M	W0	1M
				11
				W1

PORTS OPTIONS				
	ØD1	ØD4	L1	L2
COVER	1" SAE	3/8" 16H UNC	52,4	26,2
	3/4" SAE	3/8" 16H UNC	47,6	22,2
MIDDLE BODY	ØD2	ØD5	L3	L4
	2 1/2" SAE	1/2" 13H UNC	88,9	50,8
	3" SAE	5/8" 16H UNC	106,4	61,9
	2 1/2" SAE	M12	88,9	50,8
FLANGE	3" SAE	M16	106,4	61,9
	ØD3	ØD6	L5	L6
	1" SAE	3/8" 16H UNC	52,4	26,2
	1" BSP	-	-	-
	3/4" BSP	-	-	-

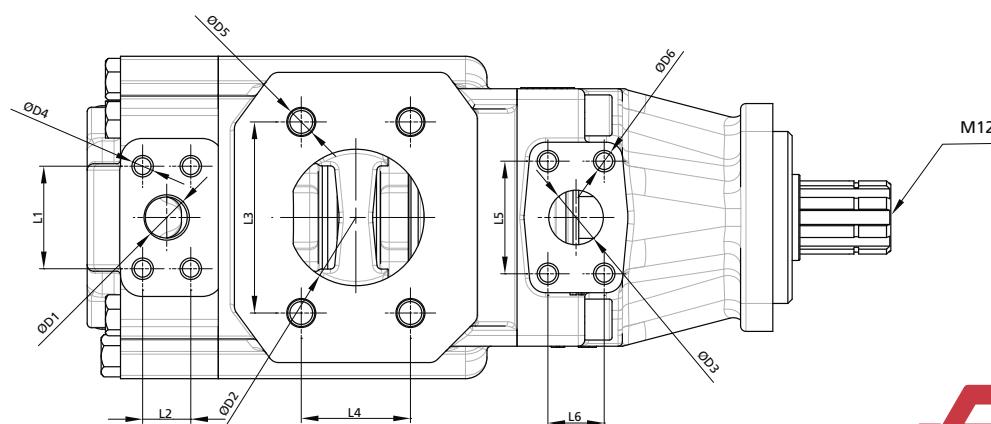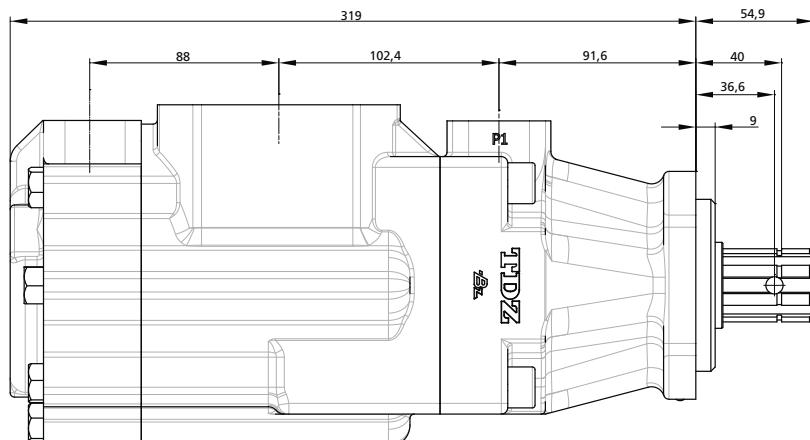



Bezares Group

SINGLE VANE PUMPS WITH FLOW & PRESSURE CONTROL





-VC10F

-VC20F


ORDERING CODE

VC20	F	1	P	11	S	1	C	8	H	L
PUMP MODEL VC10 VC20										
COVER Omit - Standard Cover F - Flow & pressure control cover										
Mounting 1 - 2 - Bolt Flange										
Inlet Port Connection	VC10 S 1 5/16" Str.thd. P 1" NPT B 1" BSP	VC20 1 5/8"-12 Str.thd. 1 1/4" NPT 1 1/4" BSP								
DELIVERY USgpm at 1200 rpm	VC10 1, 2, 3, 4, 5, 6, 7 VC20 5, 6, 7, 8, 9, 10, 11, 12, 13									
OUTLET PORT CONNECTION										
VC10F		VC20F								
S	-									
P	3/4"-16 Str.thd. outlet 1/2" NPT tank port	3/4"-16 Str.thd. outlet 1/2" NPT tank port								
T	3/4"-16 Str.thd. outlet tank port	3/4"-16 Str.thd. outlet 3/4"-16 Str.thd. tank port								



PORTING COMBINATION

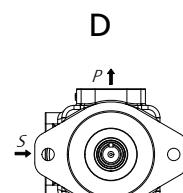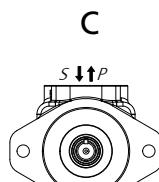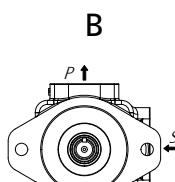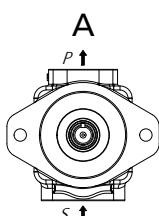

VC10F INSTALLATION DIMENSIONS

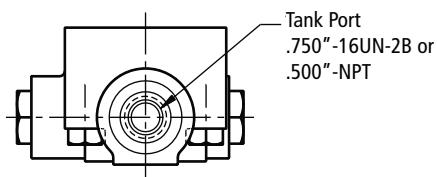



Delivery @ 1200 RPM & 7 Bar (100 psi)	DIMENSION	
	A	B
1, 2, 3	130 5.12	84,8 3.34
4, 5	136,4 5.37	91,2 3.59
6, 7	141,5 5.57	96,3 3.79

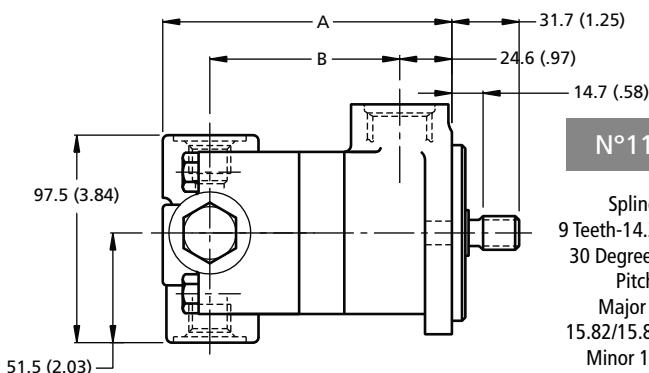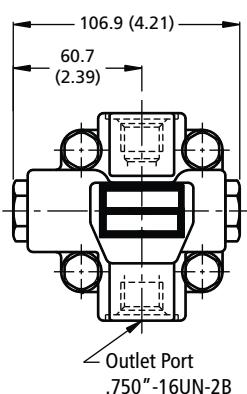
N°11 Shaft


Splined Shaft
9 Teeth-14.29 (.5625) P.D.
30 Degree Press. Angle
Pitch 16/32
Major Diameter
15.82/15.80 (.623/.622)
Minor 12.28/12.00
(.4835/.4725)
Flat Root
Major Diameter Fit

SHAFT OPTIONS

VC10 / VC10F

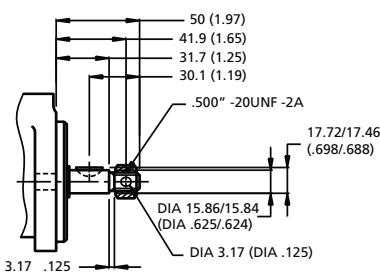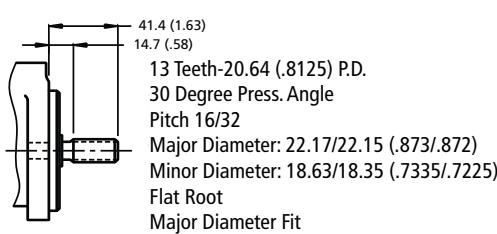

N°3 Shaft Threaded with #6 Woodruff Key

N°12 Shaft Splined Shaft 13 Teeth

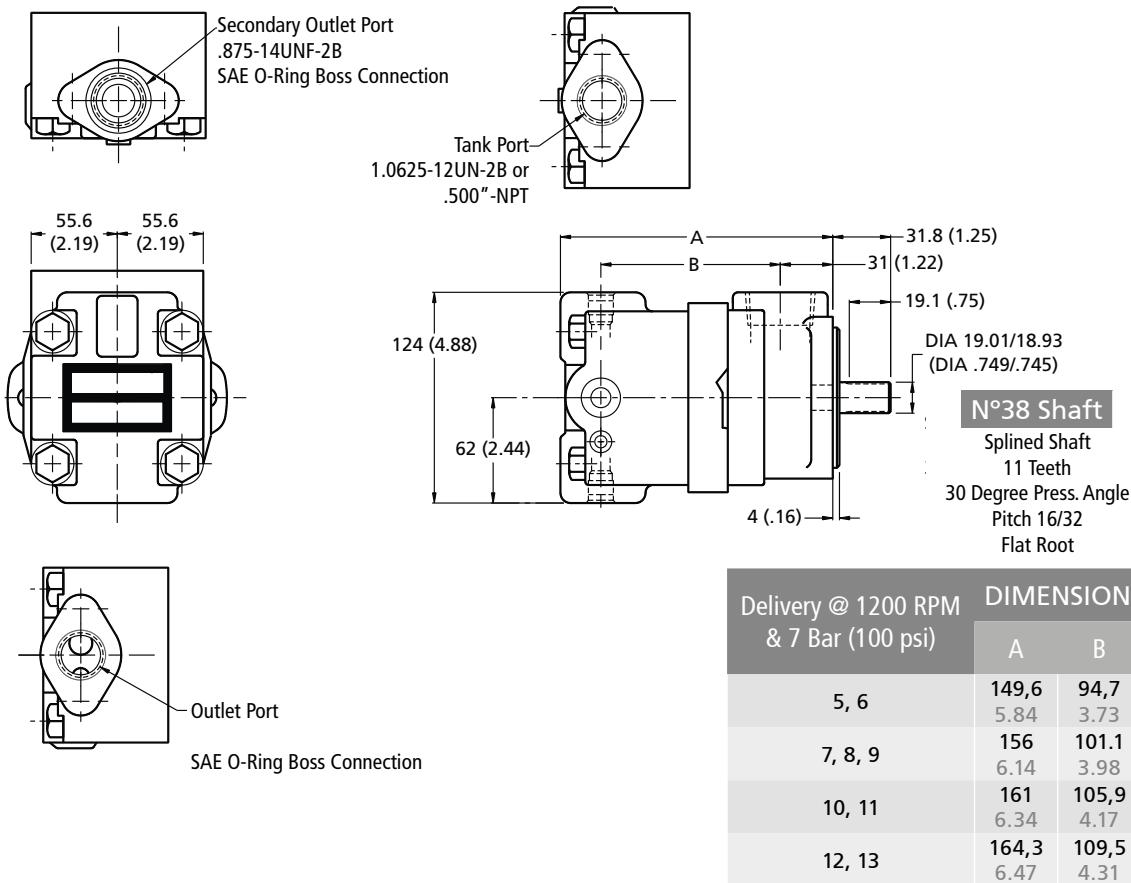VC20F INSTALLATION DIMENSIONS




SHAFT OPTIONS

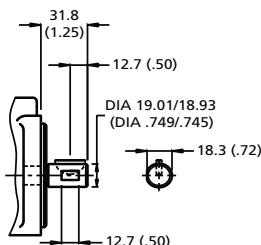VC20 / VC20F




N°6 Shaft Straight Stub Keyed Shaft

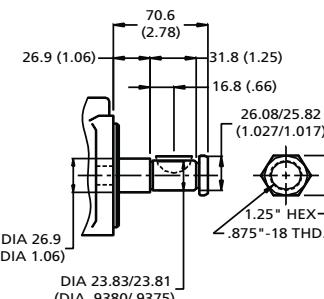

N°3 Shaft Threaded with #6 Woodruff

PERFORMANCE CHARACTERISTICS

VC10F / VC20F SINGLE PUMPS

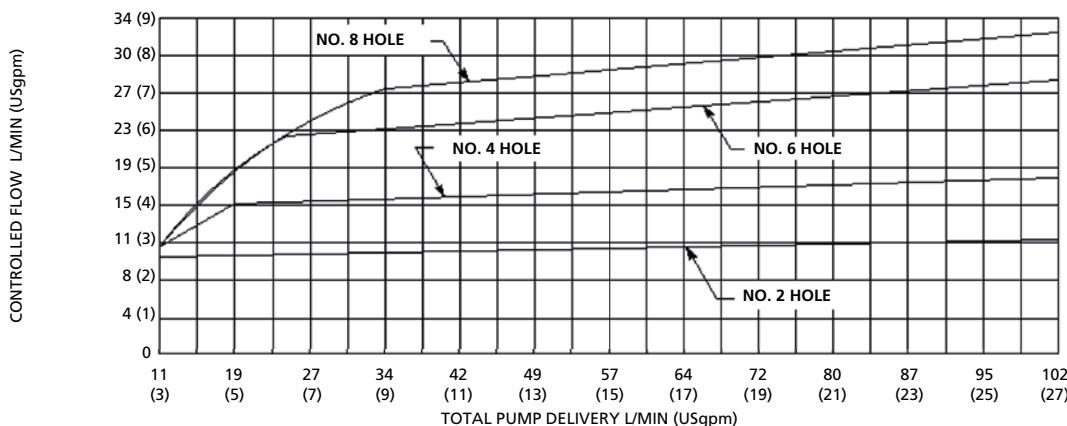

Based on viscosity 32 cSt (150 SSU) oil at 49°C (120°F) and pump inlet at 0 PSIG (14.7 PSIA)

Theoretical Flow (0 Bar)

To calculate the real flow at a given operating pressure, subtract the internal leakage value for this pressure (see diagram below) from the theoretical flow.
(See diagram above).

Theoretical Input Power at 300 Bar

To calculate the theoretical input power at other pressures and speeds, use the formula:

$$P(\text{Kw}) = \frac{Q(\text{L/min.}) \times P(\text{Bar})}{600}$$

Where Q is the theoretical flow (upper left diagram) and P the operating pressure.

To calculate the real input power, add to the theoretical power the hydromechanical power losses (see diagram below).

Do not operate pump more than 5 seconds at any speed or viscosity if internal leakage is more than 50 % of theoretical flow




Bezares Group



VANE MOTOR

MD4C & MF4D

ORDERING CODE

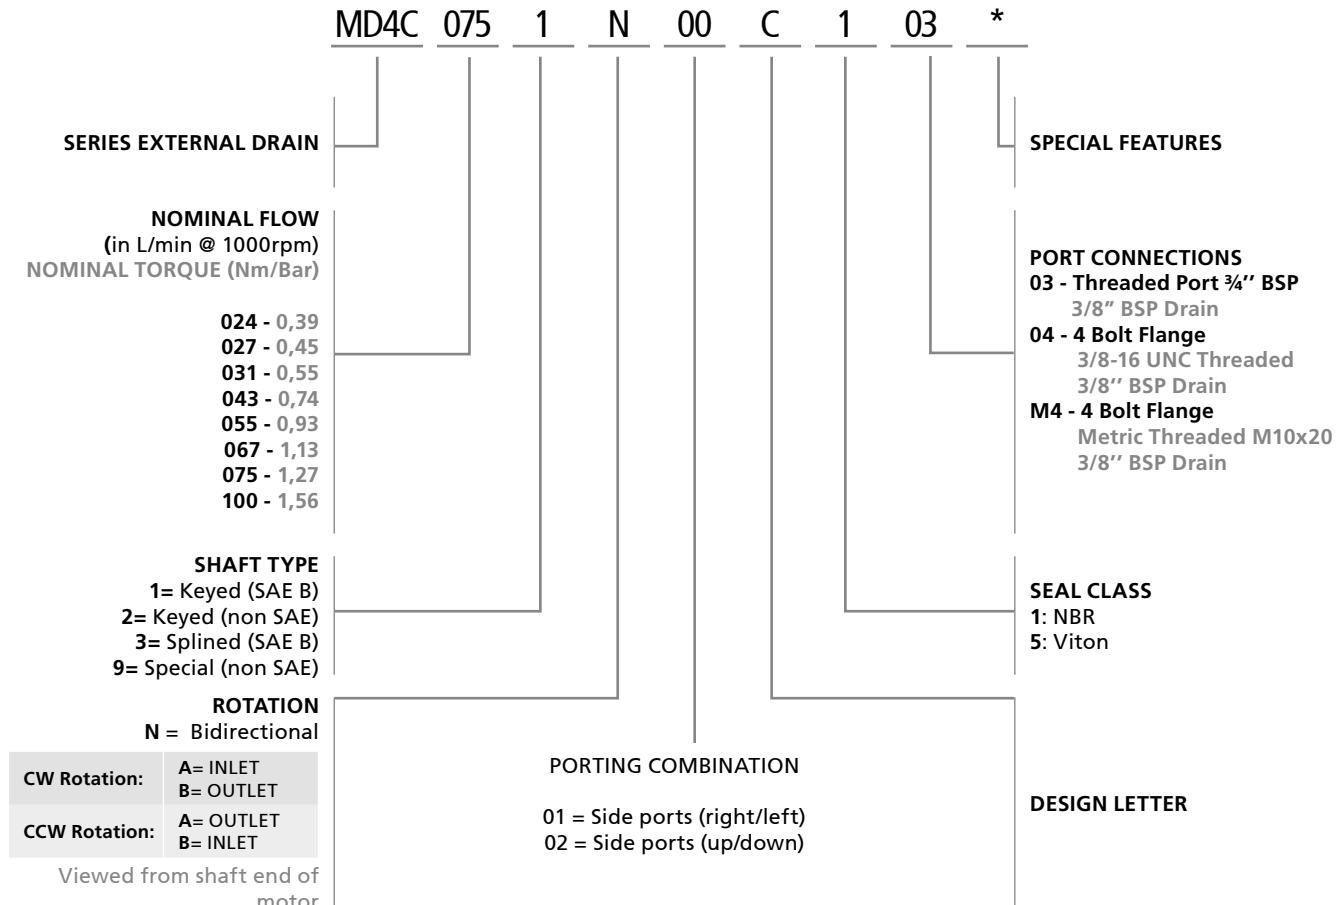

OPERATING CHARACTERISTICS


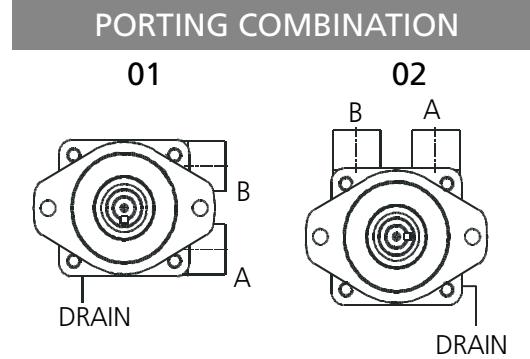
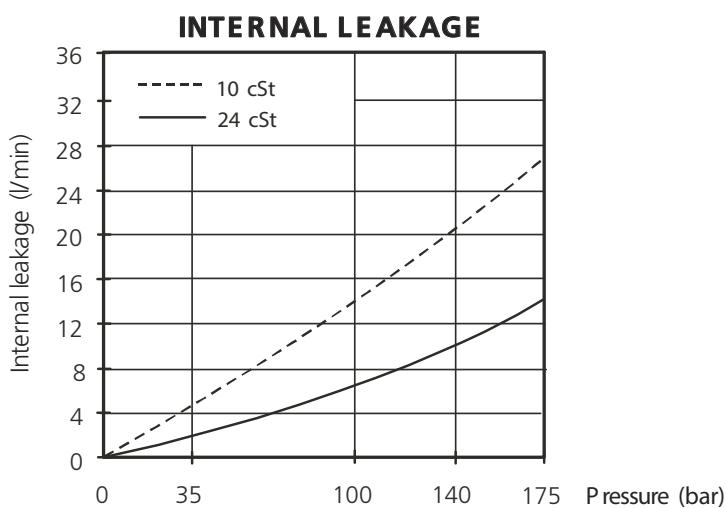


DIMENSIONS, SHAFTS & PORT CONNECTIONS


DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

PORT CONNECTIONS

3/8" 16 UNC 19 DEEP - 8 HOLES
(M10 X 20 DEEP - METRIC VERSION)

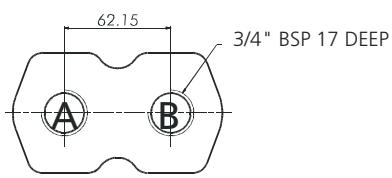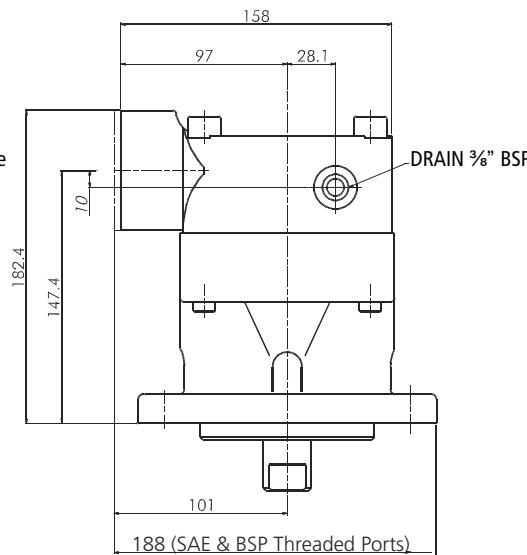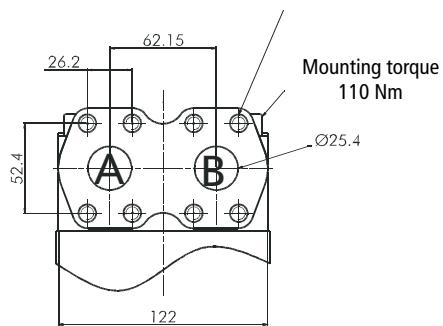


BSP Threaded Port

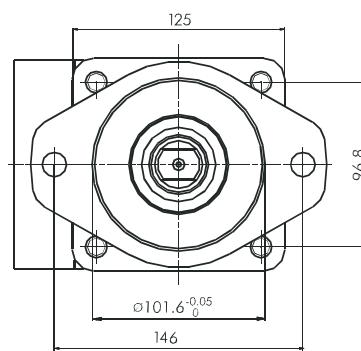


Weight : 15,4Kg


SHAFT TYPE

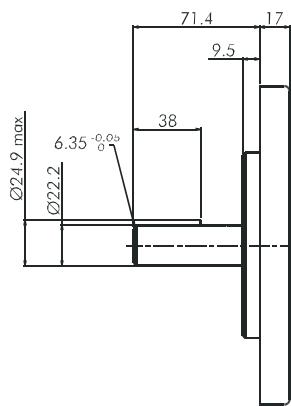


N°1 Shaft

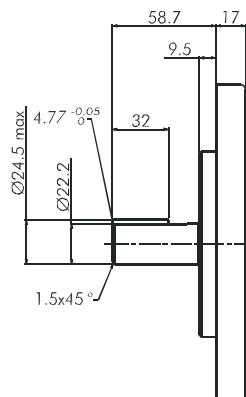

N°2 Shaft

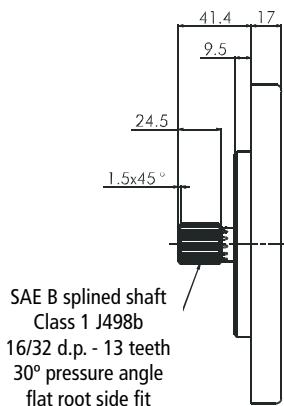


N°3 Shaft

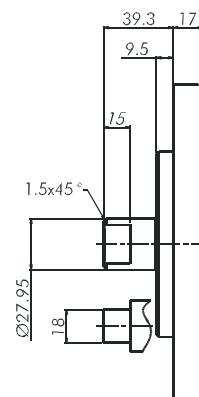

N°9 Shaft


ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

PERFORMANCE CURVES - OIL VISCOSITY : 24 CST (45°)

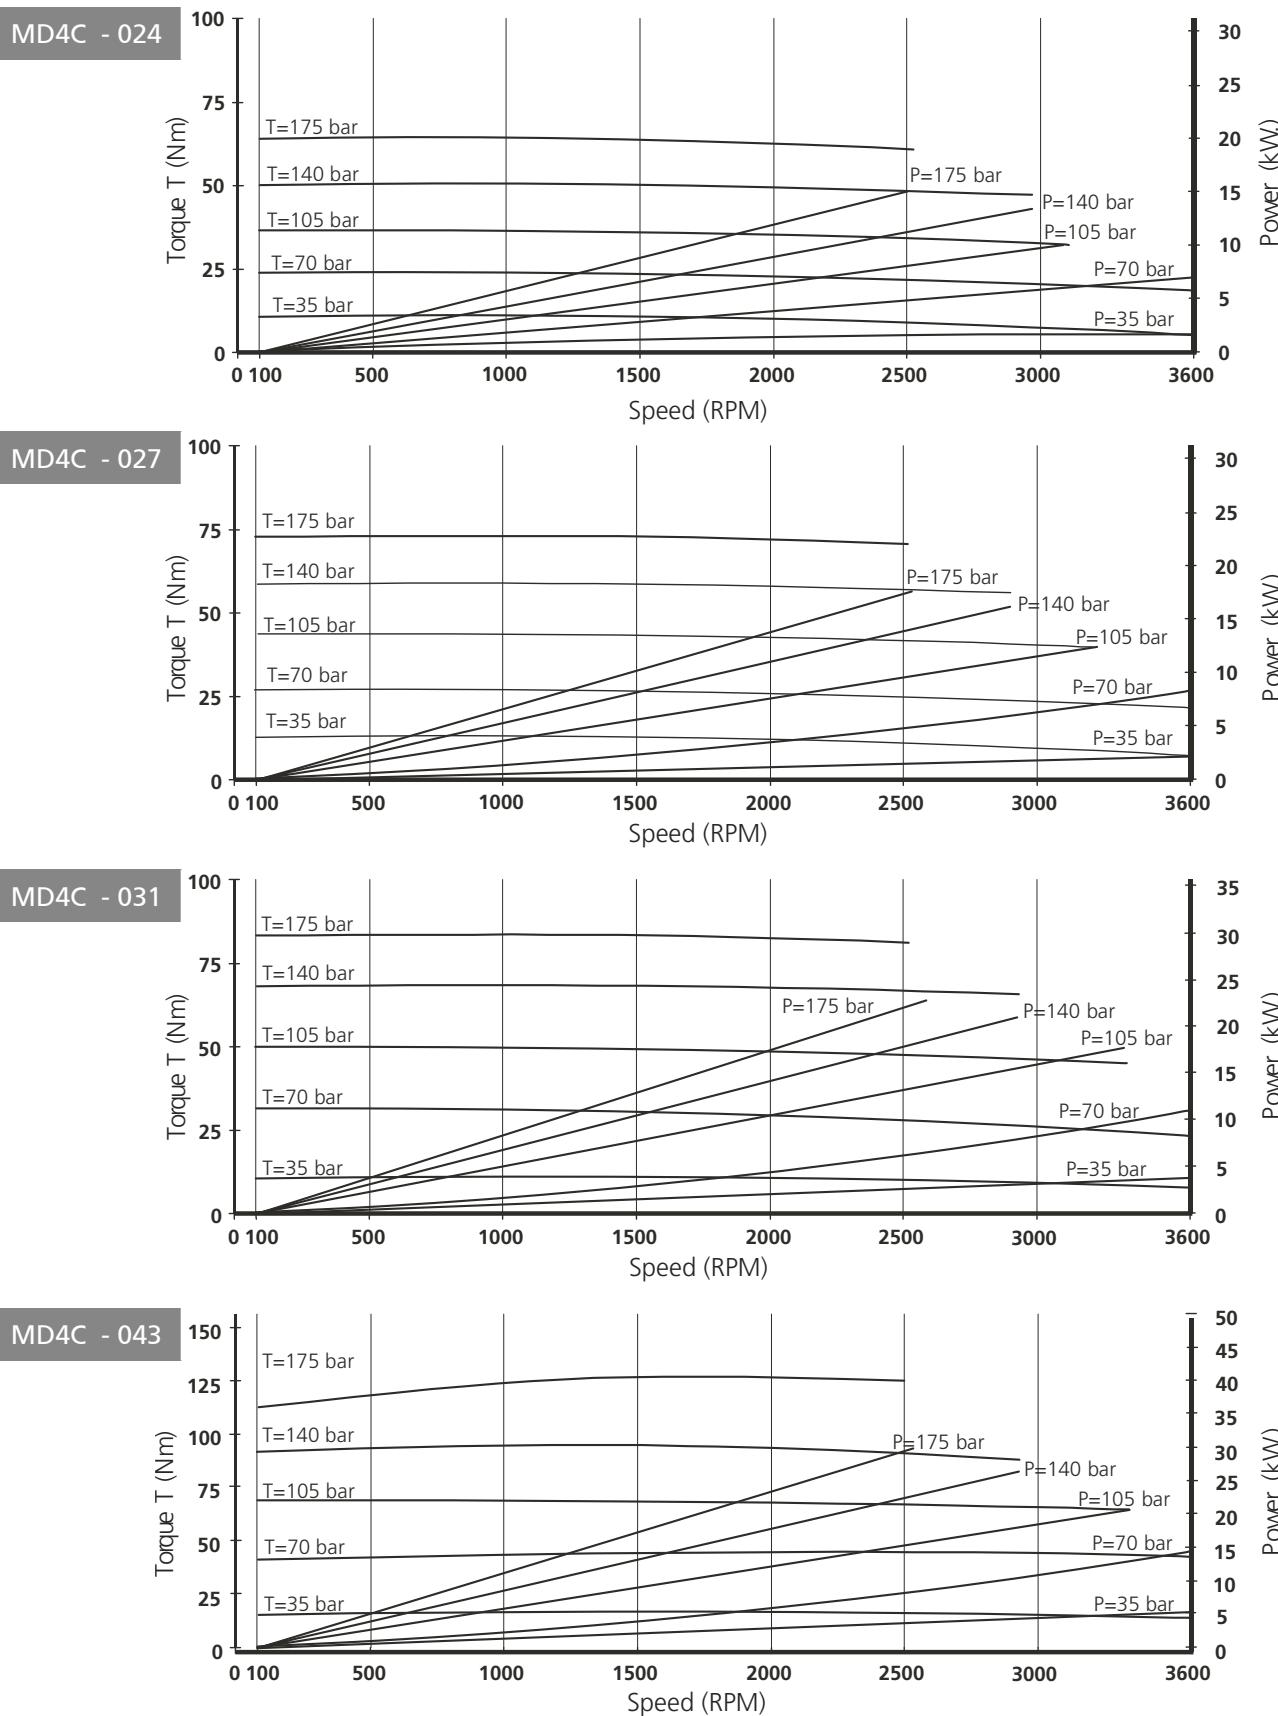


PERFORMANCE CURVES - OIL VISCOSITY : 24 CST (45°)


MD4C - 055

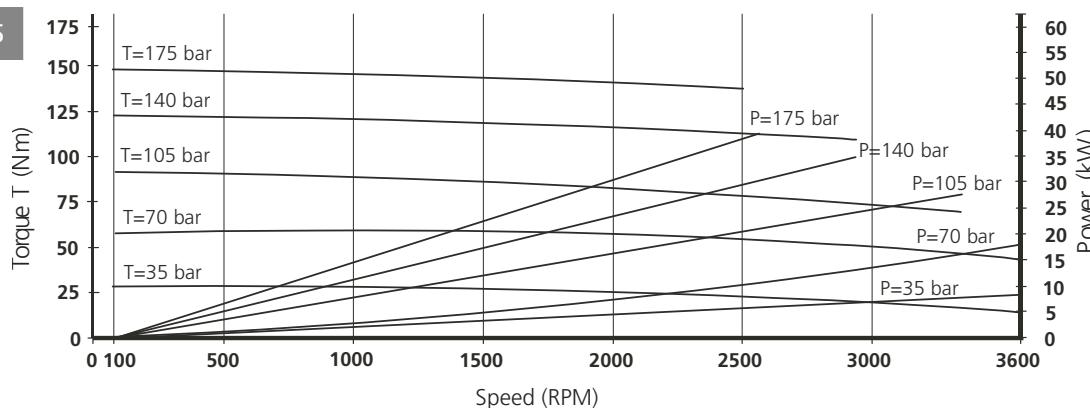


MD4C - 067

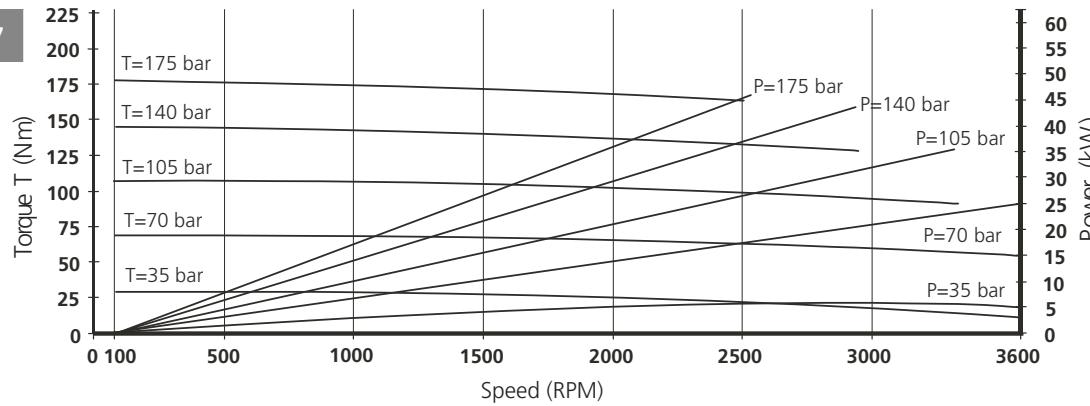



MD4C - 075

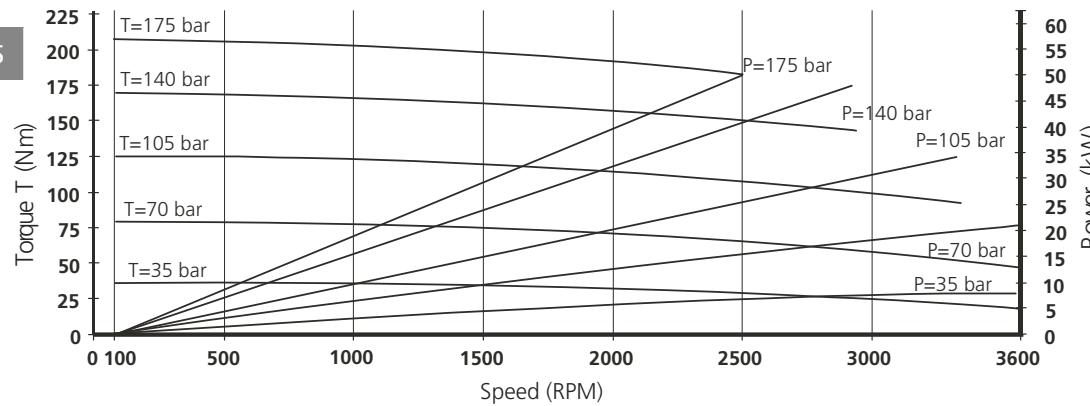

MD4C - 100

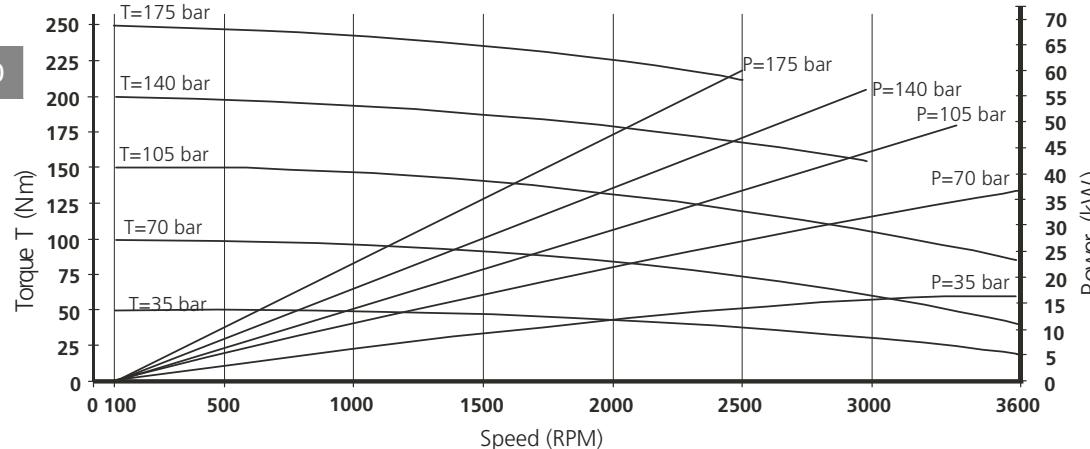

ORDERING CODE

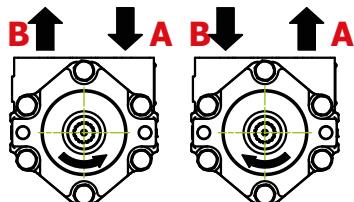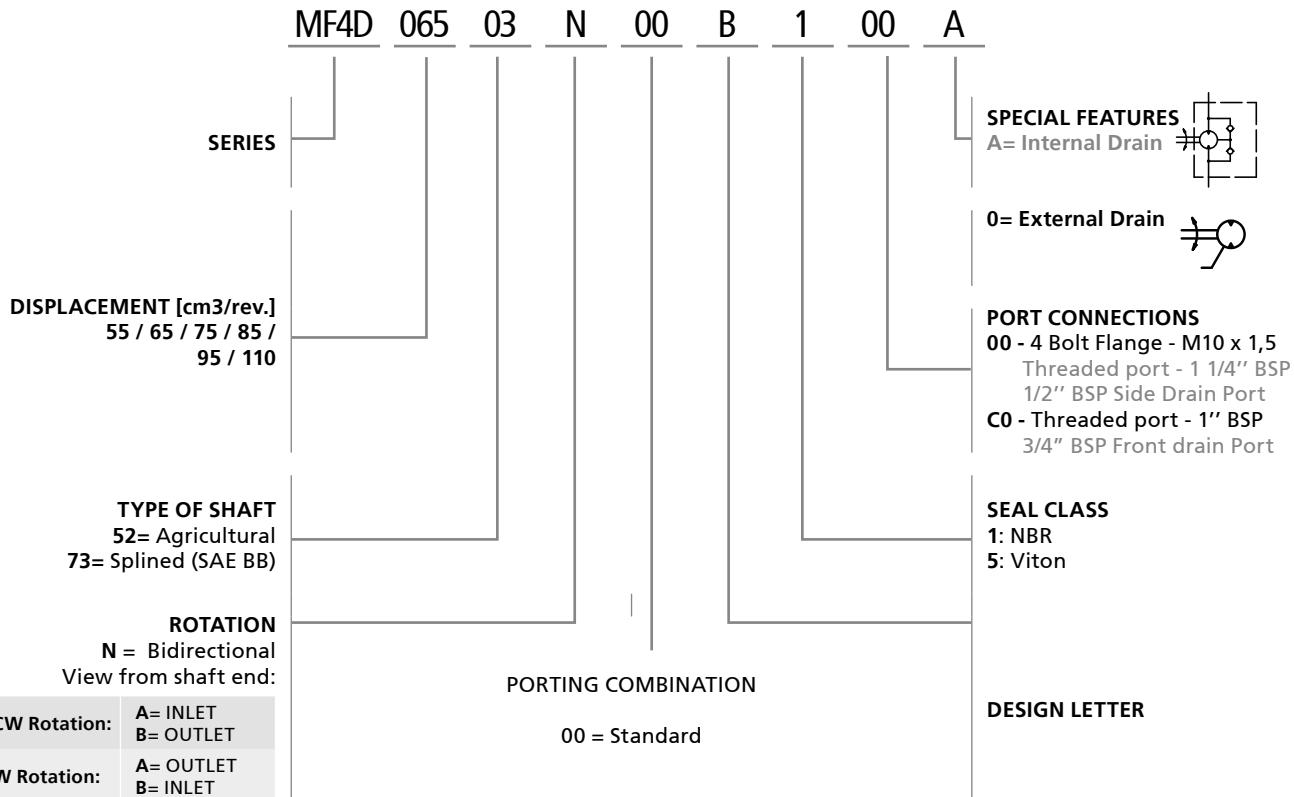


OPERATING CHARACTERISTICS

Maximum external leackage
5 l/min @ 240 bar


DIMENSIONS, SHAFTS & PORT CONNECTIONS

DIMENSIONS IN MILLIMETERS. 1" = 25,4 mm

PORT CONNECTIONS

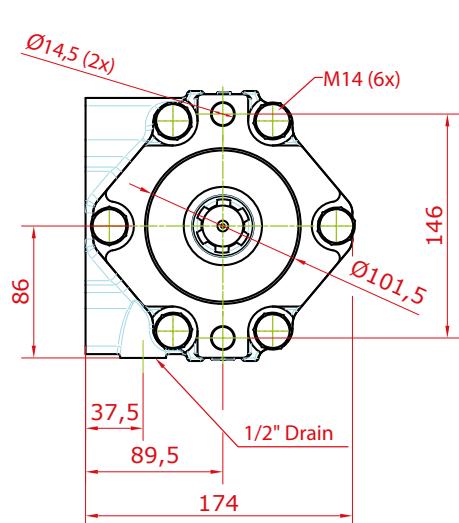


Flange 101-2 ISO 3019-1

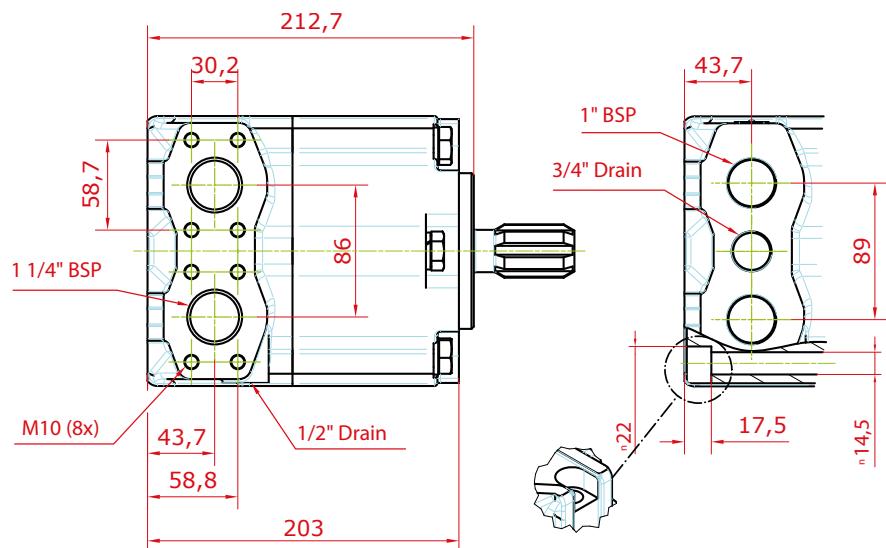

Port ISO 6162-1 P32M


Front Drain Option

SHAFT TYPE

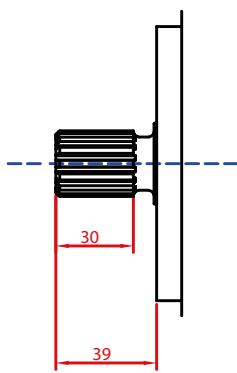

N°73 Shaft

Splined shaft
Class 1 J498b
16/32 d.p. - 15 teeth
30° pressure angle
flat root side fit

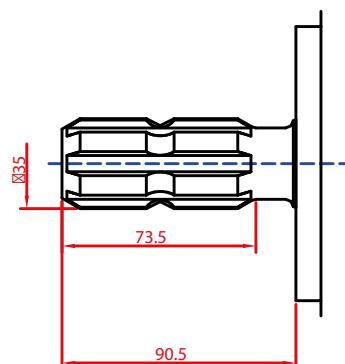

N°52 Shaft


PTO Shaft
ISO/R 500

ADDITIONAL SHAFT CODES: SEE ON PAGES 114-118

PERFORMANCE CURVES - OIL VISCOSITY : 24 CST (45°)


l/min

1200 r.p.m.

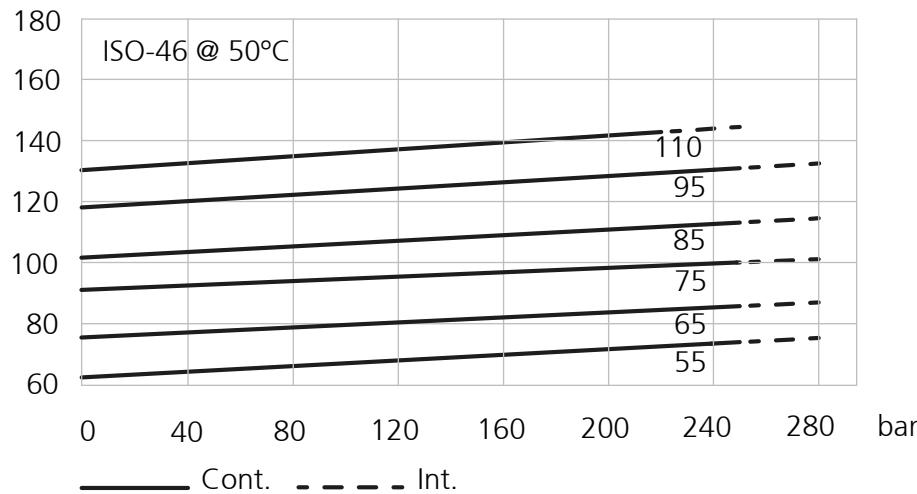


l/min



1800 r.p.m.

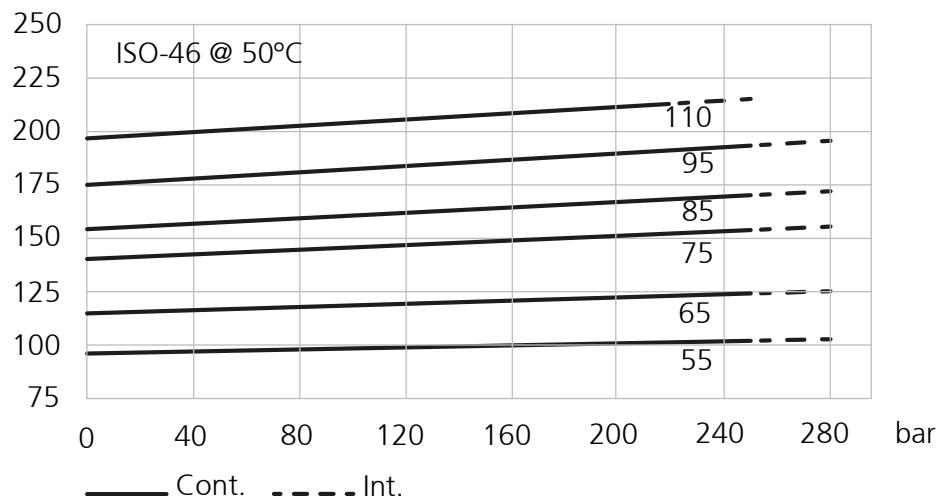

l/min

2200 r.p.m.

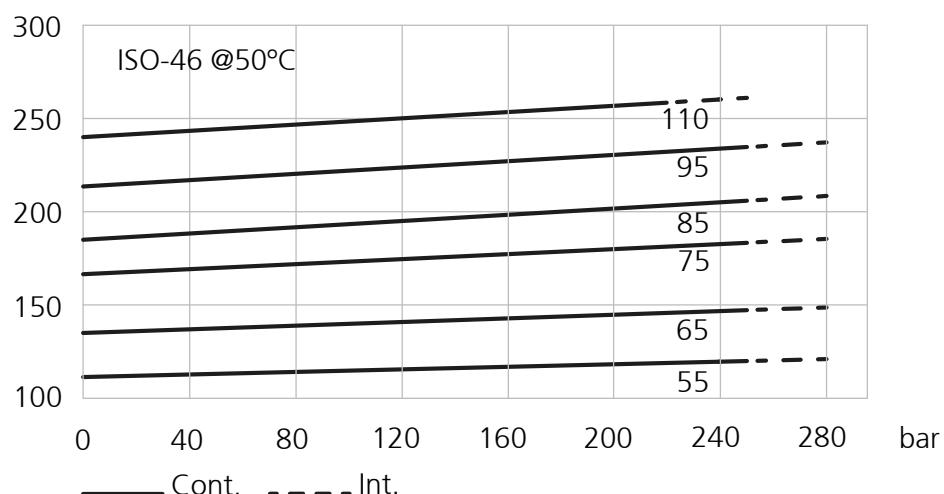

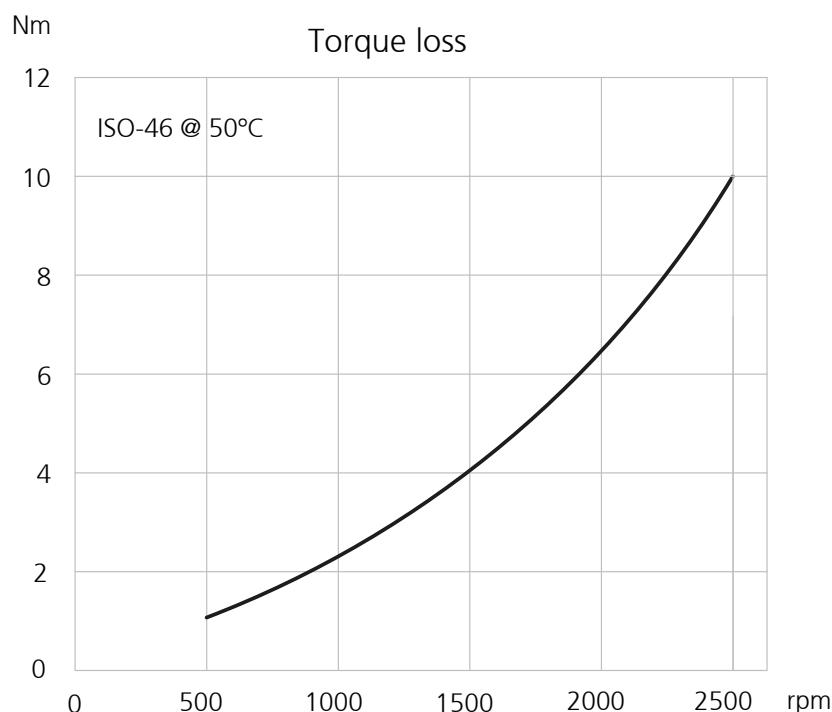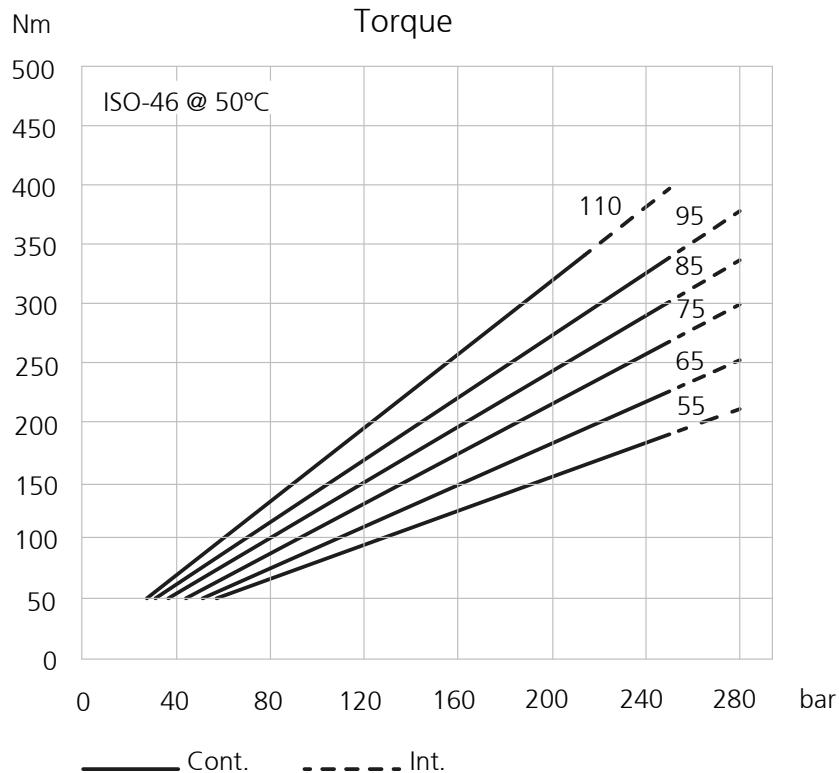PERFORMANCE CURVES - OIL VISCOSITY : 24 CST (45°)




Bezares Group

VANE PUMP SHAFTS


FOR V / DT VANE PUMPS

SHAFTS DATA SHEET

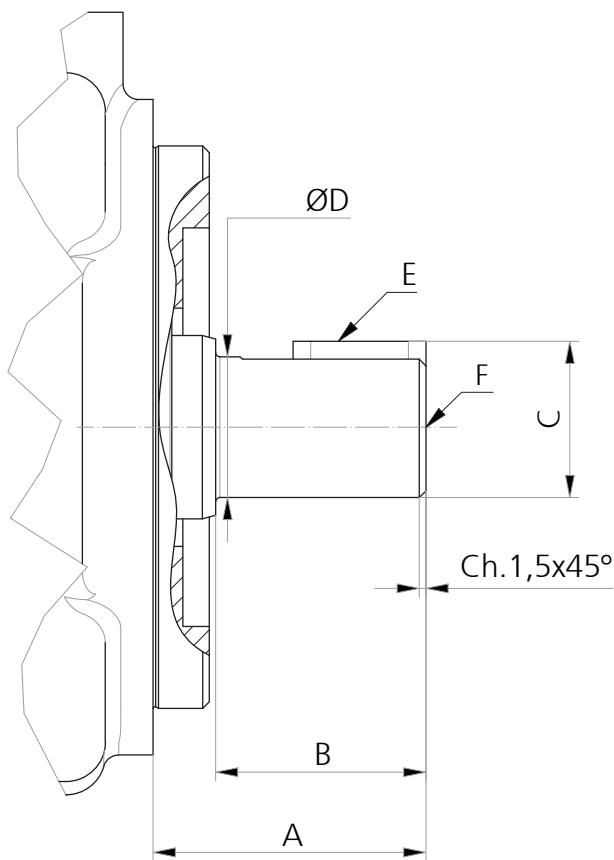


MODEL		Shaft No.	A	B	C	ØD	E	F
SERIES	SIZE							
VS/VQ	20	1	58,5	47	26,1	22,225	6,35x6,35x38	-
		4	58,5	47	24,5	22,225	4,76x4,76x32	M8
	25	1	58,5	47,5	24,5	22,225	4,76x4,76x32	-
		4	72	60	25	22,225	6,35x6,35x38	M8
		86	78	67	28,3	25,37	6,35x6,35x50	-
	35	1	73,5	62	34,3	31,75	7,94x7,94x40	-
		86	85,5	74,5	37,5	34,9	7,94x7,94x54	-
	43	1	61,5	47,5	34,3	31,75	4,7 x 4,7 x 32	-
		86	87,5	73	40,8	38,074	7,94x7,94x56	-
	45	1	58,5	47	24,5	22,225	4,76x4,76x32	-
		86	78	67	28,3	25,37	6,35x6,35x50	-
VS/VQ		1	73,5	62	35,1	31,75	7,94x7,94x40	-
	63	5	89,5	79	35,3	32	10x8x50	M12
		86	85,5	74,5	37,6	34,9	7,94x7,94x54	-
		1	73,5	62	35,1	31,75	7,94x7,94x40	-
	64	15	84	72,5	35,3	31,75	7,94x7,94x54	M10
		86	85,5	74,5	37,6	34,9	7,94x7,94x54	-
	73	1	61,5	47,5	35,3	31,75	7,94x7,94x30	-
		86	90	73	40,8	38,074	9,52x9,52x56	-
	74	1	61,5	47,5	35,3	31,75	7,94x7,94x30	-
		86	87,5	73	42,3	38,074	9,52x9,52x56	-
VS/VQ	76	1	61,5	47,5	35,3	31,75	7,94x7,94x30	-
		86	87,5	73	42,3	38,074	9,52x9,52x56	-
	4TA	1	58,5	47,5	24,5	22,225	4,76x4,76x32	-
		86	78	67	28,3	25,37	6,35x6,35x50	-
	4TB	86	78	67	28,3	25,37	6,35x6,35x50	-
	6TA	86	85,5	74,5	37,5	34,9	7,94x7,94x54	-
	6TB	86	85,5	74,5	37,5	34,9	7,94x7,94x54	-
	6TC	86	85,5	74,5	37,5	34,9	7,94x7,94x54	-
	7TA	86	87,5	73	40,8	38,074	7,94x7,94x56	-
	7TB	86	87,5	73	40,8	38,074	7,94x7,94x56	-
	7TC	86	87,5	73	40,8	38,074	7,94x7,94x56	-

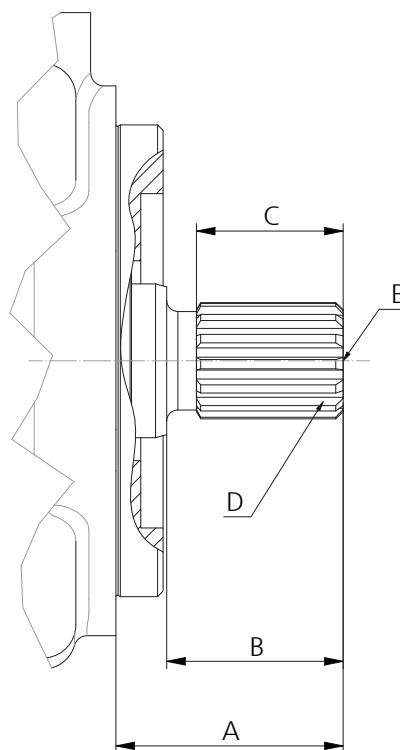


SHAFTS DATA SHEET

MODEL SERIES	SIZE	Shaft No.	A	B	C	D	E
VS/VQ	20	11	44	32	29,5	A	-
		J	41	33,3	22	A	-
	25	11	44	33	34,5	A	-
		J	41	33	21,5	A	-
	35	69	45,5	38,5	34,5	B	-
		104	61	45,5	42	C	-
	45	105	51,5	36	32,5	C	3/8"-16 UNC
		109	73	57,4	46	B	-
	43	123	44	28,8	25,5	A	-
		4	73,5	62,5	46,5	B	-
	63	11	58,5	47,5	41,5	B	-
		J	55,5	48	38,7	B	-
	43	19	66	77,3	46	B	-
		69	56	47,5	41,5	B	-
	43	98	59,5	47,5	42	B	-
		110	73,5	57	44	B	-
	43	114	58	41,5	37,2	B	-
		123	59	42,5	38	B	-
	43	4	73	60,5	45,5	B	-
		11	61	47,5	39,5	B	-
	43	J	56	48	38	B	-
		12	62	47,5	39,5	B	M8
	43	33	72,5	58	48,5	B	-
		111	73,5	55	48,5	B	-
	43	130	62,5	44	34,5	B	-
		11	44	33	30	A	-
	43	J	41	33,3	25,5	A	-
		105	51	35,5	32	C	-
	43	112	77	61,5	48	B	-
		115	45,5	37,6	26	D	-
	43	145	62	47,5	43,5	B	-
		S	59	47,5	40	B	-
	43	11	59	47,5	42,5	B	-
		J	56	48	40	B	-
	43	13	58	46,5	41	B	-
		19	77,5	66	47	B	-
	43	113	77,5	61	47	B	-
		114	58	41,5	39	B	-
	43	123	59	42,5	39	B	-


Z	Pitch	Major diam.	Form diam.	Minor diam.
A	13	16/32	22,17	20,637
B	14	12/24	31,7	29,634
C	22	24/48	24,03	22,123
D	15	16/32	25,4	23,813
				21,28

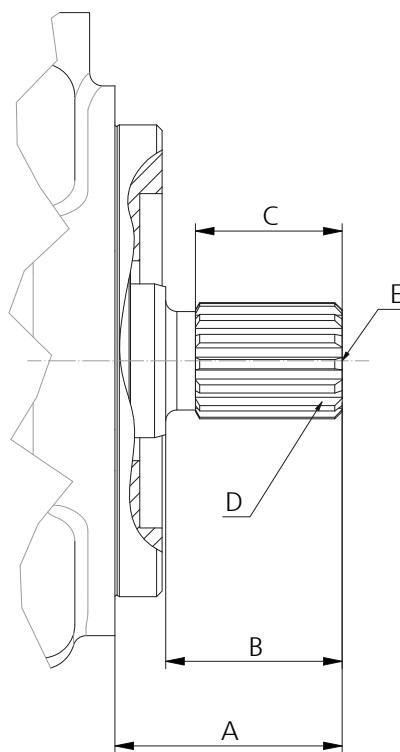SHAFTS DATA SHEET


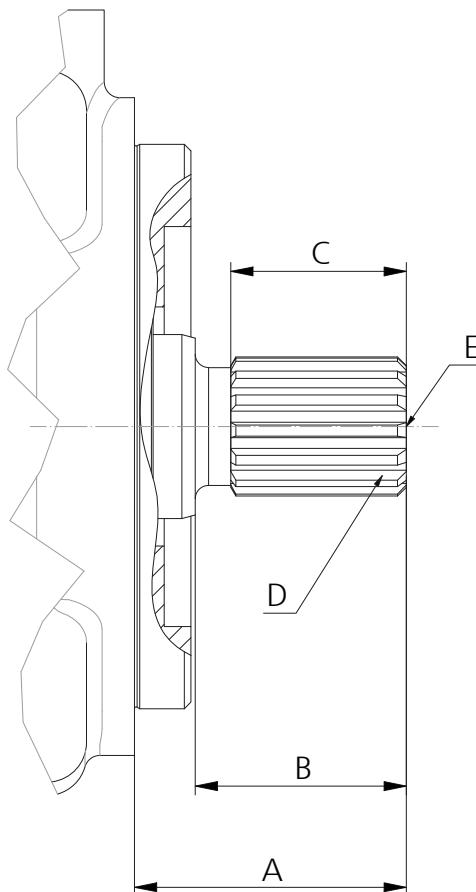
MODEL SERIES	SIZE	Shaft No.	A	B	C	D	E
VS/VQ	64	11	59	47,5	43	B	-
		J	56	48	38,5	B	-
		13	57,5	46	40,5	B	-
		19	77,5	66	47,5	B	-
		33	73,5	66	50,5	B	-
		111	73,5	57	45,5	B	-
		123	58,5	42	38	B	-
	73	142	78	61,5	50	B	-
		11	62	47,5	40	B	-
		J	55,5	48	34	B	-
		13	77,5	65	49,5	B	-
	74	2	78,5	63,5	54,5	B	-
		J	56	48	34	B	-
		11	62	47,5	40	B	-
		13	77,5	65	49,5	B	-
		19	77,5	63	47,5	B	-
		42	77,5	63	47,5	B	-
		114	77,5	59	50	B	-
		115	65,5	47	41	B	-
		130	62	43,5	34,5	B	-
		11	62	47,5	39,5	B	-
	76	J	56	41,6	31,5	B	-
		13	74,5	65	49,5	B	-
		19	77,5	63	47,5	B	-
		113	77,5	59	50	B	-
		114	77,5	59	50	B	-
		130	62	43,5	34,5	B	-
		11	78	67	28,3	A	-
4TA 4TB 6TA 6TB 6TC 7TA 7TB 7TC	4TA	11	85,5	74,5	37,5	A	-
	4TB	11	85,5	74,5	37,5	B	-
	6TA	11	85,5	74,5	37,5	B	-
	6TB	11	85,5	74,5	37,5	B	-
	6TC	11	87,5	73	40,8	B	-
	7TA	11	87,5	73	40,8	B	-
	7TB	11	87,5	73	40,8	B	-
	7TC	11	87,5	73	40,8	B	-

Z	Pitch	Major diam.	Form diam.	Minor diam.
A	13	16/32	22,17	20,637
B	14	12/24	31,7	29,634
C	22	24/48	24,03	22,123
D	15	16/32	25,4	23,813

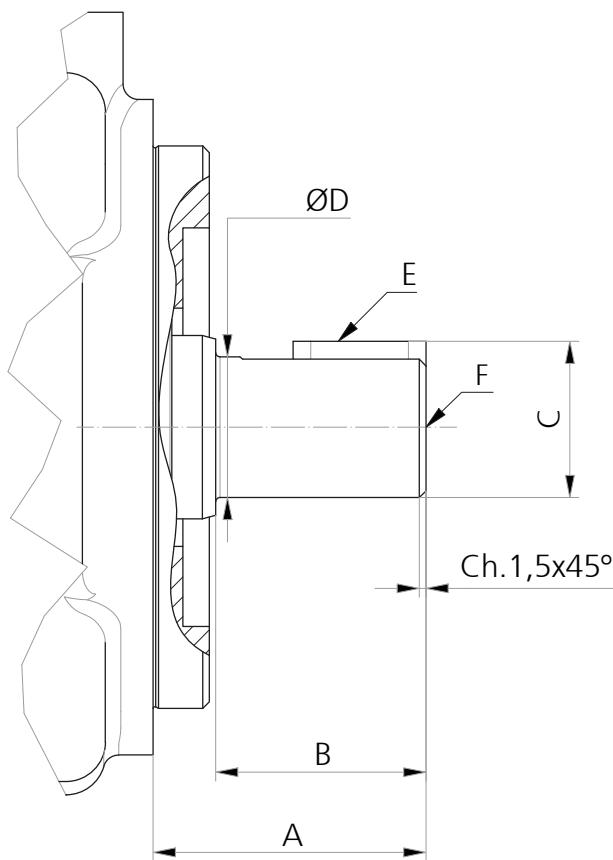


SHAFTS DATA SHEET

	Shaft No.	A	B	C	D	E	F
DT6	C	1	71,5	63,5	24,94	22,225	6,35x6,35x38
		2	58,6	50,3	24,5	22,225	4,76x4,76x32
	D	1	84	75,7	35,225	31,75	7,94x7,94x54
		2	72	65,2	35,24	31,75	7,94x7,94x40
	E	1	91	83	42,225	38,075	9,52x9,52x50
		2	62,5	54	35,24	31,75	7,94x7,94x40
		1	58,6	50,3	24,5	22,225	4,76x4,76x32
		2	71,5	63,5	28,2	25,4	6,35x6,35x38
	CC	V	88,5	80	35,3	32	10x8x50
		W	55,1	-	35,24	31,8	7,94x7,94x40
DT7		X	63,7	52,4	29,75	26,95	6,35x6,35x46
	DC	1	84	75,7	34,3	31,75	7,94x7,94x54
		2	74	65,2	35,225	31,75	7,94x7,94x54
		5	84	75,5	38,375	34,9	7,94x7,94x54
		V	89	80	35,3	32	10x8x50
	EC	1	91	83	42,2	38	9,52x9,52x56
		2	62,5	54	35,24	31,75	7,94x7,94x40
	ED	1	91	83	42,225	38,075	9,52x9,52x50
		2	62,5	54	35,24	31,75	7,94x7,94x40
	DCC	1	85,4	75,7	34,5	31,75	6,35x6,35x50
	EDC	2	91,5	81,8	42,276	38,075	9,52x9,52x56
	B	1	90	83	48,5	45	14x9x63
		2	71,5	63,7	24,9	22,225	6,35x6,35x38
	D	1	84	75,7	35,225	31,75	7,94x7,94x54



SHAFTS DATA SHEET

MODEL SERIES	SIZE	Shaft No.	A	B	C	D	E
DT6	C	3	41	33	27	A	-
	C	4	45,5	37,5	27,5	D	-
	D	3	56,5	47,4	40	B	-
	D	4	77,5	69,8	50	B	-
	E	3	62,5	48	42,5	B	-
	E	4	62,5	54,3	36,5	E	-
	E	12	62	47,5	39,5	B	M8
	CC	3	44,5	37,5	27,5	D	-
	CC	5	41	33	27	A	-
	DC	3	56	47,4	41	B	-
	DC	4	78,5	69,8	51	B	-
	EC	3	56	48	41	B	-
	EC	4	61	54,3	35,5	E	-
	EC	13	74,5	66,1	59,5	B	-
	ED	3	56	48	41	B	-
	ED	4	61	54,3	35,5	D	-
	DCC	3	57	47,5	40	B	-
	DCC	4	62,5	53	33	D	-
	DCC	6	77,5	68	50	D	-
	EDC	3	74	67	53,5	F	-
DT7	B	3	41	32,8	26	A	-
	D	3	54,5	47,3	40	B	-
	D	4	77	69,8	50	B	-

	Z	Pitch	Major diam.	Form diam.	Minor diam.
A	13	16/32	22,17	20,637	18,16
B	14	12/24	31,7	29,634	26,65
C	22	24/48	24,03	22,123	24,54
D	15	16/32	25,4	23,813	21,28



Bezares Group

VANE PUMP DESCRIPTION FACTORS AFFECTING PUMP LIFE

PUMP CONSTRUCTION AND PARTS IDENTIFICATION

PUMP PARTS

The components of a typical vane-type pump are shown in Figure 1. This single-section pump has one cartridge assembly.



Figure 1

Double-section pumps (Figure 2) are similar, but have a longer shaft and housing, and use two cartridge assemblies. The housing sections include the body and covers, which have the openings for line connections. Also shown are the shaft with drive end bearing and seal, and the O-ring seals necessary to isolate the inlet and outlet compartments when the cartridge is assembled in the housing sections.



Figure 2

CARTRIDGE PARTS

Figure 3 shows the individual parts of a cartridge assembly. These high-precision parts comprise the actual pumping unit. The vanes (and vane inserts in most pumps) fit in the slots of the rotor, which is splined to, and driven by, the pump shaft. The rotor is installed on the shaft in the centre of the oval shaped cavity inside the cam ring. The cam ring is a liner for the housing, hardened for high resistance to wear. It is machined to provide the correct side clearance for the rotor and vanes, and the correct internal contour for the vanes to follow. The end plates fit against both sides of the cam ring, enclosing the rotor and vanes. Two pins hold all the parts in alignment, and two screws retain the assembly. Both plates have grooves and passages to control oil flow. The larger of the two end plates has the outlet ports and is usually called the pressure plate. The other plate, used on the inlet side is called the wear plate. Oil pressure behind the pressure plate holds the pump components together.



Figure 3

PRINCIPLE OF OPERATION AND OIL FLOW

During operation, the vanes are held outward against the cam ring by internal hydraulic pressure. Pressure oil enters the cavity between the vane and vane insert through the groove in one side of the rotor slot, causing the insert to act as a small piston. With the insert against the bottom of the rotor slot, the pressure oil between the top of the insert and the vane gives a uniform, controlled force to hold the vane outward. Any oil in the slot under the vane on each side of the insert can flow out through the drilled holes to the outside diameter of the rotor.

As the shaft turns the rotor, the vanes follow the internal contour of the cam ring. There are two points of minimum clearance between the rotor and cam ring, and two points of maximum clearance. These four points are located alternately each 90° of rotation. As the rotor turns, the vanes move outward during 90° of rotation, then inward during the next 90° of rotation. This completes a pumping cycle each 180° or one-half turn, giving two complete pumping cycles per revolution. With this design, the pressure loads and rotation resistance are equal on both sides of the rotor, so the internal forces are in balance. This keeps bearing loads and other stresses low for longer pump service life.

PUMPING ACTION

Each pair of vanes forms a pumping chamber which increases in volume as the vanes move outward, and decreases in volume as the vanes move inward. This change in volume, or displacement, produces the pumping action. During the rotation quadrant (90°) where the volume increases, oil is drawn into the chamber through the inlet port. As the chamber moves through the next quadrant, the volume decreases and the oil is forced out through the outlet port. Pressure develops only in direct relation to any restriction downstream from the pump outlet. If there is no restriction, the oil flows without pressure.

For the two pumping cycles per revolution, two inlet and two outlet ports are used. These are located alternately in each quadrant to permit oil flow in and out of the pumping chambers. Since the chambers are closed, and displace a specific volume per revolution, the pump is a positive displacement type.

PUMP ROTATION

When installing a replacement pump or pump cartridge, be sure to check the direction of rotation. The cartridge assembly is directional in rotation, but most cartridges can be reversed if necessary. Changing the direction of rotation changes the part number of the cartridge. To do this, it is only necessary to exchange the end plates. The cam ring, rotor, and vanes are the directional parts, and these must be correctly aligned with each other. Vane direction can be identified by the bevelled outer edge: The side in contact with the cam ring is the front, or leading side; the bevel is toward the back of the vane. The cam ring and rotor are marked with arrows showing the direction of rotation, and these arrows must be aligned to point in the same direction. A number is stamped beside the arrow on the cam ring. This number is a standard gallons-per-minute rating of the manufacturer under consistent, specific conditions, and can be used for comparative purposes; i.e., the cam ring of a new cartridge should have the same number as the cam ring of the cartridge that was removed. Normally, the manufacturer's rating is established at 1200 RPM and 100 PSI (7.03 kg/cm²), with oil at 150°F (66°C).

Today, TDZ machines use hydraulics almost exclusively to power implement and steering systems. Increased machine productivity has resulted in the design and use of greater capacity pumps and higher pressure systems. The new pumps and higher pressures impose greater stress on system components.

The vane-type hydraulic pump will normally provide good service when it is operated with a good grade of oil in a system that is clean and functioning properly. However, improper maintenance of the hydraulic system can cause early pump failure. Determining and correcting the cause of pump failure will insure adequate service life for the replacement pump.

This information is to assist in making a correct analysis of wear patterns or damage to pump parts. A correct analysis is very important in finding the basic cause of failure so it can be corrected. Unless the basic cause is corrected, a repeat failure is inevitable. Any time a pump or cartridge must be replaced, especially after early failure, inspect all the parts very carefully. The damage may not be as well defined as the examples shown, and/or the parts may have more than one type of damage. Also, the most obvious damage may not be the basic cause of failure. For example, a rotor seizure can be the result of gradual deterioration due to abrasive dirt or metal particles in the oil. If so, the contamination is the basic cause of failure, not the rotor seizure. This can be determined only by a careful, thoughtful study of the pump parts. A correct analysis and identification of the basic cause of failure is essential to prevent repeat failures.

The TDZ vane pump is the heart of the hydraulic system, which is a major component of the machine. When making an analysis of a pump failure, it is essential to consider all the factors affecting machine operation, including machine equipment, operator proficiency, job conditions and machine application. Be sure to check each of the following items:

1. Condition of each part of the pump and cartridge.
2. Type, grade and condition of hydraulic oil and filters.
3. Operating conditions and symptoms before and at the time of failure.
4. Condition of other components of the hydraulic system.
5. Severity of conditions in the job application.
6. Length of pump service life before failure.
7. Previous failures and repairs to the hydraulic system.

The factors affecting operation of the pump and hydraulic system are closely related and must be considered in conjunction with each other. Recognition of the various conditions and possibilities will aid in understanding the relation of pump damage characteristics to the hydraulic system.

HYDRAULIC OIL

The oil used in the system must have the correct additives and film strength sufficient to maintain a lubricating film, especially between the vanes and cam ring. Always use a high quality oil of the correct type and grade containing additives to control oxidation, foam, rust and wear. The anti-wear additive is very important and the present recommendation is to use oil containing zinc dithiophosphate or a comparable additive.

HIGH OIL TEMPERATURE

Excessive heat in the hydraulic system is a primary cause of seal failure. Oil temperatures in the tank must not exceed 200° - 210°F (93° - 99°C), or damage can result. To keep the oil below critical temperatures, the hydraulic system must be well maintained, in efficient operating condition, and must not be abused or overloaded. Where there is evidence of high oil temperature, inspect the oil cooler to be sure it is clean and

functioning correctly, then check the system for bypassing of oil at high pressure. Any bypass of high pressure oil causes a rapid rise in oil temperature. Some possible causes of bypassing are:

- ... A worn pump, permitting oil to bypass internally from the high pressure to the low pressure side of the pump.
- ... A worn or sticking control valve or relief valve.
- ... A low pressure setting of the relief valve, allowing it to open too frequently.
- ... Frequent relief valve operation caused by excessive pressure in the system.
- ... Loose, missing or damaged parts, such as a seal or gasket, in the tank.

OIL SEALS

Hydraulic system seals are very important, and must be inspected frequently and carefully. The most critical seals are those on the hydraulic cylinder rods. The cylinder rods are the only hydraulic system components which are exposed alternately to both external and internal conditions, and only the seals prevent dirt from being carried directly into the system. If the lip of the wiper seal has no visible damage, there is no oil leakage, and the rod has no visible damage, these parts can be considered in good condition. Any worn or damaged seals, especially the wiper seal, can permit dirt to enter the system.

Seal damage is frequently caused by hot oil. Depending upon its material content, the seal may become hard and brittle, causing cracks; soft and pliable, permitting extrusion; or it may erode away. Seal effectiveness also depends on the contact surface of the cylinder rod, which the seal must wipe clean with every stroke of the cylinder. If the rod surface is scored, peened, pitted, rusted or worn, the seal cannot function effectively. In conditions where the cylinder rods can be damaged by falling rocks or other material, guards should be installed to provide protection.

SYSTEM OVERLOADING

The hydraulic system can be overloaded either by overloading the machine, or by poor operating practices. The machine is designed for optimum performance under specific conditions of weight, loads and operation. Oversize buckets, blades or other implements, and/or ballast or counterweights heavier than recommended, cause overloading of the machine and hydraulic system. Working the machine against extreme loads and/or bottoming the hydraulic cylinders causes excessive pressures. These pressures are potentially damaging, and should be prevented whenever possible. With a machine in good operating condition, correctly equipped and matched to the job, the operator should be able to achieve optimum production without exceeding the maximum pressure setting of the relief valve in the system more than once per machine cycle.

PUMP LUBRICATION

The pump must have an adequate supply of oil at all times. Before installing a new pump or a pump having a new cartridge, fill it with the same oil recommended for the system, and turn the shaft to distribute the oil over all the internal surfaces. This procedure is very important to prevent damage or excessive wear to the pump during the priming period after the engine is started. Also, to maintain pump lubrication, correct procedures must be followed when filling a system that has been drained. Remember, you are filling the system, not just the oil supply tank. Pump failure due to lack of oil can result if filling is not done correctly. The tank contains only enough oil to take care of changes in volume when the hydraulic cylinder rods are extended or retracted during machine operation. Refilling the hydraulic cylinders, lines and accumulators after the system has been completely drained may require a volume of oil two or three times the capacity of the tank. Therefore, oil must be added to the tank several times to be sure the system has an adequate supply. If the oil level in the tank drops too low, the new pump can be severely damaged by a lack of oil or by aeration of the oil. If the return oil in the tank discharges above the oil level in the tank, aerated oil will result. During operation, pump damage due to poor lubrication can result from excessively high oil temperature, using the wrong type of oil, or a lack of adequate oil supply.

PUMP SHAFT LUBRICATION

Lubrication of the drive splines on the pump shaft is completely separate from the hydraulic system. These splines receive lubrication from the engine oil system or other drive compartment through the pump drive. Spline wear can be due either to a defective shaft, which is not hardened correctly, or to a lack of shaft lubrication. Where splines are worn, make a careful inspection of the pump drive. Check all oil passages, including openings in seals, gaskets and sleeve-type bearings. An oil passage can be closed by an incorrectly installed seal, a gasket installed with the oil hole in the wrong position, or a wrong gasket having no oil hole. Also, a sleeve-type bearing with no oil hole, or installed with the oil hole in the wrong position, can prevent oil flow.

AERATION AND CAVITATION

Aeration and cavitation are two completely different conditions, but have very similar damage characteristics. Aeration is a mixing of air with the oil, either by excessive agitation or air leakage into the system; cavitation is the result of a restricted oil supply to the pump. In either condition, small bubbles of air or oil vapour are mixed with the flow of oil. These bubbles displace some of the oil, causing poor lubrication, and they are compressible, causing unstable vane action. Where a quantity of air bubbles enters the lines and cylinder, the compressibility can cause spongy or jerky operation and loss of a positive feel. Since the bubbles are compressible and the oil is not, the sudden collapse of the bubbles under pressure in the pump causes a hammering or pounding as the oil closes the spaces. This results in a vibration which can be strong enough to crack or break the cam ring, pump body and/or body bolts. This is also the source of the characteristic sound, often described as "pumping marbles". The forces produced by the collapsing bubbles cause erosion and pitting of pump parts.

Aeration can be caused by:

- ... A low oil level. This can cause agitation if the return line is exposed, or let air directly into the pump suction line if the inlet line is exposed.
- ... An air leak in the pump suction line.
- ... Air leakage at a cylinder rod seal or line connection. When the implement is lowered, especially with the control valve in the float position, there is a vacuum in the rod end of the cylinder, and damaged rod seals or rods will permit air entry in the system.
- ... Tank agitation caused by damaged parts, such as: loose or broken hose, loose or missing baffles, or a return tube bent in a wrong direction.
- ... Agitation caused by excessive flow through the relief valve. This can be due to a low pressure valve setting, or excessive system pressure caused by machine overloading or poor operating practices.
- ... Water contaminated hydraulic oil. Although not aeration, it will have the same effect on pumps.

Cavitation can be caused by:

- ... Any restriction limiting the flow of oil through the pump inlet line. If the line is too small, a tube is bent, a hose collapsed, or the suction screen clogged; the flow of oil to the pump will be limited.
- ... A high vacuum in the tank, which retards the flow of oil.
- ... Hydraulic oil too viscous or thick to flow easily through the lines, especially in cold temperatures.

Since aeration and cavitation cause similar damage to the pump, further tests may be necessary to determine which condition is the cause of failure. Where damage characteristics indicate aeration or cavitation, first look for obvious problems, such as: A bent suction tube, collapsed suction hose, or thick, heavy oil which could cause cavitation; or a cracked suction tube, loose suction hose, or low oil level which could cause aeration. If none of these are evident, and the machine is in service, a "bottle test" can be made as follows:

1. Oil in hydraulic tank should be at normal operating level. Run engine at high idle for five minutes with all control valves in "HOLD" position. Be sure the oil is at, or near, the temperature of 150°F (66°C).
2. Lower a small, clean, clear glass bottle into the oil through the tank filler tube, and remove a sample of oil.
3. Hold the bottle up to a strong light and look through the oil for foam and/or bubbles, indicating aeration.
4. If oil is aerated, cause is either a suction line leak or oil discharge in the tank above the oil level. Make necessary corrections so that test can be repeated and a clear oil sample obtained.

If the problem is cavitation and occurs only at the time of starting, and oil viscosity is correct, a high vacuum may exist in the tank. This can be corrected by loosening the filler cap before starting the machine.

OIL SAFEGUARDS

There are several maintenance procedures that are particularly helpful in assuring satisfactory pump and hydraulic motor life.

Two of the most important are:

- Oil sampling
- System flushing.

OIL SAMPLING

A Scheduled Oil Sampling (SOS) program can provide an early warning of some hydraulic system problems. Normally, the testing will not detect particles larger than 10 microns in size, but will detect material such as fine abrasive dirt (silicon) or metal (iron) which is not visible in the oil. Since these fine particles are not visible, the oil can look clean. In addition to causing pump wear or damage, the presence of these particles may indicate other problems in the system. When the test reading shows a high iron content, it may indicate excessive wear or dam which could result in a failure. The test reading of silicon, which shows the amount of dirt in the oil, is normally less than 10 PPM (Parts per Million). When this reading shows a sudden increase, or is as high as 35 PPM, excessive dirt is entering the system. Since cylinder rods and seals are the most common point of dirt entry, make a careful inspection of these parts (See the topic "Oil Seals"), then perform a "Tee Test" to check pump condition.

FLUSHING THE SYSTEM

Abrasive dirt, metal particles or any other contaminants must always be removed from the hydraulic system. Contamination is a frequent cause of pump failure, often due to incorrect flushing procedures after a previous failure. Correct flushing procedures are given in Special Instructions Forms FE040041-01 and GMG00234 for loaders and Form FM055145 for tractor-scrapers. These procedures can be adapted to the hydraulic systems on most other Caterpillar machines, since the basic principles of flushing are similar. Always be sure to flush the system thoroughly after any failure which can introduce metal particles, dirt or any other contaminants into the oil.

If desired, the drained oil can be filtered and reused. This will reduce the quantity of oil needed by as much as 50%. The filter must remove particles 10 microns or larger in size. With diminishing supplies, and the increasing cost of oil, filtering is a practical method of conservation and cost reduction.





Bezares Group

TROUBLESHOOTING TABLE

TROUBLESHOOTING GUIDE
GLOSSARY OF TERMS

NO FLOW, NO PRESSURE

A) Is the pump rotating?

- a-1) Check if the coupling is rotating. If not, check the rotation of the electric motor.
- a-2) Check the keys of the pump and E motor shaft.
- a-3) Check if the shaft is not broken.

B) Is the rotation in the correct direction?

- b-1) Check if the rotation of the pump corresponds to the arrow on the name plate.
- b-2) Check if the wiring of the electric motor is correct.

C) Is the air bleed-off done?

- c-1) Check that no air is still located in the pressure line. Loosen a connector

D) How are the inlet conditions?

- d-1) Check if the inlet gate valve is not closed.
- d-2) Check the oil level.
- d-3) Checks if the inlet hose in the tank is under the oil tank level.
- d-4) Checks if an air intake is not disturbing the inlet (missing inlet flange seal, air trapped in suction line as examples).
- d-5) Check if the pump is not located too high above the oil level.
- d-6) Check if the tank is not completely sealed. Then the lack of atmospheric pressure will not allow the pump to prime.
- d-7) Check if all connections and seals are air-tight.

E) Is the Viscosity not too high?

- e-1) Check if the oil characteristics are not incompatible with the temperature and the pumps requirements. Too high Viscosity will "stick" the vein fluid and enable the pump to suck the oil correctly.

F) Is the pump flow not going somewhere else?

- f-1) Check the hydraulic circuit and the main sequences. Doing so, you will check if all the valves are set or work properly.
- f-2) Check if the main relief valve is not set at an extremely low pressure and therefore bringing all the flow back to the tank.
- f-3) Checks if in the directional valves the spools are not sticking in a position that brings the flow back to the tank.
- f-4) checks if the check valve is not mounted "upside down".

G) Is the receptor working correctly?

- g-1) Check if the motor does not let the entire flow leak internally.
- g-2) Check if the cylinder inner seals are not ruined.

H) Is the speed high enough?

- h-1) Check if the minimum speed is reached. dtpumps require 400 rpm and industrial pumps require 600 rpm.



NOT ENOUGH FLOW (OR NOT THE FLOW REQUIRED)

A) Are the components OK?

- a-1) Check the displacement of the pump.
- a-2) Check if the speed of the pump is not too low or too high (E motor or thermal engine sized too small so dropping the speed too low...).
- a-3) Check if the main relief valve is not set at an extremely low pressure and, therefore, venting some flow back to the tank.
- a-4) Check if in the directional valves the spools are not sticking in a position that brings part of the flow back to the tank.
- a-5) Check if the hydraulic motor is not leaking internally due to a bad efficiency, low viscosity...
- a-6) Check if the cylinder inner seals are not ruined and, therefore, allow internal leakage.

B) Is the connection from the tank to the pump correct?

- b-1) Check if there is no air intake between the pump and the inlet pipe (bad seals for example).
- b-2) Check if the inlet hose is convenient for the required velocity ($0,5 < V < 1,9$ mls).
- b-3) Checks if the pump is not too high compared to the oil level or if the pump is not too far from the tank (checks the inlet absolute pressure with the catalogue values).
- b-4) Check if the gate valve is not semi-open.
- b-5) Checks if the inlet strainer is sized correctly (250 m mesh mini) or not clogged.

C) Is the tank design correct?

- c-1) Check if the oil level is correct.
- c-2) Check if the suction pipe is under the oil level during the complete cycle of the machine.
- c-3) Checks if the inlet hose fitted in the tank is cut with an angle wider than 45° .
- c-4) Check if this inlet hose is not too close to the tank wall or to the bottom of the tank and therefore limits the "vein flow".
- c-5) Check if the suction hose is not located near the return line and therefore sucking a lot of air coming from these turbulences.
- c-6) Check if baffles are required to allow correct deaeration of the fluid.
- c-7) Check if the air filter is not clogged or under seized (not well dimensioned).
- c-8) Check if the tank is not fully tight, not allowing the atmospheric pressure to apply.

D) Is the oil convenient?

- d-1) Check if the oil characteristics are not incompatible with the pumps requirements.
- d-2) Check if the viscosity is not too high, therefore "sticking" some vanes in the rotor or blocking the vein fluid.
- d-3) Check if the high temperature does not destroy the viscosity of the fluid. Doing so, the internal leakage will "consume" the flow.

NO PRESSURE

A) Is the hydraulic circuit correctly designed?

- a-1) Check the hydraulic circuit schematic.

B) Is the circuit correctly piped?

- b-1) Compare the schematic to the piped circuit.

C) Are the components working correctly?

- c-1) Check the main sequences. Doing so, you will check if all the valves are set or work properly.
- c-2) Check if the main relief valve is not set at an extremely low pressure and therefore bringing all the flow back to the tank.
- c-3) Check if in the directional valves the spools are not sticking in a position that brings the flow back to the tank.

NOT ENOUGH PRESSURE

- A) Check as when "no pressure"
- B) Is the system well dimensioned?
- b-1) Check if the flow required is not over the available flow and therefore cannot build-up pressure.
- C) Is there an internal leakage somewhere that maintains a certain pressure?
- c-1) Check all the possible faulty components, from the pump to all the receptors and intermediates (high pressure seals, mechanical wear...).

UNCOMMON NOISE LEVEL

- A) Is the noise coming from the pump?
- a-1) Check the mechanical link of the shaft pump : alignment, balancing of the coupling or Universal joint, key properly fastened, ...
- a-2) Check if the air bleed has been done correctly.
- a-3) Check if there is no air intake from the tank to the pump (not through the shaft seal).
- a-5) Check if the hose strain force does not create this noise.
- a-6) Check if the oil level is correct.
- a-7) Check if the oil in the tank is not aerated.
- a-8) Check if the strainer is not clogged or under dimensioned.
- a-9) Check if the inlet pipe is under the oil level.
- a-10) Check if the air filter is not clogged or too small.
- a-11) Check if the speed is not incompatible with the catalogue values.
- a-12) Check if the oil is compatible with the catalogue recommendations.
- a-13) Check if the inlet pressure is not higher than the outlet pressure.
- B) Is the noise coming from the surroundings?
- b-1) Check the hoses and see if the noise is not coming back to the pump this way.
- b-2) Check the pressure piping and see if its length dumps or amplifies the noise.
- b-3) Check if the structure of the tank is stiff enough to avoid amplification/resonance.
- b-4) Check the E motor fan.
- b-5) Check the balancing of the E motor.
- b-6) Check the water cooler and its theoretical limits.
- b-7) Check the filtration unit, its capacity and if the noise does not come from the opened by-pass valve.



UNUSUAL HEAT LEVEL

A) Does the heat appear when the pump is running without pressure?

- a-1) Check the oil level and the suction pipe. Is the oil coming to the pump (check the length of the pipe, its internal diameter, all that could influence the inlet pressure)?
- a-2) Check if the air bleed has been done correctly. a-3) Check if the flow versus the volume of oil in the tank is correct to obtain a good cooling effect.
- a-4) Check if a cooler is required or, if there is one, if it is well dimensioned.
- a-5) If there is a cooler, check if it is working (example for water cooler: is the water flow open or sufficient).
- a-6) Check if the hydraulic circuit is not bringing back the flow directly to the inlet port. Doing so, it would create a very small closed circuit not able to cool down the fluid.
- a-7) Check the quality of the fluid.
- a-8) Check the velocity of the fluid.
- a-9) Check the filtration unit, its capacity and if the heat does not come from the open by-pass valve or if it is under-dimensioned (bigger delta P).

B) Does the heat appear when the pump is running with pressure?

- b-1) Check the viscosity.
- b-2) Check the pressure rating.
- b-3) Check if the cooler is working correctly or well dimensioned.
- b-4) Check if the relief valve is not creating this heat because always opens.
- b-5) Check if any other component in the system is not creating this heat due to an internal defect.
- b-6) Check if there is a big temperature differential between the inlet and the outlet.

SHAFT SEAL LEAKAGE

A) Is the seal destroyed?

- a-1) Check the alignment and the correct power transmission (non homokinetic movement, high radial force as examples).
- a-2) Check the inlet pressure and compare it to the catalogue values.
- a-3) Check if the bad suction conditions do not create a vacuum that could even reverse the seal lip.
- a-4) Check if the external environment is not too dirty and therefore ruining the seal.

B) Is the seal only leaking?

- b-1) Check the alignment of the front shaft and check if there is not any radial load.
- b-2) Check if seal lip has not been cut during a maintenance operation.
- b-3) Check if the inlet pressure is not over or under the catalogue values. This has to be done for the whole cycle because the inlet pressure can vary from time to time. b-4) Check if the seal material has not been modified due to a too warm environment. The seal can vulcanize and stop sealing correctly.
- b-5) Check the acidity of the oil that can "burn" the seals material. It will therefore destroy the elasticity of the sealing.
- b-6) Check if the chosen seal (high pressure seal for example) is not too stiff for the use. If the environment requires some elasticity due to a gentle misalignment, a high pressure seal will not be able to follow the movement and therefore leak.

NO ROTATION

A) Is the flow coming to the motor?

- a-1) Check the circuit and the hydraulic schematic. Is the piping OK?
- a-2) Check the setting of the main pressure relief valve. Check if it is not settled at an extremely low pressure.
- a-3) Check if the pump is giving a flow.
- a-4) Check if the directional valve(s) allowing the flow to go to the motor is energized. If it is, check if the spool is in its correct position and not sticking in a position that would deviate the flow somewhere else.
- a-5) Check if a check valve would not have been improperly mounted.

B) Is the torque required higher than the system settings?

- b-1) Check if the pressure settings are correct.
- b-2) Check if the load is not superior to the torque capabilities of the motor.

C) Is the pump OK?

- c-1) Check if the pump is working correctly.

D) Are the motors internal drain check valves working properly?

- d-1) Check if a failing check valve would not allow some flow to go back to the tank and therefore limit the flow to the motor.

E) How is the motor piped?

- e-1) Check the nature of the connectors. If, for example, the "self sealing couplings" type connectors are well fitted into each other.

STALLS EASILY

A) Is the load near the limits of the system?

- a-1) Check the relief valve setting and compare it to the theoretical pressure required to deliver the convenient torque.

B) Are the motors internal drain check valves working properly?

- b-1) Check if a failing check valve would not allow some flow to go back to the tank and therefore limit the flow to the motor.

C) Is the flow going to the motor sufficient?

- c-1) Check the minimum flow required by the motor.
- c-2) Check the flow of the pump or the valve feeding the motor.

NOT ENOUGH SPEED

A) Is the speed lower than desired?

- a-1) Check the theoretical displacement of the motor versus the theoretical flow of the pump.
- a-2) Check that the flow of the pump is really coming to the motor.
- a-3) Check that the working pressure & speed are not incompatible with the catalogue values of the motor.
- a-4) Check the oil temperature. Check then that the low viscosity of the oil is not having a big effect on the internal leakage of the motor.
- a-5) Check the air bleed-off.

ERRATIC SPEED

A) Is the motor loosing speed erratically?

- a-1) Check if the limit of the allowable torque is not reached once a while.
- a-2) Check if the driven load does not transmit some inconstant load (high pressure piston water pumps with an unbalanced technology).
- a-3) Check if the flow coming from the pump is constant.

UNUSUAL NOISE LEVEL

A) Is the motor running?

- a-1) Check if there is no air intake aerating the motor badly (through the front shaft seal for example).
- a-2) Check if the motor is not cavitating. It could be that the inertia of the load is such that it drives the motor faster than the flow coming from the pump.
- a-3) Check if the oil is not proper for the use.
- a-4) Check if the air bleed has been done properly.

B) When the motor is breaking?

- b-1) Check the back pressure to see if the replenishment pressure is not too low, leading to cavitation of the motor.

UNUSUAL HEAT

A) Is the oil arriving to the motor already hot?

- a-1) Check if a cooler is required or if there is one if it is well dimensioned.
- a-2) If there is a cooler, check if it is working (example for water cooler: is the water flow opened or sufficient).
- a-3) Check if the hydraulic circuit is not bringing back the flow directly to the inlet port. Doing so, it would create a very small closed circuit not able to cool down the fluid.
- a-4) Check the quality of the fluid.
- a-5) Check the velocity of the fluid (5 to 6 meters/second max.).
- a-6) Check the filtration unit, its capacity.
- a-7) Check if the heat does not come from an open bypass valve.

B) Is the oil heating up when going through the motor?

- b-1) Check the speed of rotation versus the catalogue values.
- b-2) Check the pressure rating.
- b-3) Check the fluid.
- b-4) Check the viscosity.

Identification	Cause	Checklist
<ul style="list-style-type: none"> 1. Gray (sandblasted) appearance of wearing surfaces, especially vane faces. 2. Worn rotor slots. 3. Blunt vane edges 4. Chopped/rippled cam ring, possible wear steps. 	Abrasive wear-fine particles of dirt, not visible in the oil.	<ol style="list-style-type: none"> 1. Inspect cylinder seals and rods. If seals are deteriorated, look for other evidence of high oil temperature and check for cause. If cylinder rods are damaged, check for cause of damage. 2. Check for clean oil supply. 3. Correct filter elements, change intervals and proper installation? 4. Was system flushed after previous failure?
<ul style="list-style-type: none"> 1. Metal smearing on vane faces. 2. Scratching and scoring of wear plate and rotor. 3. Score marks on vane edges and cam ring. 4. Vanes jammed in rotor slots. 5. Larger particles cause scoring of rotor and cam ring. 6. Rotor jammed by metal object. 	Damage from metal particles or objects-50 microns or larger visible in the oil.	<ol style="list-style-type: none"> 1. Was system properly flushed after previous failure? 2. Is another component in process of failure. 3. Are particles due to excessive pump wear? 4. Were metal pieces left in system after previous work?
<ul style="list-style-type: none"> 1. Rippling and pitting of cam ring. 2. Erosion of end plates. 3. Severe vane wear. 4. Cracked or broken pump body, body bolts and/or cam ring. 	Aeration-Air mixed with the oil, causing bubbles and lack of lubrication. Water-contaminated oil.	<ol style="list-style-type: none"> 1. Low oil level. 2. Air leakage at pump suction line. 3. Air leakage at cylinder rod, seals, or cylinder line connections. 4. Bent, damaged or missing parts in tank, causing agitation. 5. Low pressure setting of relief valve, causing excessive bypassing. 6. Excessive operation of relief valve due to overloading poor operating practice, or other conditions.
<ul style="list-style-type: none"> 1. Dark, discolored parts. 2. Excessive wear of vanes and cam ring. 	<p>Cavitation: Restriction or limitation of oil supply to pump.</p> <p>Poor Lubrication</p> <ul style="list-style-type: none"> -Wrong type of oil or high temperature. -Restricted engine or transmission oil supply to pump drive. 	<ol style="list-style-type: none"> 1. Oil viscosity. 2. Collapsed hose in pump suction line. 3. Clogged screen or other restriction of pump inlet. <ol style="list-style-type: none"> 1. Check seals for evidence of high oil temperature. If found, check for cause, and inspect all seals for damage specially piston rod seals. 2. Quality, type and grade oil. <ol style="list-style-type: none"> 1. Check for closed oil passages in pump drive.
<ul style="list-style-type: none"> 1. Worn splines on pump drive shaft. 	Rotor Seizure	<ol style="list-style-type: none"> 1. Check for any indication of other types of damage. If found, refer to check list for that type of damage. 2. If no other damage can be identified, check relief valve operation and pressure setting.
<ul style="list-style-type: none"> 1. Severe scoring and heavy transfer of metal on end plates, rotor sides and vane ends. 2. No scoring or other damage to cam ring, vane edges or vane faces. 		

Abrasive Wear	Wear caused by abrasive action of dirt and fine contaminants in the oil
Aerated Oil	Presence of air bubbles in hydraulic oil...gives oil a foamy appearance
Cavitation	Formation and collapse of vapor bubbles in hydraulic oil.
Dirt Or Fine Contaminants	Very small particles of abrasive material suspended in hydraulic oil. Usually not visible to the naked eye.
Erosion	Removal of metal particles from the surface of a part, leaving a rough, pitted area.
Galling	To fret and wear away by friction or to become worn by rubbing.
Gray Vanes	Appearance of pump vanes scratched by dirt and fine contaminants. Rotor faces and end plates can have this same gray appearance.
High Oil Temp.	Temperature above 200° F, when the oil film weakens and its lubricating ability is reduced.
Insert Vane Pumps	A hydraulic pump with vanes containing an insert. Pressure oil between the insert and the vane, in addition to centrifugal force, keeps the vane in contact with the cam ring.
Insufficient Lubrication	Inadequate oil film between vanes and cam ring, or between rotor, vanes and end plates.
Lack Of Vane Control	Pump vanes become unstable and cock in rotor spot. Wear on the cam ring results and also a milling of the end plates.
Metal Contaminants	Small particles of metal in the hydraulic oil. Probably have worn from components in the system and may or may not be visible to the eye.
Overpressure	Pressure in the system exceeds the specified relief valve pressure.
Ring Chop	Cam ring worn in a staircase pattern. May be two or more steps 180° apart on the ring.
Ring Ripple	Cam ring worn in a wavy pattern. Hills and valleys, typical of ring ripple, are about the same width and close together. May be five or more ripples per inch.
Rotor Seizure	Galling between rotor and end plates with resulting transfer of metal from end plates to rotor.
Rotor Slot Wear	Faces of rotor slot and vanes have worn until the rotor slot-vane clearance is greater than 0.05 mm.
Wear And Pressure Plates	End plates on either side of the rotor. These and the cam ring form the pumping chamber and direct the oil in and out of the pump. Pressure oil on the outside of the pressure plate (usually thicker than the wear plate) holds the two plates and cam ring tightly together.

SHAFT SEAL LEAKAGE

A) Is the seal leaking when pressurized?

- a-1) Check if the lips of the seal are not ruined (lack of lubricant leading to vulcanization of the rubber, external pollution...).
- a-2) Check if the shaft is not marked by a groove in the usual seal lip contact area.
- a-3) Check the shuttle valves.
- a-4) Check the pressure in the drain line on the motor. Long piping, elbows, small diameter, too high oil viscosity, other common drain flows in the same pipe can lead to high drain pressures.
- a-5) Check if there is no high overshoot at start-up that would create a high instant internal leakage.
- a-6) Check, when using a "rapid connector", if it is well locked.
- a-7) Check the alignment of the shafts.
- a-8) Check if there is no unbalanced driven load that could create a gap between the shaft and the seal.
- a-9) Check if the radial force is not too high (belt drives for example).

B) Is the seal leaking when standing still?

- a-1) Check if the seal is not damaged.
- a-2) Check if the shaft does not have any scratches.
- a-3) Check if the ball bearing is not ruined.
- a-4) Check if the drain line does not create a back pressure.






Bezares Group

REAL IMAGES OF COMMON FAILURES

SQUARE PUMP BODY


SURFACE SCORING

This pump body surface is phosphate coated. It can be scored from pump seizure or severe contamination trapped between the rotor and body surface. The pump body on the left shows typical scoring. Such scored bodies can undergo minor resurfacing (.005" to .010"), but must be retreated (phostphated) before being returned to service. If major resurfacing is performed (.010" to .020" maximum), the O-ring groove must be deepened by an equal amount.

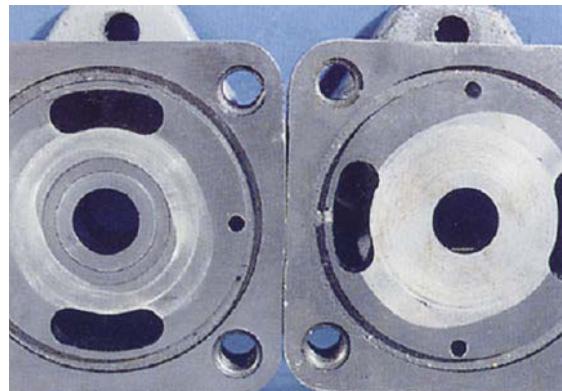

RESURFACING REQUIREMENTS

The body on the left (refer to photo to right) is scored badly enough to require resurfacing. The pump body surface on the right, however, has no depth of scoring-only the treatment colour has worn off. Bodies in this condition can be used "as is".

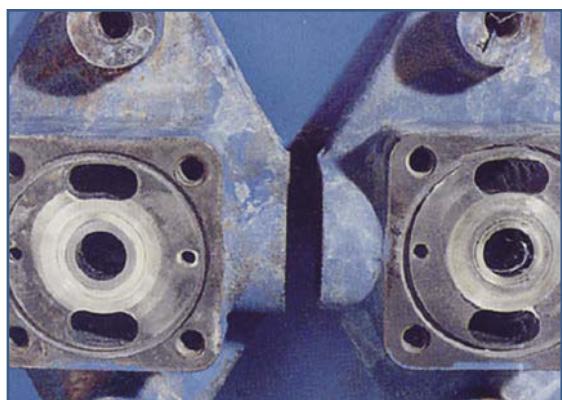

INTRA-VANE PUMP SUPPORT PLATE


INLET SUPPORT PLATES DAMAGES BY AERATION

The effects of aeration are similar on both inlet and outlet support plates. Here we see obvious damage caused by collapsed air bubbles. The plate surface is also badly scored. It can be resurfaced up to .010" without renotching or deepening the grooves. Resurfacing between .010" and .020" will require re-machining the groove depth and metering notches correspondingly. The resurfaced plates must be phosphate coated.



NO SIGNIFICANT DAMAGE

This outlet support plate shows no significant wear. After stoning to remove burrs, it can be reused.

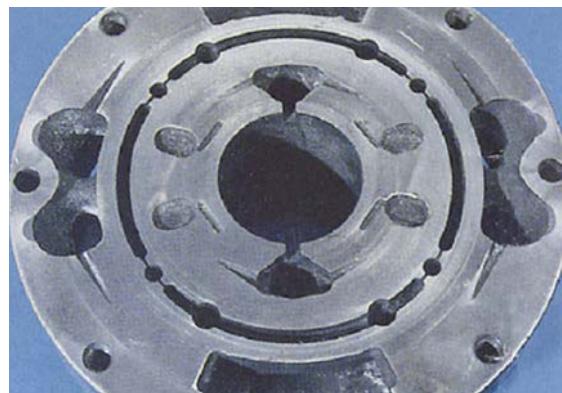

VQ PUMP FLEX PLATES

NORMAL DISCOLORATION


Flex plates play a key role in VQ pump operation. The bronze surface of these plates is critical to proper performance.

This flex plate displays a typical amount of discoloration. The discoloration alone should have no effect on pump operation.



SEVERE AERATION DAMAGE

The erosion on the VQ flex plate was caused by collapsed air bubbles (aeration) near the outlet port metering notches. If the damage isn't too severe, the plate can be resurfaced to a maximum .005". The flex plate to the right is damaged beyond repair.

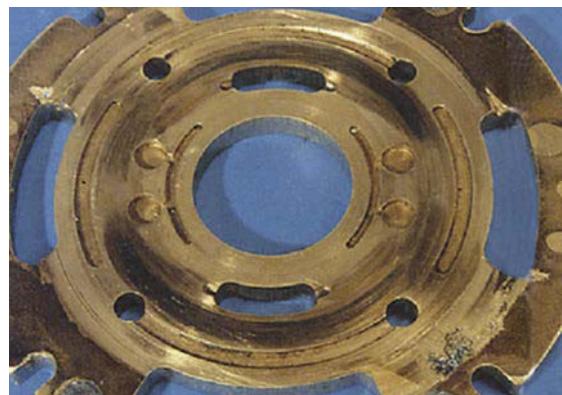

DARKENING AND EROSION

Damage as shown here is the result of excessive system temperature. After this problem in the system has been corrected, the entire cartridge must be replaced.





SQUARE PUMP PRESSURE PLATE

SIGNS OF PUMP AERATION

Because air is compressible, any bubbles trapped between the vanes of a pump are violently imploded when subjected to outlet pressure. If an imploded air bubble is near a pump surface, the energy released can remove material. This leaves cavitation-type pock marks (as seen here at the outlet metering notches). The particles of metal blasted away become fine contamination that can cause wear and scoring of the pressure plate and mating rotor fixture. Pumps surfaces with mild aeration and cavitation marks can be resurfaced up to .010". If more than .010" is removed during resurfacing, the metering notches must be renotched by the same amount. Any bearing or guide surfaces that are ground should always be lapped or polished to improve surface texture. After resurfacing, a phosphate coating must be applied.

SEVERE AERATION DAMAGE


The pressure plate on the left has suffered severe damage from aeration and is beyond repair. Resurfacing would fail to restore the material that's been chipped away near the metering notches. (The plate on the right is in good condition and is shown for comparison).

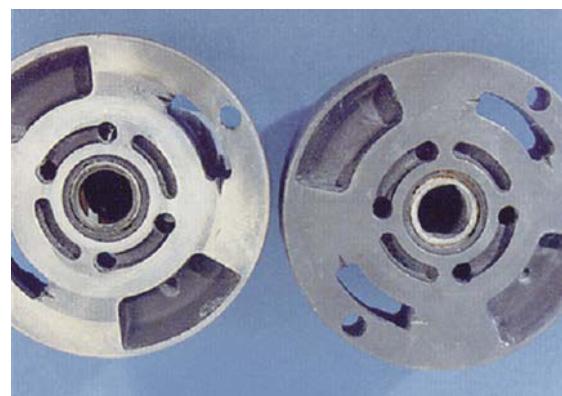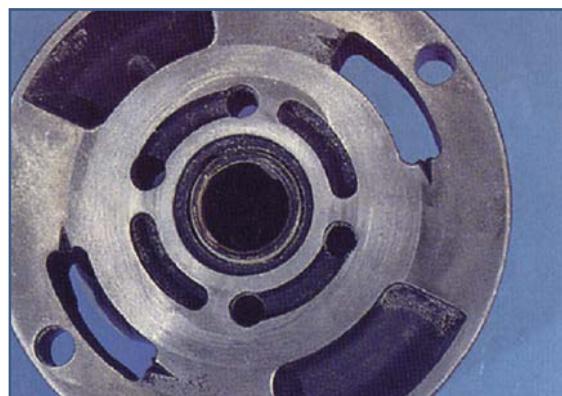

VANE PUMP VANES


VANE FROSTING

Compare the appearance of the vane (bottom) with the frosty look of a vane that's been subjected to fluid contamination (top). The cartridge this vane came from must be replaced.

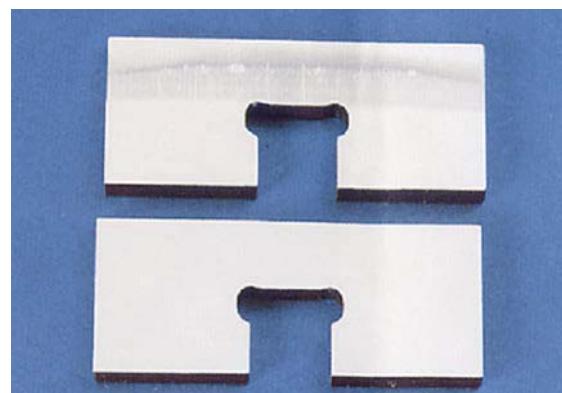

TIP WEAR

The vane on the left is new. The vane in the middle is worn down from the fluid contamination. The extreme wear seen on the vane to the right was caused by aeration. Similar damage can also be caused by fluid in poor or marginal condition. The associated cartridge must be replaced.

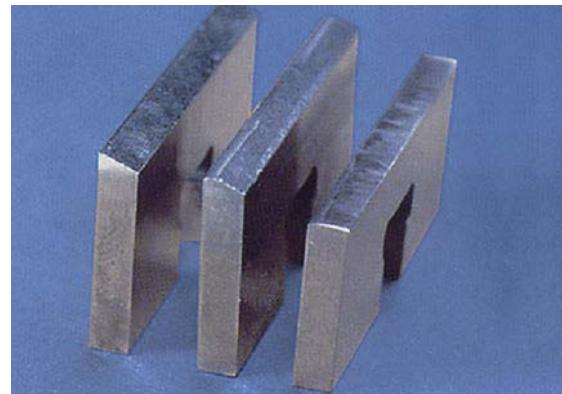

VANE PUMP VANES

GALLED VANE

This type of galling damage is symptomatic of over-pressure or over-temperature. This indicates a cartridge damaged beyond repair.



ROTOR PUMP VANES


TYPICAL SEIZURE DAMAGE

Seizure type failures can be due to fluid contamination, dry run, lack of lubricity in the fluid, high system temperature, or improper clearance between cam ring and rotor thicknesses. Rotors with vane slots worn more than .0002" cannot be reused. Rotors with scored surface like the one shown here cannot be reworked and must be replaced.



ROTOR SMEAR

Rotor surfaces can be badly scored by contamination and/or seizure. Vane slots can also become worn or scored by fluid contamination.

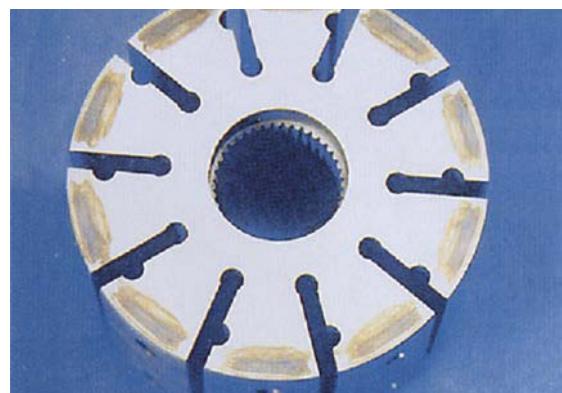

VANE PUMP CAM RING


COMPARISON OF TWO FAILED CAM RINGS

The ring on the left has mild rippling and can be used again. The one on the right, however, has decomposed badly from extreme heat and shows evidence of pump seizure. It must be replaced.



SEIZURE DAMAGE

Pump seizures (as evidenced by galling or metal transfer) can make local temperatures rise dramatically. These high temperatures cause discoloration of the cam ring, as seen here. The local temperature was so high that the vane tips literally fused into the ring contour. A ring in this condition cannot, and should not, be reworked.

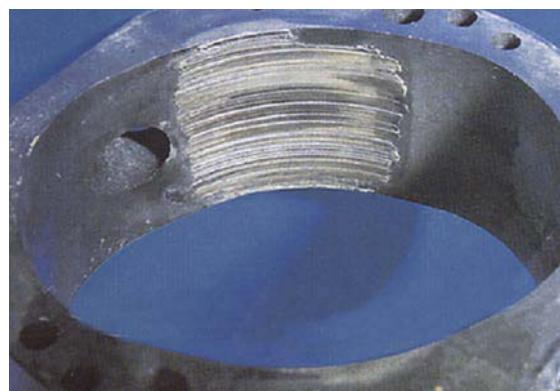

RIPPLE MARKS

Vane pump cam ring will have a shiny inner surface due to normal operation. Some rings (as seen here) may also exhibit ripples marks caused by cavitation, aeration or contamination. These marks can vary from minor to severe. Mild ripples can be polished out and the ring reused. Always polish the cam ring in the indicated direction of rotation. Heavy rippling requires expert examination to determine whether geometrical grinding can be used to salvage the ring. Nitral etching should also be performed to ensure that the surface is not softened.



HEAT CHECKED SURFACE

This appearance indicates one or more system problems including excessive temperature, marginal fluid quality or an aerated inlet. Heat checked cam rings must be replaced.

Cam rings can crack or break completely at their weakest cross sectional point. This type of failure is caused by pressure surges beyond the pump's design specification.



Pump shaft failures are generally caused by repeated stress. Like a chain that is only as strong as its weakest link, shaft damage will occur when the stresses encountered at the weakest link, shaft damage will occur when the stresses encountered at the weakest point of the shaft finally exceeds its strength.

ROTATIONAL BENDING FATIGUE

The shaft above broke cleanly at a 90 angle to its axis of rotation.

This type of failure is due to rotational bending fatigue. A likely cause is misalignment between the pump and its "prime mover" that makes the shaft flex slightly with each revolution. Fractures like this usually start in some area of concentrated stress that is at least partially perpendicular to the shaft axis. These weak points in the shaft can include grooves, fillets, and holes. The shaft shown here has the ripple marks typically found with rotational bending fatigue failures. These marks indicate that the shaft was unevenly loaded or unbalanced. The smoother area near the edge is where the fracture started. The curved ripples get gradually courser, with a rough, shell-like spot where the shaft finally ruptured.



TORSIONAL FATIGUE

Seizure type failures can be due to fluid contamination, dry run, lack of lubricity in the fluid, high system temperature, or improper clearance between cam ring and rotor thicknesses. Rotors with vane slots worn more than .0002" cannot be reused. Rotors with scored surface like the one shown here cannot be reworked and must be replaced.





Bezares Group

**Pump Start up
Pump Identification
Assembly & Disassembly
Change of ports configuration
Change of Cartridge rotation
Pump and cartridge manipulation & repair**

PUMP START-UP PROCEDURE

Preparation Prior to Start-up

The reservoir and circuit should be clean and free of dirt and debris prior to filling with fluid.

Circuit Cleanup

The reservoir should be charged with filtered hydraulic fluid. The fluid level should be sufficient to prevent vortexing at the suction connection to the pump inlet. It is good practice to clean the system by flushing and filtering, using an external slave pump.

Filling Pump and Removing Air

If the pump is mounted above the fluid level, it should be filled with fluid through the outlet port.

If the pump is mounted below the fluid level, the pump outlet fitting (or other downstream fitting or plug) can be loosened to allow fluid to displace the air. It may be necessary to loosen the fill cap on the reservoir to allow the fluid to flow freely. When a solid stream of fluid with no observed air begins to drain through the loosened fitting, the fitting should be retightened.

An air bleed valve in the outlet circuit is also recommended to remove trapped air. If such a device is used, the pump should be filled with fluid before start-up.

In some cases, it may be possible to prime the pump by running the engine starter for five to ten seconds with the throttle and/or ignition switch in the "off" position. It will be necessary to loosen a fitting or plug in the pump outlet to allow air to escape.

Pump Start-up

All controls should be placed in the neutral position so the pump is unloaded when started.

Start the engine and run at low idle.

Once the pump is started, it should prime and pump within a few seconds. If it does not, make sure there are no restrictions between the reservoir and the inlet to the pump, and that there are no air leaks in the inlet line and connections. Also, make sure that trapped air can escape from the outlet.

Run at low engine idle for approximately five minutes. Then, while observing the reservoir fluid level, operate the implements. Extend all actuators to maximum safe limits to completely fill the system with fluid.

Do not run with the fluid level below the "low" limit.

Add fluid to the reservoir to bring the fluid to the proper fill level.



IDENTIFICATION

Due to the difficulty in finding out spare cartridge references, either for the loss of the pump feature plate, or for the lack of the machine spare part catalogue, it is most convenient to include some sheets to identify the sample accurately and to give some advice for a correct assembly.

To identify properly cartridge and pump, use the 3 following pages as follows:

- DIMENSIONS AND FLOW

Find out pump type and flow in the dimensions chart, look at the figure engraved on the rings as shown (gallons/-min. at 1200 rpm).

- SUPPORT BUSHING AND SHAFT ROTATION


Locate support bushing to know whether the cartridge belongs to a single or double pump. On this page there are also some clues to identify shaft rotation.

- PUMP MODEL, SHAFT TYPE AND PORT POSITION (SEE OUR TECHNICALL CATALOGUE)


IDENTIFICATION

DIMENSIONS AND FLOW

V* Series Cartridge Kit

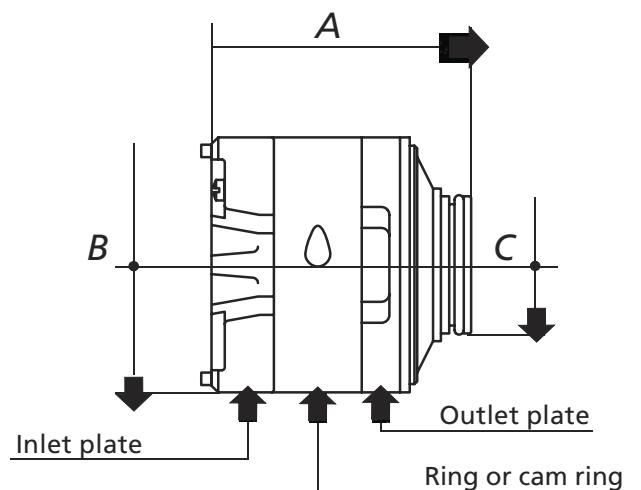


DIMENSIONS in mm.	PUMP TYPE				
	20V	25V	30V	35V	45V
A	81,8	99,5	110,5	118,4	140,5
B	82,6	96,8	96,8	114,25	133,3
C	47,15	52,15	52,15	72,15	80,15
WEIGHT aprox. in Kg.	2,300	3,800	4,100	6,400	10,200
FLOW in Gal. at 1.200 rpm	2	8	24	21	42
	5	12	28	25	47
	8	14		30	50
	9	17		35	57
	11	19		38	60
	12	21		45	67
	14	25			75

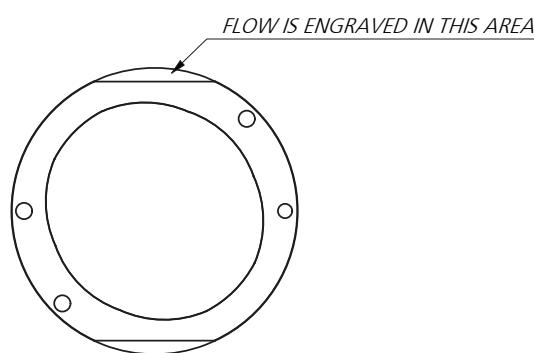


IDENTIFICATION

DIMENSIONS AND FLOW "DT6 / DT7" SERIES CARTRIDGE KIT

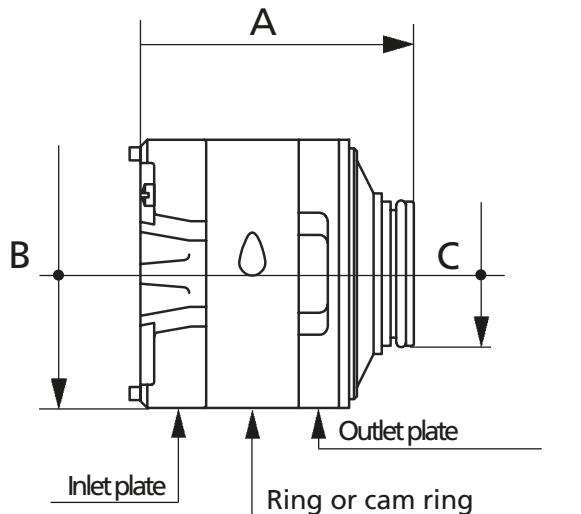


DIMENSIONS In mm.	PUMP TYPE				
	DT7B	DT6C	DT6D	DT7D	DT6E
A	105	105	132,7	132,7	149,3
B	95,2	95,2	123	123	143,1
C	61,9	61,9	71,9	71,9	87,9
WEIGHT aprox. in Kg.	4,100	3,500	7,800	7,500	12,200
FLOW In Gal.at 1200rpm	2	3	14	14	42
	3	5	17	17	45
	4	6	20	20	50
	5	8	24	22	52
	6	10	28	24	62
	7	12	31	28	66
	8	17	35	31	72
	9	20	38	35	85
	10	22	42	38	
	11	25	45	42	
	12	28	50		
	14	31	61		
	15				

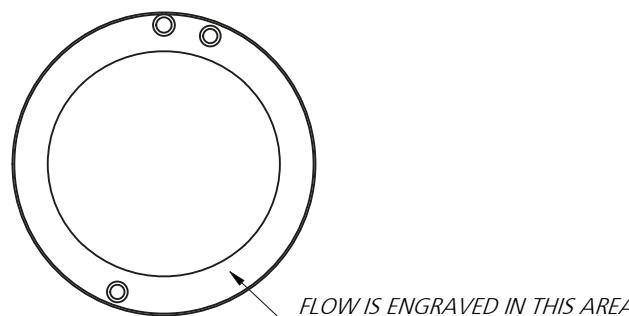


IDENTIFICATION

DIMENSIONS AND FLOW

BHP Series Cartridge Kit

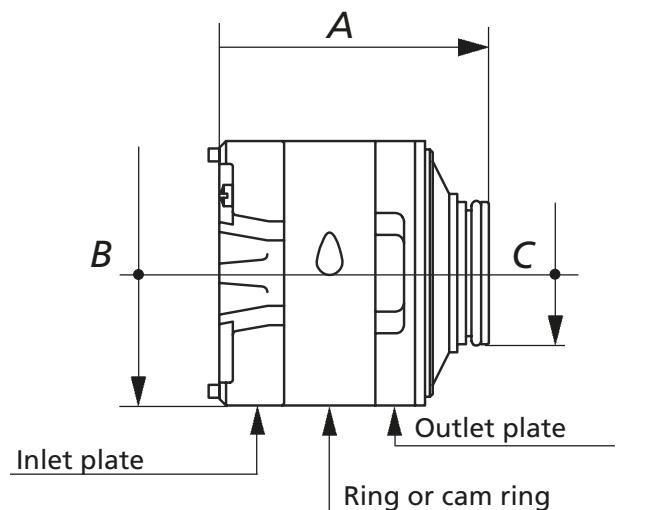

DIMENSIONS in mm.	PUMP TYPE					
	BHP1	BHP2	BHP3	BHP4	BHP6	BHP7
A	42,7	61	80,4	99,5	118,4	140,5
B	49,9	61,9	81,1	96,8	114,25	133,3
C	28,1	29,8	47,8	52,15	72,15	80,15
WEIGHT aprox. in Kg.	0,450	0,900	2,200	3,800	6,400	10,200
FLOW in Gal. at 1.200rpm	0,6	2,2	2	8	21	42
	0,9	2,5	5	12	25	47
	1,2	3,2	6	14	30	50
	1,7	3,8	8	17	35	57
	2	4,7	9	19	38	60
			11	21	45	67
			12	24		75
			16	27		

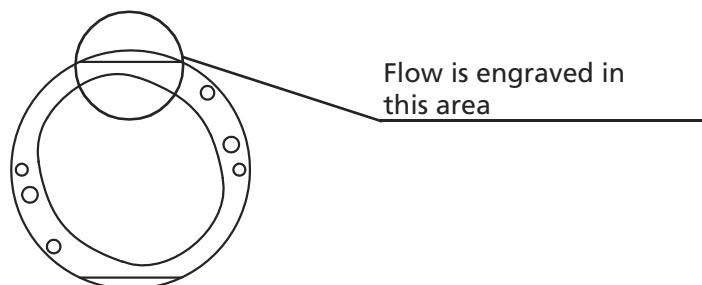


IDENTIFICATION


PUMP ROTATION Single Pumps

To determine pump rotation look at it from the shaft end side. If clockwise it is right hand rotation, on the contrary, it is left hand rotation.

When taking out cartridge and putting it on to the outlet plate take into account that rotation is seen the other way round; anyway, an arrow engraved in the ring or cam ring shows the real turning sense. (See pictures.)

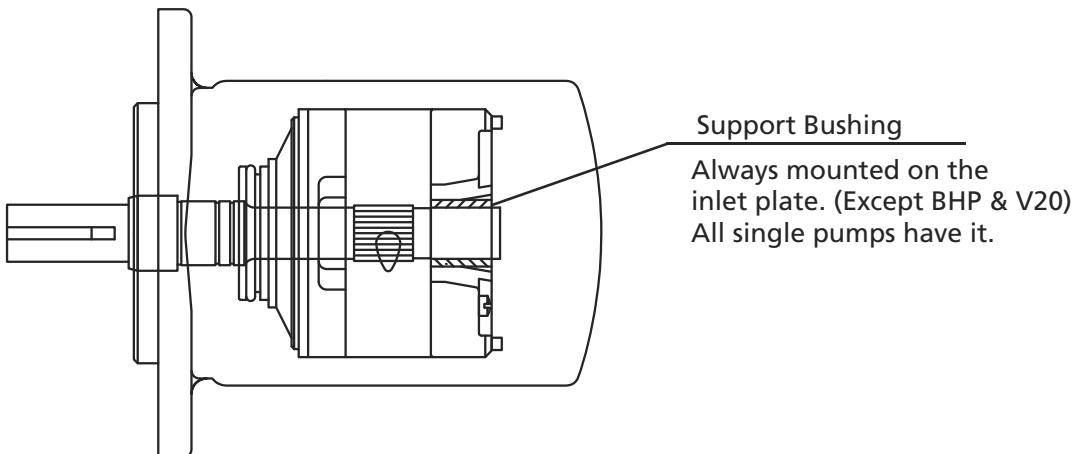


Pump rotation is viewed from the shaft end side.

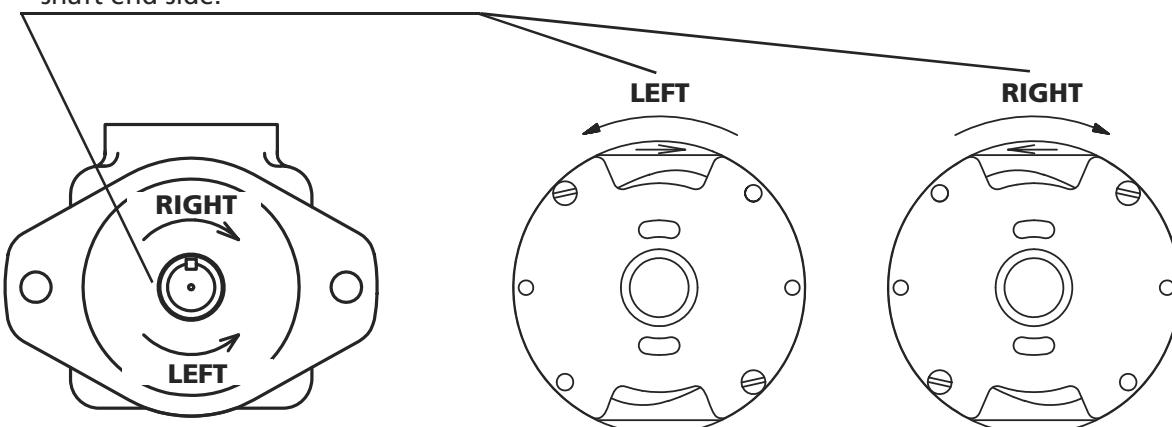


IDENTIFICATION

PUMP ROTATION Double Pumps

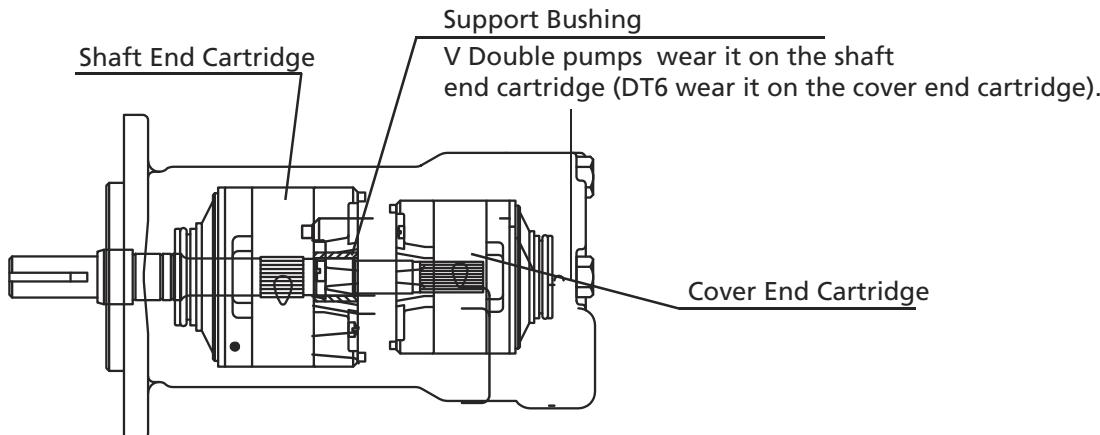


Double pump special feature is that their 2 cartridges are opposite each other, therefore when putting them c the outlet plate, they will apparently have opposite turning sense.

Anyway, the arrow in the ring shows the correct rotation. (Pump and cover end cartridge rotation always coincide.)

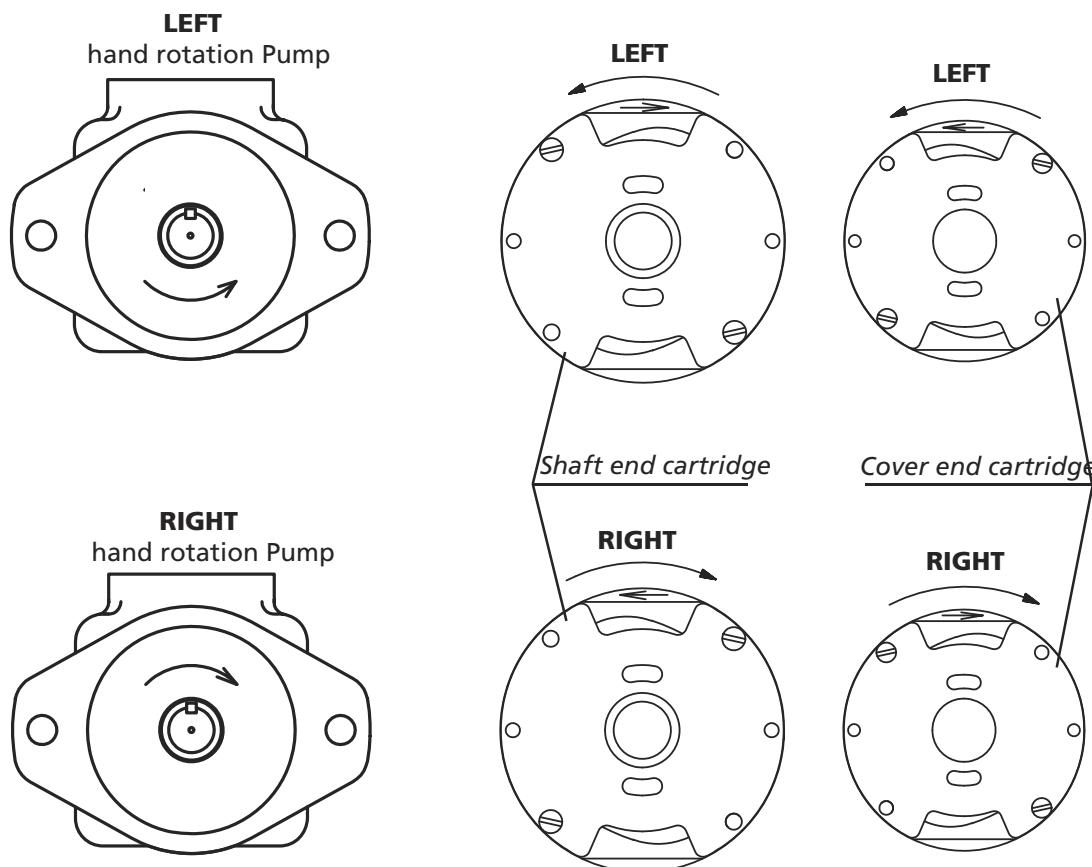


IDENTIFICATION

PUMP ROTATION - TRIPLE PUMPS

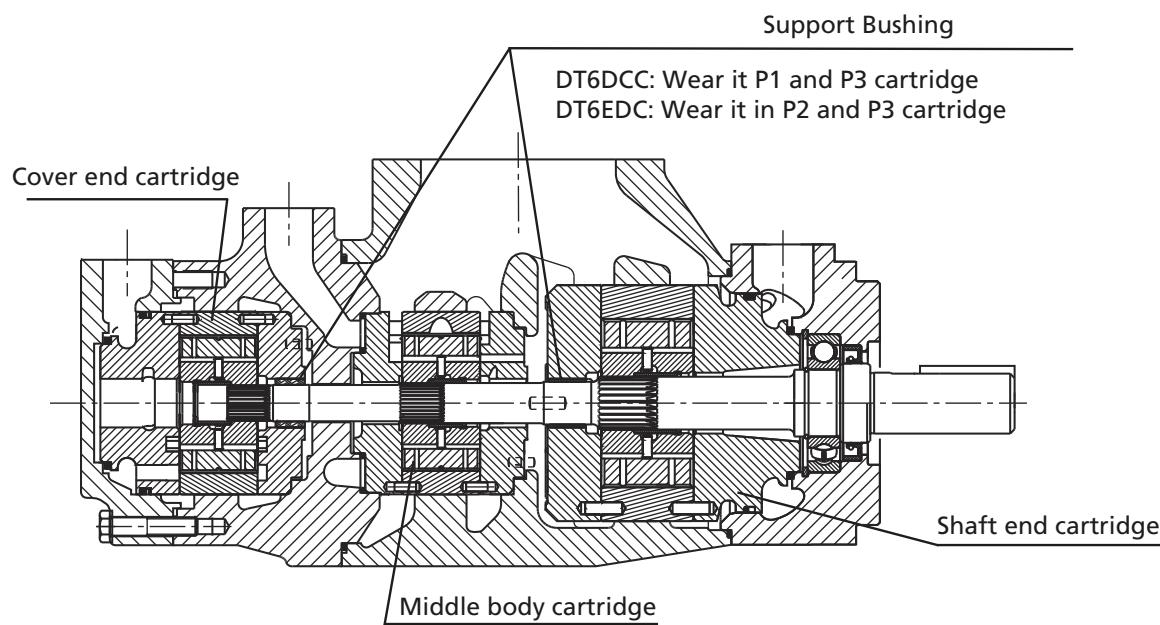

Triple vane pump special feature is that shift end cartridge is mounted opposite to the middle and cover en kits. Pump, middle cartridge and cover en cartridge rotation always coincide.

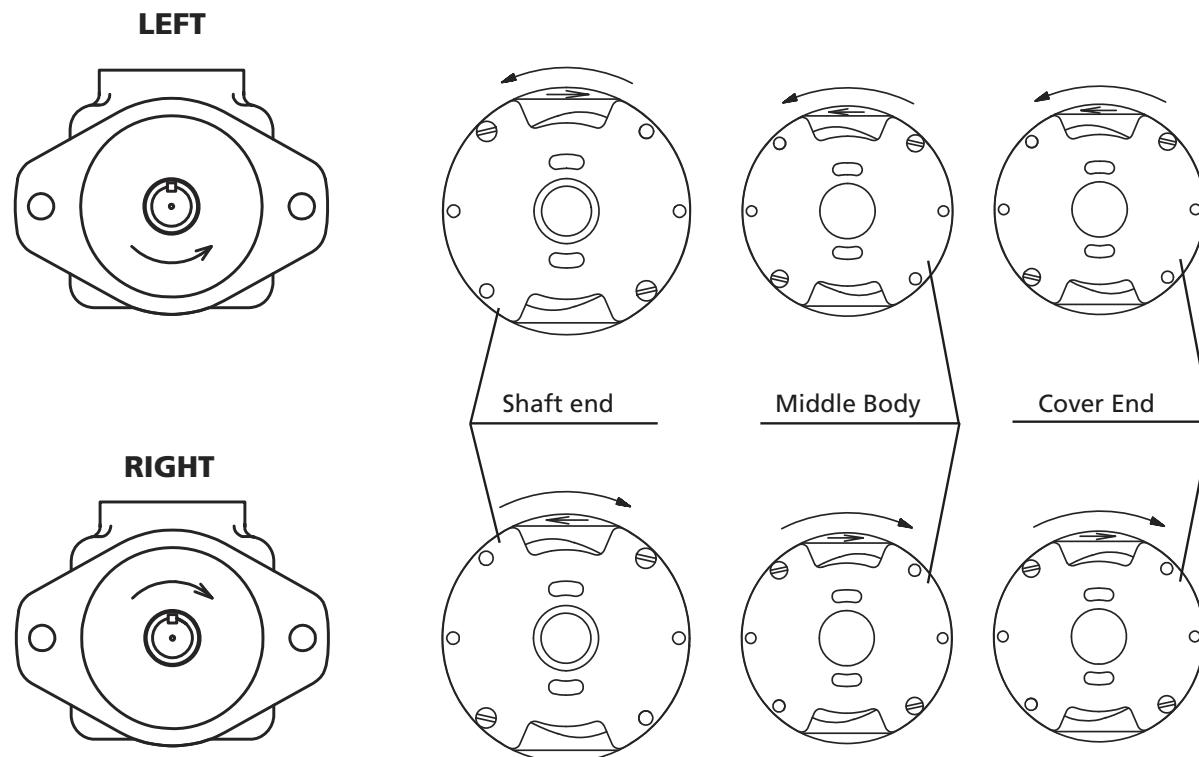


ASSEMBLY & DISASSEMBLY - PORTS CONFIGURATION CHANGE

Vane pumps have a different external configuration, depending on the position of the suction flange (located on the pump cover) in relation to the pressure flange (located on the coupling flange or shaft side).

The suction flange may be in line with the pressure flange, (0°), 90° to the right, 90° to the left or totally opposite it (180° in relation to the pressure flange).

The steps to modify the position of the suction flange in relation to the pressure flange are as follows:


- 1-** Secure the pump to a workbench and loosen the four bolts joining the pump cover to the front body (or shaft-side body).

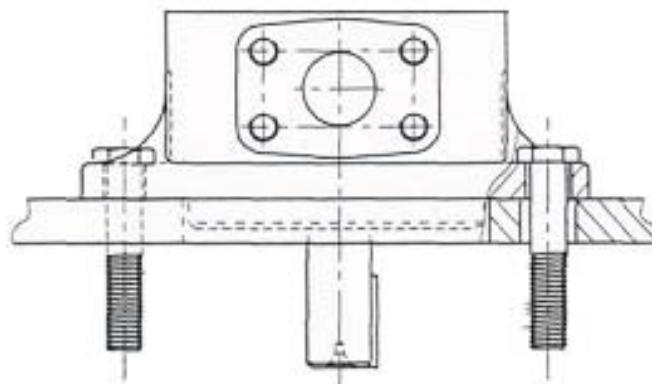

- 2-** Do not fully remove the bolts. Remove approximately half their total length from the pump body.

- 3-** Remove the front body cover just 1 mm - 2mm, (maximum) by slightly turning the cover and pushing it outwards.

- 4-** Using a sufficiently long, resistant metal bar, support it obliquely on two diagonally opposite screws and lever, making the cover turn until the suction flange is in one of the four aforementioned positions.

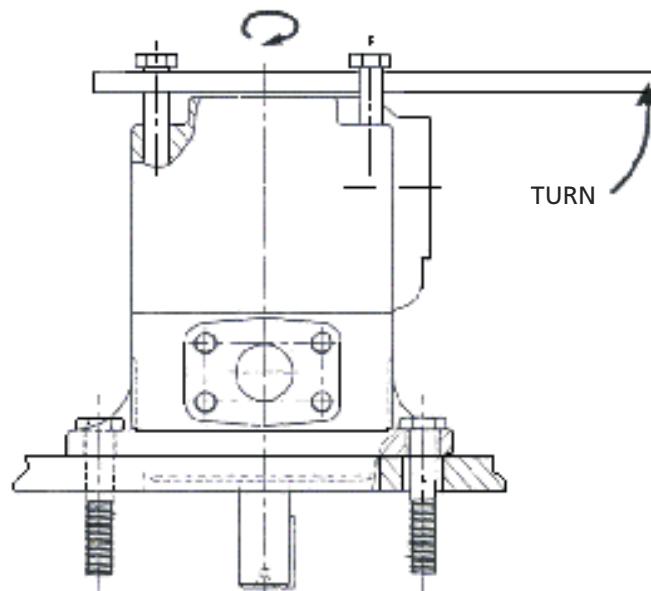

- 5-** Readjust the cover and the 4 bolts with the appropriate torque. Make sure that no particles of paint or other material are between the body and the cover and that the o-ring housed between these two parts is not pinched when tightened.

ASSEMBLY & DISASSEMBLY

TIGHTEN TORQUE FOR SINGLE PUMP SCREWS		
SINGLE PUMPS	Reference	Tighten torque in Kp.m.
	VC10	5,5
	VC20	11
	20V	6,5
	25V	10,5
	35V	22,5
	45V	35
	BHP1	1
	BHP2	2,5
	BHP3	5
	BHP4	10,5
	BHP6	22,5
	BHP7	35
	DT6C	16
	DT6D	19
	DT6E	19

Tighten the screws with a torque no bigger than 0,5 to 1 Kp.m before beggining the last or final tighten. Follow the order shown in the picture.


ASSEMBLY & DISASSEMBLY

TIGHTEN TORQUE FOR DOUBLE PUMP SCREWS

	Reference	Inlet body	Cover
DOUBLE PUMPS	V*43	10,5	6,5
	V*63	22,5	6,5
	V*64	22,5	10,5
	V*73	35	6,5
	V*74	35	10,5
	V*76	35	35
	VC2010	11	5,5
	VC2020	11	11
	DT6CC	16	6
	DT6DC	19	7
	DT6EC	19	7
	DT6ED	19	19

Rear flange mountings of the V**T* thru drive pumps.
Tighten torque for pump screws: 6,5 K.p.m.

Tighten the screws with a torque no bigger than 0,5 to 1 Kp.m before beginning the last or final tighten.
Follow the order shown in the picture.

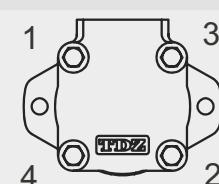


ASSEMBLY & DISASSEMBLY

TIGHTEN TORQUE FOR TRIPLE PUMP SCREWS

TRIPLE PUMPS	Reference	Inlet body	Cover 1	Cover 2
	DT6DCC	19	19	7
	DT6EDC	30	19	6

Tighten the screws with a torque no bigger than 0,5 to 1 Kp.m
before beginning the last or final tighten.
Follow the order shown in the picture.

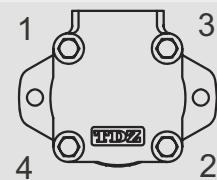

CHANGE OF CARTRIDGE ROTATION

The cartridges on this type of pump available worldwide can be unidirectional or bidirectional. Rotation on unidirectional cartridges cannot be modified, except where the cartridge pressure plates are replaced for others with an opposite turning direction or for bidirectional plates.

TDZ cartridges are bidirectional. This means that rotation can be modified by means of a simple operation using exactly the same cartridge components that are to be modified.

The steps to follow are as indicated:

1.- Remove the 2 set screws from the cartridge.

2.- Remove the cartridge suction cover. Of the two cartridge covers, the suction cover is the flattest and may be fitted with a bronze bearing, depending on the position of the cartridge on the pump (P1, P2 or P3). Next to the cover there are 1 or 2 position pin that should also be removed.

3.- Remove the cam ring or stator and turn 180° so that side "A" of the stator that was previously in contact with the surface of the suction cover is now touching the pressure cover and side "B" of the stator that was previously in contact with the pressure cover is now touching the suction cover.

Above mentioned instructions are valid for DT6 series only. V* series change of rotation should follow the same procedure but cam ring, rotor and vanes should turn 180° As a complete package (V* series rotor and vanes are not simetric)

4.- Change the positioning or (2 pins in V series) pin on the pressure cover from hole "A" to hole "B" and re-insert the stator so that the stator hole matches the new position of the pin.

Length and quantity of pins (1 or 2) depends of cartridge series (DT6, VS or VQ).




5.- Also change the position pin on the suction cover and readjust the cover using the two screws. Turn the rotor and the blades manually before tightening the screws.

Attentions: The screws are basically for alignment purposes. They must not be too tight. If the three parts of the cartridge (stator, suction cover and pressure cover) are not perfectly concentric, it will be impossible to insert the cartridge into the pump housing.

In this case, loosen the screws slightly and insert the entire cartridge into the body of the pump. When it is fully inserted is when the cartridge parts are fully aligned and the screws can be readjusted.



CHANGE OF CARTRIDGE ROTATION (EXAMPLE VQ SERIES)

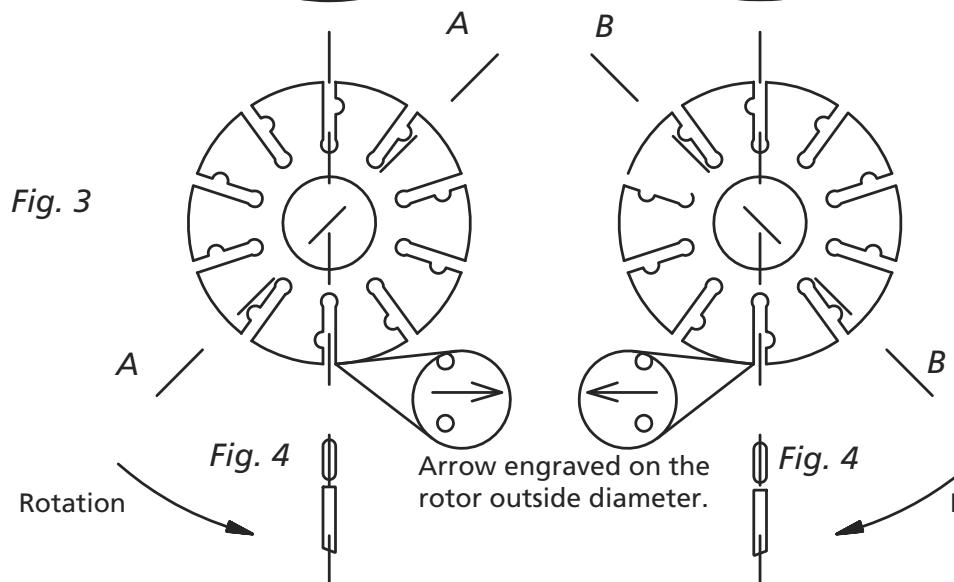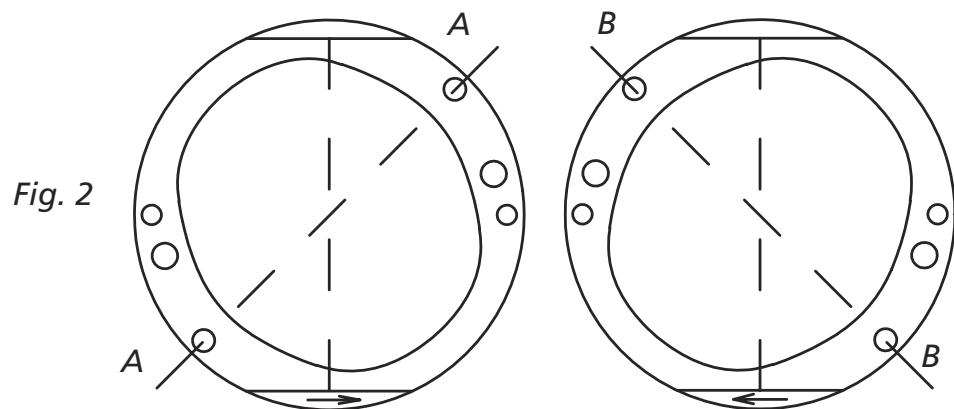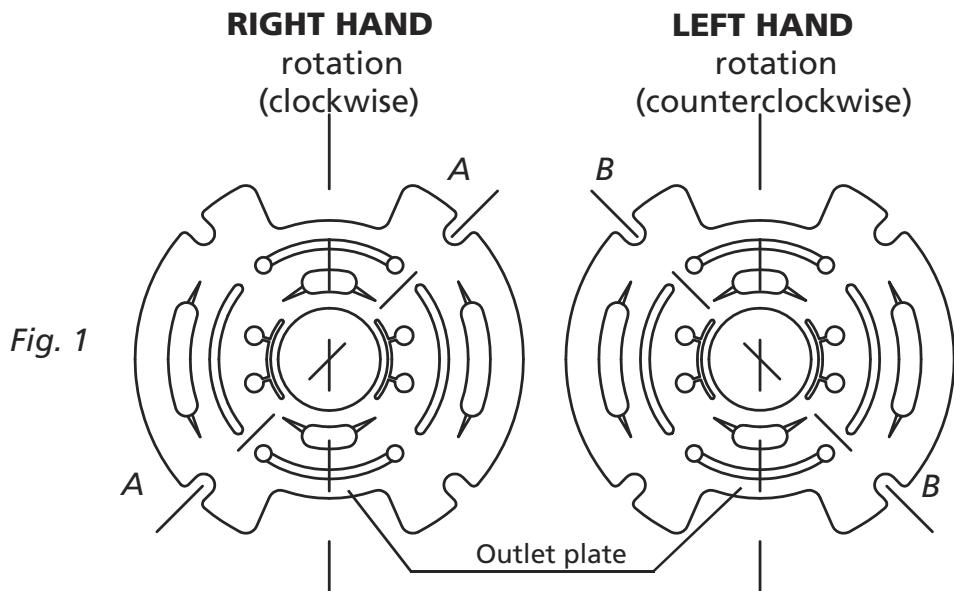

RECOMMENDATIONS FOR PUMP AND CARTRIDGE MANIPULATIONS

Since this is a high precision kit (mechanized in tolerances within thousandth of millimeter), any abrasive impurity can damage it in a few minutes or damage it to shorten its performance, before disassembling it is necessary that working place, tools and worker hands are completely clean and neat.

Please avoid any blow, however insignificant, taking special care with all edge sides, ring seat points and inlet and outlet plates.

All these preventive measures taken, proceed as follows:

1º Lean the cartridge, holding it tightly, at the work bench on the outlet plate. Loosen the 2 screws which fix the kit, take them out as well as the pins (if there are any).

Take out inlet plate shifting it laterally, as due to the protective oil it may be gummed up. Place it at the bench on a clean paper, white preferably.

2º Do the same with vanes, rotor and ring.

Place the rotor, once disassembled, onto the outlet plate with arrow showing the required turning sense (see detail in the circle, fig. 3), afterwards, put inserts into vanes (fig. 4), and finally, introduce them in the slots, well at the bottom, with vane closing edge in forward rotation, as arrow shows in the corresponding picture. (V* Series only)

3º Be sure there is no small dirty particles on the leaning surface, put ring on to the outlet plate, placing it in the required turning sense. Make chamfer edge coincide, in which flow and arrow are engraved, with inlet or admission port.

4º Set inlet plate, pins and the 2 screws as shown in the pictures, taking into account that the lattes must be in opposite position to the ones they had before disassembling. (To do so, just turn ring, rotor and vanes 180°). Fasten the screws moderately and dip the whole cartridge kit into clean hydraulic oil for a while. After these steps it is ready to be assembled.

Please pay good attention to the cartridge and pump rotation, as they do not always coincide. Be very careful to identify them properly. (See previous pages.)




RECOMMENDATIONS FOR PUMP AND CARTRIDGE REPAIRS

CARTRIDGE REPLACEMENT

To successfully replace cartridge, be sure to follow these warnings:

1° - Check if due to use there is tread on the cartridge seat zone (dark area in the picture).

If so, deepness must not be higher than 0,01 mm. (This could be observed even with a fingernail), being most convenient in such cases grinding or changing the pump body with this fault, as otherwise noise and performance values will not be the right ones. (In case you can not grind the seat, TDZ has -available for sale- a simple machine specially designed for this purpose).

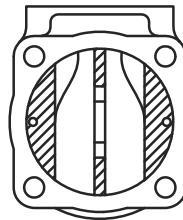

2° - Look at the cartridge to be replaced, if wear is normal just change oil in tank circuit and change or clean filters.

3° - Should the used cartridge shows seizure in rotor, outlet & inlet plates, disassemble the pump completely. Check that the key is in good condition (it could be cut out). Then, put the shaft between points to make sure it is not twisted or crooked. Change it in case of any fault. Take all the oil out of the circuit and other parts. Clean the tank carefully. If there is available any used cartridge mount it and start the machine for at least 15 minutes, driving all controls. To do so, spend the least possible amount of oil, since it will have to be replaced after this operation, although it could be reused again, after being filtrated in a filter no bigger than 5 microns, as it still keeps additives).

Replace or clean all filters, mount the new cartridge and fill the tank to the level with new oil. Follow all start-up indications in this manual.

RECOMMENDATIONS FOR PUMP AND CARTRIDGE REPAIRS

CARTRIDGE REPAIRS
MINIMAL CLEARANCE BETWEEN CAM RING AND ROTOR

MODEL	Inches	Millimetres
20VE	0.0007	0,018
20VA	0.0007	0,018
25V	0.0012	0,030
30V	0.0014	0,035
35V	0.0015	0,038
45V	0.0016	0,040
BHP1	0.0001	0,004
BHP2	0.0001	0,004
BHP3E	0.0005	0,015
BHP3A	0.0007	0,018
BHP4	0.0012	0,030
BHP6	0.0015	0,038
BHP7	0.0016	0,040
DT6C	0.0011	0,030
DT6D	0.0014	0,038
DT6E	0.0017	0,044

*Vane length must be from 0,005 to 0,010mm.
(0,0002 to 0,0004 inches) less than rotor thickness.

To rebuild cartridges it is necessary to use grinding & lapping machines, as well as measurement tools able to work in microns.





Hydraulic Equipment

Check out our CETOP valves
and manifolds catalog



Bezares USA

27634 Commerce Oaks Drive, Oak Ridge North, Texas 77385, USA
+1 888 663 1786 • pto@bezares.com

Bezares France

106, Avenue des roses, Zac de la Butte Gayen 94440 Santeny, France • +33 014 510 1540
bezaresfrance@bezares.com

Bezares UK

Wharf Works, Main Building, Three Bridges Rd, Long Buckby, Northampton NN6 7PP, UK
+44 1327 317557 • help@bezares.com

Bezares Mexico

4^a Avenida nº 980 Colonia. Zimix Santa Catarina, N.L. Mexico, 66358 Monterrey
+52 81 1287 0090 • info@bezaresmexico.com

Bezares China

No. 8. Hongfu East Road, Yaozhuang Town Zhejiang Province, China
+86 573 8911 0479 • china@bezares.com

Alphadrives India

449/1B, PN Palayam Road, Kanuvai, Coimbatore • 641108 • +91 75388 74333
+91 99945 88849 • ptos@alphadrives.co.in

BEZARES HEADQUARTERS

Av. de las Retamas, 145
45950 Casarrubios del Monte
Toledo, Spain
+34 91 818 82 97
bezares@bezares.com
Calle Joaquín Costa, 10
50001 Zaragoza
Spain
+34 97 623 30 62
sales@tdz.com



* at headquarters and main manufacturing plant in Casarrubios del Monte

993200/27/11/23